

# OWNER'S MANUAL 2017



FE 250

Art. no. 3402099en



# DEAR HUSQVARNA MOTORCYCLES CUSTOMER

Congratulations on your decision to purchase a Husqvarna motorcycle. You are now the owner of a state-of-the-art sports motorcycle that will give you enormous pleasure if you service and maintain it properly.

We hope you enjoy your new vehicle!

Please enter the serial number of your vehicle below.

Chassis number (📖 p. 12)	Stamp of dealer
Engine number (📖 p. 12)	
Key number (📖 p. 12)	

The Owner's Manual contained the latest information for this model series at the time of going to print. Slight deviations resulting from continuing development and design of the motorcycles can, however, not be completely excluded.

All specifications are non-binding. Husqvarna Motorcycles GmbH specifically reserves the right to modify or delete technical specifications, prices, colors, forms, materials, services, designs, equipment, etc., without prior notice and without specifying reasons, to adapt these to local conditions, as well as to stop production of a particular model without prior notice. Husqvarna Motorcycles accepts no liability for delivery options, deviations from illustrations and descriptions, as well as misprints and other errors. The models portrayed partly contain special equipment that does not belong to the regular scope of supply.

© 2016 Husqvarna Motorcycles GmbH, Mattighofen Austria

All rights reserved

Reproduction, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.



ISO 9001(12 100 6061)

Husqvarna Motorcycles applies quality assurance processes that lead to the highest possible product quality as defined in the ISO 9001 international quality management standard.

Issued by: TÜV Management Service

REG.NO. 12 100 6061

Husqvarna Motorcycles GmbH  
5230 Mattighofen, Austria

This document is valid for the following models:

FE 250 EU (F2103Q4)

FE 250 AU (F2160Q4)



# TABLE OF CONTENTS

1	MEANS OF REPRESENTATION.....	5	7.7	Setting the service display.....	23
1.1	Symbols used.....	5	7.8	Speed, time, and DST distance 1.....	24
1.2	Formats used.....	5	7.9	Speed, time, and DST2 distance 2.....	24
2	SAFETY ADVICE.....	6	7.10	AVG average speed, ART operating hours, and ODO total distance covered.....	24
2.1	Use definition – intended use.....	6	8	PREPARING FOR USE.....	25
2.2	Safety advice.....	6	8.1	Advice on first use.....	25
2.3	Degrees of risk and symbols.....	6	8.2	Running-in the engine.....	26
2.4	Tampering warning.....	6	8.3	Starting power of lithium-ion batteries at low temperatures.....	26
2.5	Safe operation.....	7	8.4	Preparing the vehicle for difficult riding conditions.....	26
2.6	Protective clothing.....	7	8.5	Preparing for rides on dry sand.....	27
2.7	Work rules.....	7	8.6	Preparing for rides on wet sand.....	27
2.8	Environment.....	7	8.7	Preparing for rides on wet and muddy surfaces.....	28
2.9	Owner's Manual.....	8	8.8	Preparing for rides at high temperature and slow speed.....	28
3	IMPORTANT NOTES.....	9	8.9	Preparing for rides at low temperature or in snow.....	28
3.1	Manufacturer and implied warranty.....	9	9	RIDING INSTRUCTIONS.....	29
3.2	Operating and auxiliary substances.....	9	9.1	Checks and maintenance measures when preparing for use.....	29
3.3	Spare parts, accessories.....	9	9.2	Starting.....	29
3.4	Service.....	9	9.3	Activating Launch Control.....	30
3.5	Figures.....	9	9.4	Activating traction control.....	30
3.6	Customer service.....	9	9.5	Starting off.....	31
4	VIEW OF VEHICLE.....	10	9.6	Shifting, riding.....	31
4.1	View of vehicle, front left (example).....	10	9.7	Braking.....	31
4.2	View of vehicle, rear right (example).....	11	9.8	Stopping, parking.....	32
5	SERIAL NUMBERS.....	12	9.9	Transport.....	32
5.1	Chassis number.....	12	9.10	Refueling.....	33
5.2	Type label.....	12	10	SERVICE SCHEDULE.....	34
5.3	Key number.....	12	10.1	Additional information.....	34
5.4	Engine number.....	12	10.2	Required work.....	34
5.5	Fork part number.....	12	10.3	Recommended work.....	35
5.6	Shock absorber article number.....	13	11	TUNING THE CHASSIS.....	36
6	CONTROLS.....	14	11.1	Checking the basic chassis setting with the rider's weight.....	36
6.1	Clutch lever.....	14	11.2	Compression damping of the shock absorber ...	36
6.2	Hand brake lever.....	14	11.3	Adjusting the low-speed compression damping of the shock absorber.....	36
6.3	Throttle grip.....	14	11.4	Adjusting the high-speed compression damping of the shock absorber.....	37
6.4	Kill switch.....	14	11.5	Adjusting the rebound damping of the shock absorber.....	37
6.5	Horn button.....	14	11.6	Measuring the rear wheel dimension unloaded.....	38
6.6	Light switch.....	15	11.7	Checking the static sag of the shock absorber.....	38
6.7	Turn signal switch.....	15	11.8	Checking the riding sag of the shock absorber.....	39
6.8	Emergency OFF switch.....	15	11.9	Adjusting the spring preload of the shock absorber.....	39
6.9	Electric starter button.....	15	11.10	Adjusting the riding sag.....	40
6.10	Combination switch.....	16	11.11	Checking the basic setting of the fork.....	40
6.11	Indicator lamps overview.....	16	11.12	Adjusting the compression damping of the fork.....	40
6.12	Opening the filler cap.....	16	11.13	Adjusting the rebound damping of the fork.....	41
6.13	Closing the filler cap.....	17	11.14	Adjusting the spring preload of the fork.....	41
6.14	Cold start button.....	17	11.15	Handlebar position.....	42
6.15	Idle speed adjusting screw.....	18	11.16	Adjusting the handlebar position.....	42
6.16	Shift lever.....	18			
6.17	Foot brake lever.....	18			
6.18	Side stand.....	19			
6.19	Steering lock.....	19			
6.20	Locking the steering.....	19			
6.21	Unlocking the steering.....	20			
7	SPEEDOMETER.....	21			
7.1	Speedometer overview.....	21			
7.2	Activation.....	21			
7.3	Message on the speedometer.....	21			
7.4	Setting the speedometer.....	21			
7.5	Setting the kilometers or miles.....	22			
7.6	Setting the clock.....	23			

12	SERVICE WORK ON THE CHASSIS .....	44	13.8	Checking the free travel of foot brake lever.....	74
12.1	Raising the motorcycle with a lift stand.....	44	13.9	Adjusting the basic position of the foot brake lever 🛠️.....	74
12.2	Removing the motorcycle from the lift stand.....	44	13.10	Checking the rear brake fluid level .....	75
12.3	Bleeding the fork legs .....	44	13.11	Adding rear brake fluid 🛠️.....	75
12.4	Cleaning the dust boots of the fork legs.....	44	13.12	Checking the rear brake linings .....	76
12.5	Removing the fork protector.....	45	13.13	Changing the rear brake linings 🛠️.....	77
12.6	Installing the fork protector.....	45	14	WHEELS, TIRES.....	79
12.7	Removing the fork legs 🛠️.....	45	14.1	Removing the front wheel 🛠️.....	79
12.8	Installing the fork legs 🛠️.....	46	14.2	Installing the front wheel 🛠️.....	79
12.9	Removing the lower triple clamp 🛠️.....	46	14.3	Removing the rear wheel 🛠️.....	80
12.10	Installing the lower triple clamp 🛠️.....	47	14.4	Installing the rear wheel 🛠️.....	81
12.11	Checking the play of the steering head bearing.....	49	14.5	Checking the tire condition.....	82
12.12	Adjusting the steering head bearing play 🛠️ .....	50	14.6	Checking the tire air pressure.....	82
12.13	Lubricating the steering head bearing 🛠️.....	50	14.7	Checking spoke tension .....	83
12.14	Removing the front fender .....	50	15	ELECTRICAL SYSTEM.....	84
12.15	Installing the front fender .....	51	15.1	Removing the battery 🛠️.....	84
12.16	Removing the shock absorber 🛠️.....	51	15.2	Installing the battery 🛠️.....	84
12.17	Installing the shock absorber 🛠️.....	52	15.3	Recharging the battery 🛠️ .....	85
12.18	Removing the seat .....	54	15.4	Changing the main fuse.....	86
12.19	Mounting the seat .....	54	15.5	Changing the fuses of individual power consumers .....	87
12.20	Removing the air filter box cover .....	55	15.6	Removing the headlight mask with the headlight .....	88
12.21	Installing the air filter box cover .....	55	15.7	Installing the headlight mask with the headlight .....	89
12.22	Removing the air filter 🛠️.....	55	15.8	Changing the headlight bulb.....	89
12.23	Installing the air filter 🛠️.....	56	15.9	Changing the turn signal bulb.....	90
12.24	Cleaning the air filter and air filter box 🛠️.....	56	15.10	Checking the headlight setting .....	90
12.25	Sealing the air filter box 🛠️.....	57	15.11	Adjusting the headlight range .....	91
12.26	Removing the right side cover .....	57	15.12	Changing the speedometer battery .....	91
12.27	Installing the right side cover .....	57	15.13	Diagnostics connector .....	92
12.28	Removing the main silencer.....	58	16	COOLING SYSTEM.....	93
12.29	Installing the main silencer.....	58	16.1	Cooling system .....	93
12.30	Changing the glass fiber yarn filling in the main silencer 🛠️.....	58	16.2	Checking the antifreeze and coolant level.....	93
12.31	Removing the fuel tank 🛠️.....	59	16.3	Checking the coolant level.....	94
12.32	Installing the fuel tank 🛠️.....	60	16.4	Draining the coolant 🛠️.....	94
12.33	Checking for chain dirt accumulation .....	61	16.5	Refilling coolant 🛠️.....	95
12.34	Cleaning the chain .....	62	17	TUNING THE ENGINE.....	96
12.35	Checking the chain tension .....	62	17.1	Checking the play in the throttle cable .....	96
12.36	Adjusting the chain tension.....	63	17.2	Adjusting the play in the throttle cable 🛠️ .....	96
12.37	Checking the chain, rear sprocket, engine sprocket, and chain guide .....	64	17.3	Setting the characteristic map of the throttle response 🛠️.....	97
12.38	Checking the frame 🛠️.....	65	17.4	Changing the mapping .....	98
12.39	Checking the swingarm 🛠️.....	66	17.5	Adjusting the idle speed 🛠️ .....	98
12.40	Checking throttle cable routing .....	66	17.6	Teaching the throttle valve position.....	99
12.41	Checking the rubber grip .....	66	17.7	Checking the basic position of the shift lever....	99
12.42	Adjusting the basic position of the clutch lever .....	67	17.8	Adjusting the basic position of the shift lever 🛠️.....	100
12.43	Checking/correcting the fluid level of the hydraulic clutch.....	67	18	SERVICE WORK ON THE ENGINE .....	101
12.44	Changing the hydraulic clutch fluid 🛠️ .....	68	18.1	Changing the fuel screen 🛠️.....	101
12.45	Removing the engine guard.....	69	18.2	Checking the engine oil level .....	101
12.46	Installing the engine guard.....	69	18.3	Changing the engine oil and oil filter, cleaning the oil screen 🛠️.....	102
13	BRAKE SYSTEM .....	70	18.4	Adding engine oil .....	104
13.1	Checking free travel of hand brake lever .....	70	19	CLEANING, CARE .....	105
13.2	Adjusting free travel of hand brake lever .....	70	19.1	Cleaning the motorcycle.....	105
13.3	Checking the brake discs .....	70	19.2	Checks and maintenance steps for winter operation.....	106
13.4	Checking the front brake fluid level .....	71			
13.5	Adding front brake fluid 🛠️.....	71			
13.6	Checking the front brake linings.....	72			
13.7	Changing the front brake linings 🛠️.....	72			







# TABLE OF CONTENTS

20	STORAGE.....	107
	20.1 Storage .....	107
	20.2 Preparing for use after storage .....	107
21	TROUBLESHOOTING .....	108
22	TECHNICAL DATA .....	110
	22.1 Engine .....	110
	22.2 Engine tightening torques.....	110
	22.3 Capacities .....	112
	22.3.1 Engine oil.....	112
	22.3.2 Coolant.....	112
	22.3.3 Fuel.....	112
	22.4 Chassis .....	112
	22.5 Electrical system.....	113
	22.6 Tires .....	113
	22.7 Fork.....	113
	22.8 Shock absorber .....	114
	22.9 Chassis tightening torques .....	114
23	SUBSTANCES.....	116
24	AUXILIARY SUBSTANCES.....	117
25	STANDARDS .....	118
26	INDEX OF SPECIAL TERMS .....	119
27	LIST OF ABBREVIATIONS .....	120
28	LIST OF SYMBOLS .....	121
	28.1 Yellow and orange symbols.....	121
	28.2 Green and blue symbols.....	121
	INDEX.....	122

## 1.1 Symbols used

The meaning of specific symbols is described below.

---

	Indicates an expected reaction (e.g. of a work step or a function).
	Indicates an unexpected reaction (e.g. of a work step or a function).
	All work marked with this symbol requires specialist knowledge and technical understanding. In the interests of your own safety, have these jobs performed by an authorized Husqvarna Motorcycles workshop. There, your motorcycle will be optimally cared for by specially trained experts using the specialist tools required.
	Indicates a page reference (more information is provided on the specified page).
	Indicates information with more details or tips.
	Indicates the result of a testing step.

---

## 1.2 Formats used

The typographical formats used in this document are explained below.

---

<b>Proprietary name</b>	Indicates a proprietary name.
<b>Name<sup>®</sup></b>	Indicates a protected name.
<b>Brand<sup>™</sup></b>	Indicates a brand available on the open market.
<b><u>Underlined terms</u></b>	Refer to technical details of the vehicle or indicate technical terms, which are explained in the glossary.

---

## 2.1 Use definition – intended use

Husqvarna motorcycles are designed and built to withstand the normal stresses and strains of competitive use. The motorcycles comply with currently valid regulations and categories of the top international motorsport organizations.

- i Info**
- Only trained personnel are allowed to drive the vehicle. The motorcycle is authorized for public road traffic in the homologated (reduced) version only.
  - The derestricted version of the vehicle must only be operated in closed off areas away from public highway traffic.
  - This motorcycle is designed for use in offroad endurance competition and not primarily for use in motocross.

## 2.2 Safety advice

A number of safety instructions need to be followed to operate the vehicle safely. Therefore, read this manual carefully. The safety instructions are highlighted in the text and are referred to at the relevant passages.

- i Info**
- The vehicle has various information and warning labels at prominent locations. Do not remove information/warning labels. If they are missing, you or others may not recognize dangers and may therefore be injured.

## 2.3 Degrees of risk and symbols

- ⚠ Danger**
- Indicates a danger that will immediately and invariably lead to fatal or serious permanent injury if the appropriate measures are not taken.

- ⚠ Warning**
- Indicates a danger that is likely to lead to fatal or serious injury if the appropriate measures are not taken.

- ⚠ Caution**
- Indicates a danger that may lead to minor injuries if the appropriate measures are not taken.

### Note

Indicates a danger that will lead to considerable machine and material damage if the appropriate measures are not taken.

- ☀ Warning**
- Indicates a danger that will lead to environmental damage if the appropriate measures are not taken.

## 2.4 Tampering warning

Tampering with the noise control system is prohibited. Federal law prohibits the following acts or the causing thereof:




- 1 The removal or rendering inoperative by any person other than for purposes of maintenance, repair, or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use, or
- 2 the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

Among those acts presumed to constitute tampering are the acts listed below:

- 1 Removal or puncturing of the main silencer, baffles, header pipes or any other components which conduct exhaust gases.
- 2 Removal or puncturing of parts of the intake system.
- 3 Lack of proper maintenance.
- 4 Replacing moving part of the vehicle, or parts of the exhaust or intake system, with parts other than those specified by the manufacturer.



## 2.5 Safe operation

-  **Danger**  
**Danger of accidents** A rider who is not fit to ride poses a danger to him or herself and others.
- Do not operate the vehicle if you are not fit to ride due to alcohol, drugs or medication.
  - Do not operate the vehicle if you are physically or mentally impaired.
-  **Danger**  
**Danger of poisoning** Exhaust gases are toxic and inhaling them may result in unconsciousness and death.
- Always make sure there is sufficient ventilation when running the engine.
  - Use an effective exhaust extraction system when starting or running the engine in an enclosed space.
-  **Warning**  
**Danger of burns** Some vehicle components become very hot when the vehicle is operated.
- Do not touch any parts such as the exhaust system, radiator, engine, shock absorber, or brake system before the vehicle parts have cooled down.
  - Let the vehicle parts cool down before you perform any work on the vehicle.


Only operate the vehicle when it is in perfect technical condition, in accordance with its intended use, and in a safe and environmentally compatible manner.

An appropriate driver's license is needed to ride the vehicle on public roads.

Have malfunctions that impair safety promptly eliminated by an authorized Husqvarna Motorcycles workshop.

Adhere to the information and warning labels on the vehicle.

## 2.6 Protective clothing

-  **Warning**  
**Risk of injury** Missing or poor protective clothing presents an increased safety risk.
- Wear appropriate protective clothing such as helmet, boots, gloves as well as trousers and a jacket with protectors on all rides.
  - Always wear protective clothing that is in good condition and meets the legal regulations.

In the interest of your own safety, Husqvarna Motorcycles recommends that you only operate the vehicle while wearing protective clothing.

## 2.7 Work rules

Special tools are necessary for certain tasks. The tools are not contained in the vehicle but can be ordered under the number in parentheses. E.g.: bearing puller (15112017000)

During assembly, non-reusable parts (e.g. self-locking screws and nuts, seals and seal rings, O-rings, pins, lock washers) must be replaced by new parts.

In some instances, a thread locker (e.g. **Loctite**<sup>®</sup>) is required. The manufacturer instructions for use must be followed.

After disassembly, clean the parts that are to be reused and check them for damage and wear. Change damaged or worn parts.

After you complete the repair or service work, check the operating safety of the vehicle.

## 2.8 Environment

If you use your motorcycle responsibly, you can ensure that problems and conflicts do not occur. To protect the future of the motorcycle sport, make sure that you use your motorcycle legally, display environmental consciousness, and respect the rights of others.

When disposing of used oil, other operating and auxiliary fluids, and used components, comply with the laws and regulations of the respective country.

Because motorcycles are not subject to the EU regulations governing the disposal of used vehicles, there are no legal regulations that pertain to the disposal of an end-of-life motorcycle. Your authorized Husqvarna Motorcycles dealer will be glad to advise you.

### 2.9 Owner's Manual

It is important that you read this Owner's Manual carefully and completely before making your first trip. The Owner's Manual contains useful information and many tips on how to operate, handle, and maintain your motorcycle. Only then will you find out how to customize the vehicle ideally for your own use and how you can protect yourself from injury.

Keep the Owner's Manual in an accessible place to enable you to refer to it as needed.

If you would like to know more about the vehicle or have questions on the material you read, please contact an authorized Husqvarna Motorcycles dealer.

The Owner's Manual is an important component of the vehicle and must be handed over to the new owner if the vehicle is sold.

## 3.1 Manufacturer and implied warranty

The work prescribed in the service schedule must be carried out by an authorized Husqvarna Motorcycles workshop only and confirmed both in the customer's Service & Warranty Booklet and in the **Husqvarna Motorcycles Dealer.net**; otherwise, all warranty claims will be void. Damage or secondary damage caused by tampering with and/or conversions on the vehicle are not covered by the warranty.

Additional information on the manufacturer or implied warranty and the procedures involved can be found in the service booklet.

## 3.2 Operating and auxiliary substances



### Warning

**Environmental hazard** Improper handling of fuel is a danger to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.

Use operating and auxiliary substances (such as fuel and lubricants) as specified in the Owner's Manual.

## 3.3 Spare parts, accessories

For your own safety, only use spare parts and accessory products that are approved and/or recommended by Husqvarna Motorcycles and have them installed by an authorized Husqvarna Motorcycles workshop. Husqvarna Motorcycles accepts no liability for other products and any resulting damage or loss.

Certain spare parts and accessory products are specified in parentheses in the descriptions. Your Husqvarna Motorcycles dealer will be glad to advise you.

The current **Husqvarna Motorcycles** accessories for your vehicle can be found on the Husqvarna Motorcycles website.

International Husqvarna Motorcycles website: [www.husqvarna-motorcycles.com](http://www.husqvarna-motorcycles.com)

## 3.4 Service

A prerequisite for perfect operation and prevention of premature wear is that the service, care, and tuning work on the engine and chassis is properly carried out as described in the Owner's Manual. Incorrect adjustment and tuning of the engine and chassis can lead to damage and breakage of components.

Use of the vehicle under difficult conditions, such as on sand or on wet and muddy surfaces, can lead to considerably more rapid wear of components such as the drive train, brake system, or suspension components. For this reason, it may be necessary to inspect or replace parts before the next scheduled service.

It is imperative that you adhere to the stipulated run-in times and service intervals. If you observe these exactly, you will ensure a much longer service life for your motorcycle.

## 3.5 Figures

The figures contained in the manual may depict special equipment.

In the interest of clarity, some components may be shown disassembled or may not be shown at all. It is not always necessary to disassemble the component to perform the activity in question. Please follow the instructions in the text.

## 3.6 Customer service

Your authorized Husqvarna Motorcycles dealer will be happy to answer any questions you may have regarding your vehicle and Husqvarna Motorcycles.

A list of authorized Husqvarna Motorcycles dealers can be found on the Husqvarna Motorcycles website.

International Husqvarna Motorcycles website: [www.husqvarna-motorcycles.com](http://www.husqvarna-motorcycles.com)

## 4.1 View of vehicle, front left (example)



- |   |                            |
|---|----------------------------|
| 1 | Hand brake lever (📖 p. 14) |
| 2 | Clutch lever (📖 p. 14)     |
| 3 | Filler cap                 |
| 4 | Air filter box cover       |
| 5 | Side stand (📖 p. 19)       |
| 6 | Engine number (📖 p. 12)    |
| 7 | Shift lever (📖 p. 18)      |


## 4.2 View of vehicle, rear right (example)



H01683-10


1	Fork compression adjustment
2	Kill switch (📖 p. 14)
2	Horn button (📖 p. 14)
2	Light switch (📖 p. 15)
2	Turn signal switch (📖 p. 15)
3	Emergency OFF switch (📖 p. 15)
4	Electric starter button (📖 p. 15)
5	Throttle grip (📖 p. 14)
6	Fork rebound adjustment
7	Foot brake lever (📖 p. 18)
8	Level viewer, engine oil
9	Shock absorber compression adjustment
10	Shock absorber rebound adjustment
11	Level viewer for brake fluid, rear

## 5.1 Chassis number

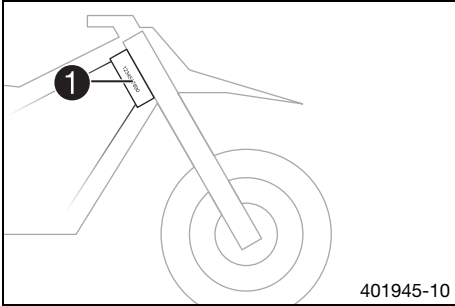


The chassis number ① is stamped on the steering head on the right.

## 5.2 Type label

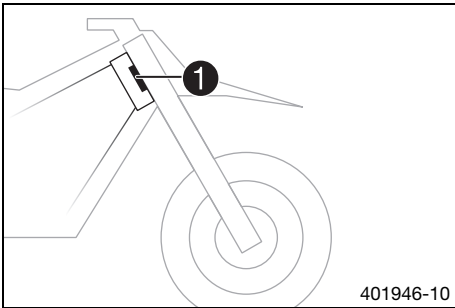


Type label ① is fixed to the front of the steering head.

## 5.3 Key number

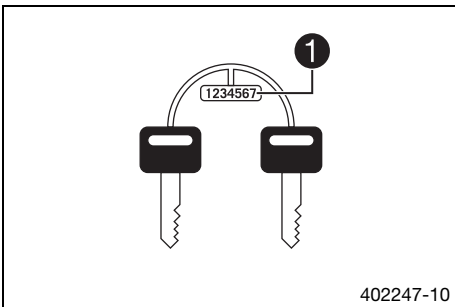


Key number ① for the steering lock is stamped onto the key connector.

## 5.4 Engine number

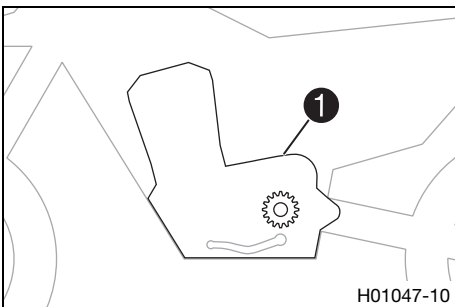


Engine number ① is embossed on the left side of the engine over the engine sprocket.

## 5.5 Fork part number

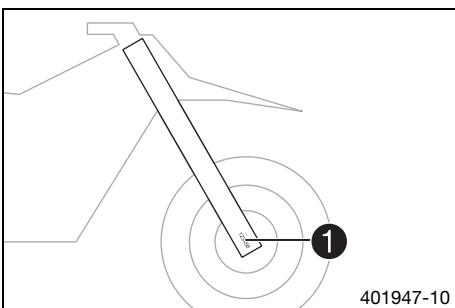


The fork part number ① is stamped on the inner side of the fork stub.

## 5.6 Shock absorber article number

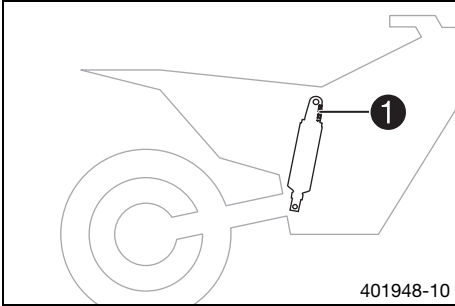


Shock absorber article number ❶ is stamped on the top of the shock absorber above the adjusting ring towards the engine side.

## 6.1 Clutch lever

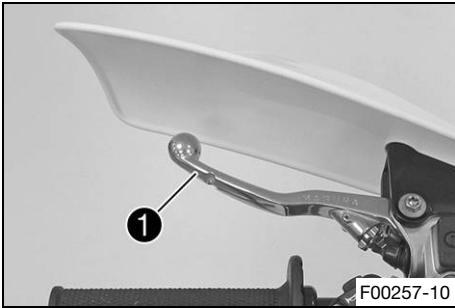


The clutch lever ❶ is fitted on the left side of the handlebar. The clutch is hydraulically operated and self-adjusting.

## 6.2 Hand brake lever

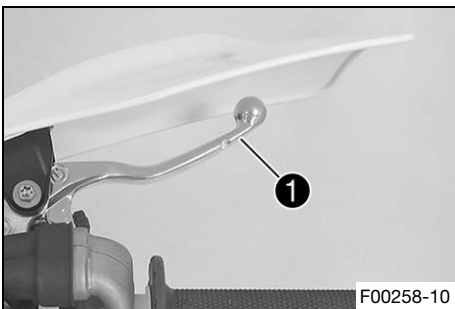


The hand brake lever ❶ is fitted on the right side of the handlebar. The hand brake lever is used to activate the front brake.

## 6.3 Throttle grip

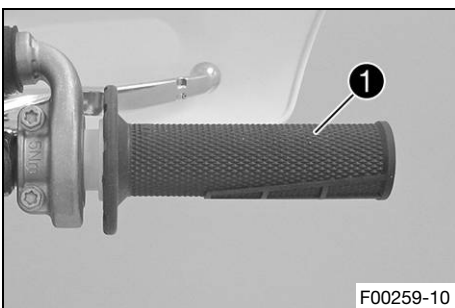

The throttle grip ❶ is fitted on the right side of the handlebar.

## 6.4 Kill switch

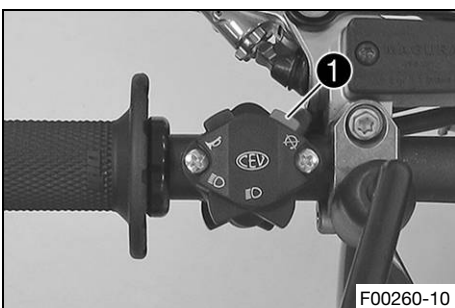


Kill switch ❶ is fitted on the left side of the handlebar.

### Possible states

- Kill switch ☒ in basic position – the ignition circuit is closed in this position and the engine can be started.
- Kill switch ☒ pressed – the ignition circuit is open in this position, the engine goes out if it was running, or does not start if it was off.

## 6.5 Horn button

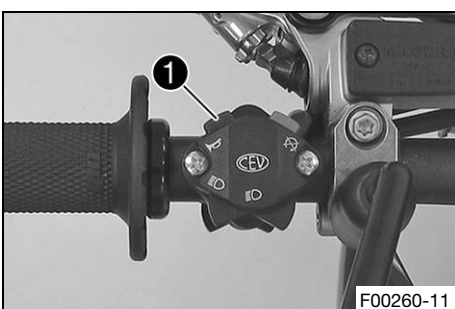


The horn button ❶ is fitted on the left side of the handlebar.

### Possible states

- Horn button ☒ in neutral position
- Horn button ☒ pressed – the horn is actuated in this position.



## 6.6 Light switch

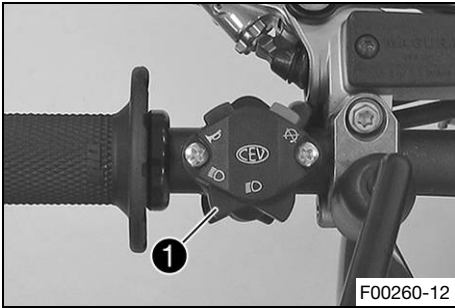


Light switch ❶ is fitted on the left side of the handlebar.

### Possible states

	Low beam on – Light switch is in the central position. In this position, the low beam and tail light are switched on.
	High beam on – Light switch is turned to the left. In this position, the high beam and the tail light are switched on.

## 6.7 Turn signal switch

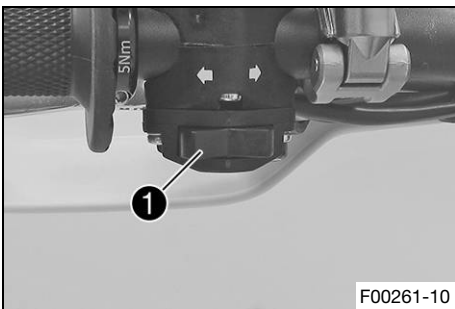


Turn signal switch ❶ is fitted on the left side of the handlebar.

### Possible states

	Turn signal off – The turn signal switch is in the central position.
	Left turn signal, on – The turn signal switch is turned to the left.
	Right turn signal, on – The turn signal switch is turned to the right.

## 6.8 Emergency OFF switch

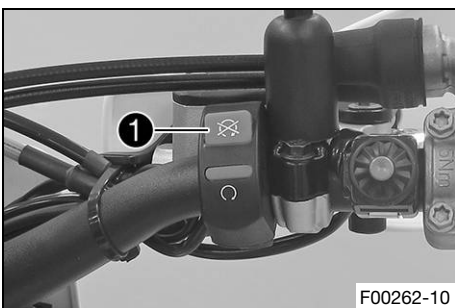


The emergency OFF switch ❶ is fitted on the right side of the handlebar.

### Possible states

	Ignition off – In this position, the ignition circuit is interrupted, a running engine stops, and a non-running engine will not start.
	Ignition on – In this position, the ignition circuit is closed and the engine can be started.

## 6.9 Electric starter button

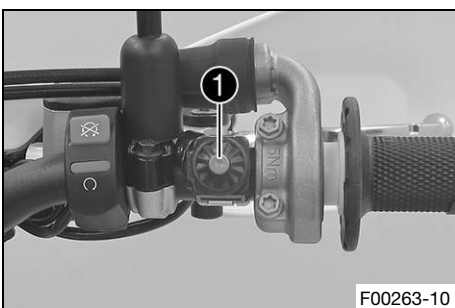


The electric starter button ❶ is fitted on the right side of the handlebar.

### Possible states

- Electric starter button ❶ in basic position
- Electric starter button ❶ is pressed – In this position, the electric starter is actuated.

## 6.10 Combination switch

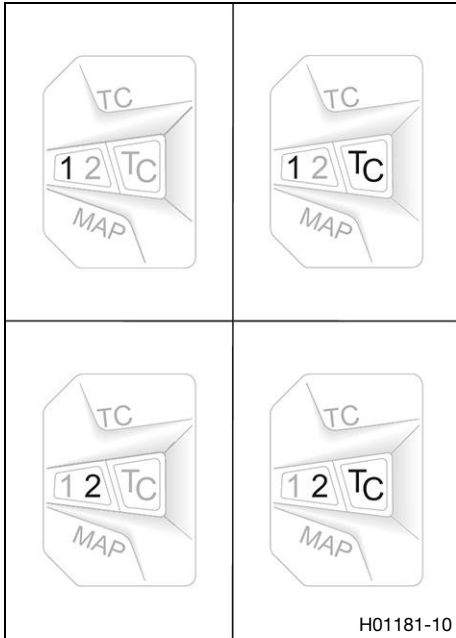

The combination switch is fitted on the left side of the handlebar.

### Possible states

<b>1</b>	STANDARD – STANDARD mapping is activated when LED <b>1</b> lights up.
<b>1TC</b>	STANDARD with TC – STANDARD mapping with traction control is activated when LED <b>1</b> and <b>TC</b> light up.
<b>2</b>	ADVANCED – ADVANCED mapping is activated, when LED <b>2</b> lights up.
<b>2TC</b>	ADVANCED with TC – ADVANCED mapping with traction control is activated when LED <b>2</b> and <b>TC</b> light up.



### Warning


**Voiding of the government approval for road use and the insurance coverage** If the combination switch is installed, the vehicle's approval for road use is invalidated.

- Only operate the vehicle in closed-off areas remote from public road traffic if the combination switch is installed.

The engine characteristic can be changed using button **MAP** on the combination switch.

The **Launch Control** and the traction control can also be activated via the combination switch.

## 6.11 Indicator lamps overview

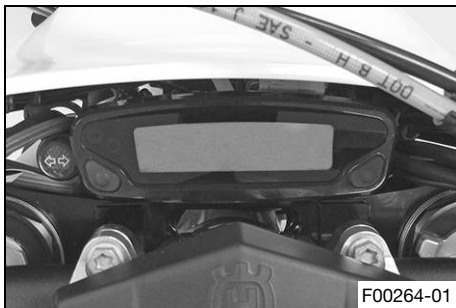

### Possible states

	The high beam indicator lamp lights up blue – The high beam is switched on.
	Malfunction indicator lamp lights up/flashes yellow – The <u>OBD</u> has detected an emission- or safety-critical fault.
	The fuel level warning lamp lights up yellow – The fuel level has reached the reserve mark.
	Turn signal indicator lamp flashes green – The turn signal is switched on.

## 6.12 Opening the filler cap



### Danger

**Fire hazard** Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not refuel the vehicle in the vicinity of open flames or lit cigarettes.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it off immediately.
- Observe the specifications for refueling.



### Warning

**Danger of poisoning** Fuel is poisonous and a health hazard.


- Avoid skin, eye and clothing contact with fuel.
- Immediately consult a doctor if you swallow fuel.
- Do not inhale fuel vapors.
- In case of skin contact, rinse the affected area with plenty of water.
- Rinse the eyes thoroughly with water, and consult a doctor in case of fuel contact with the eyes.
- Change your clothing in case of fuel spills on them.
- Keep fuels correctly in a suitable canister, and out of the reach of children.



**Warning**


**Environmental hazard** Improper handling of fuel is a danger to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.

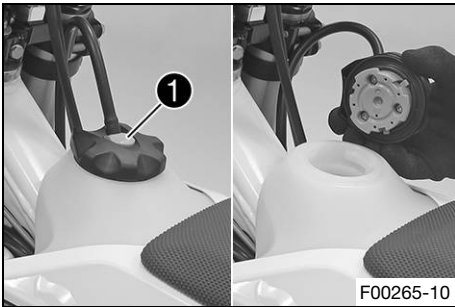

- Press release button **1**, turn the filler cap counterclockwise, and lift it off.

## 6.13 Closing the filler cap

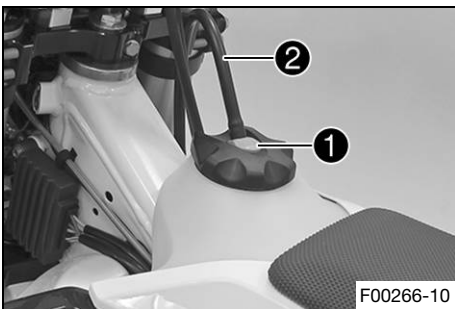


- Fit the filler cap and turn clockwise until release button **1** locks in place.

**i Info**

Route fuel tank breather hose **2** without kinks.

## 6.14 Cold start button

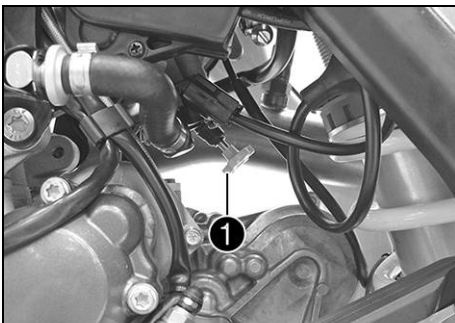

The cold start button **1** is fitted on the bottom of the throttle valve body.

The injection system extends the injection time if the engine is cold and the outside temperature is low. To help the engine burn the increased amount of fuel, it must be supplied with additional oxygen by pushing the cold start button.


After briefly opening up the throttle and then releasing the throttle grip again, or turning the throttle grip towards the front, the cold start button returns to its original position.

**i Info**


Check whether the cold start button has returned to its basic position.

**Possible states**

- The cold start button is activated – The cold start button is pushed in all the way.
- The cold start button is deactivated – The cold start button is in its basic position.

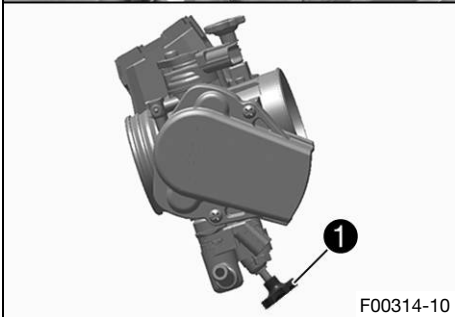


## 6.15 Idle speed adjusting screw

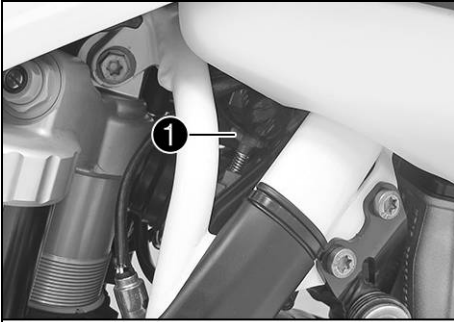


The idle setting of the throttle valve body has a big influence on the vehicle's starting behavior, on stable idling, and on vehicle response when the throttle is opened. An engine with a correctly set idle speed is easier to start than an engine with the idle speed set incorrectly.


The idle speed is adjusted using the idle speed adjusting screw **1**. Increase the idle speed by turning the idle speed adjusting screw clockwise. Decrease the idle speed by turning the idle speed adjusting screw counterclockwise.

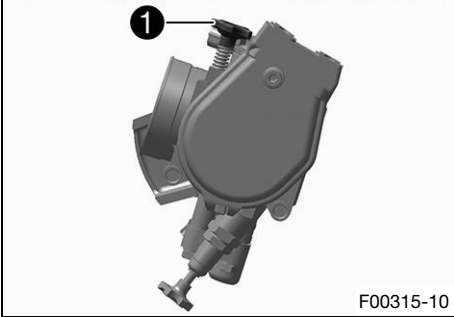

## 6.16 Shift lever

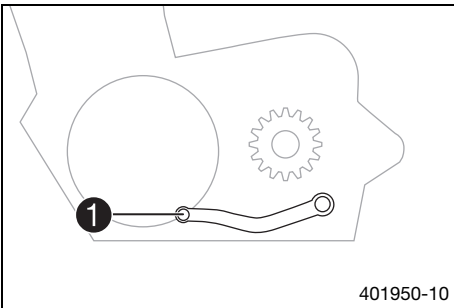


The shift lever **1** is fitted on the left side of the engine.

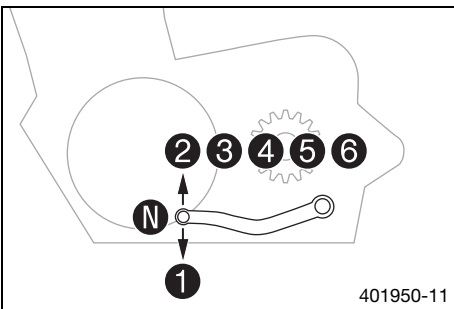


The gear positions can be seen in the photograph. The neutral or idle position is between the first and second gears.

## 6.17 Foot brake lever

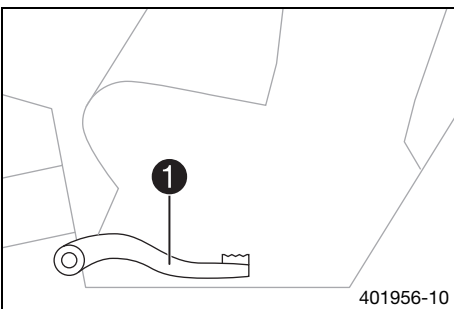


The foot brake lever **1** is attached in front of the right footrest. The foot brake lever is used to activate the rear brake.

## 6.18 Side stand

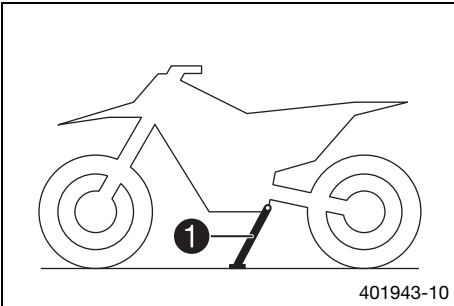


The side stand **1** is attached to the left side of the vehicle.

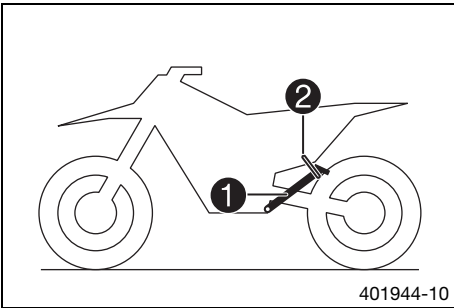

The side stand is used for parking the motorcycle.

**i Info**  
When you are riding, side stand **1** must be folded up and secured with rubber band **2**.

## 6.19 Steering lock

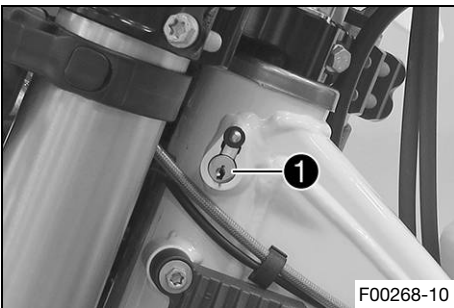

Steering lock **1** is fitted on the left side of the steering head. The steering lock is used to lock the steering. Steering, and therefore riding, is no longer possible.

## 6.20 Locking the steering

### Note

**Danger of damage** The parked vehicle can roll away or fall over.

- Park the vehicle on a firm and level surface.




- Park the vehicle.
- Turn the handlebar as far as possible to the right.
- Grease the steering lock regularly.

Universal oil spray (🔧 p. 117)

- Insert the key in the steering lock (🔑 p. 19), turn it to the left, press it in, and turn it to the right. Remove the key.
- ✓ Steering is no longer possible.

**i Info**  
Never leave the key in the steering lock.

## 6.21 Unlocking the steering

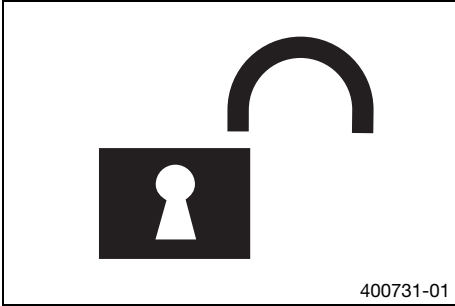

- Insert the key in the steering lock (🔑 p. 19), turn it to the left, pull it out, and turn it to the right. Remove the key.


✓ You can now steer the bike again.

---

**i** **Info**  
Never leave the key in the steering lock.

---


## 7.1 Speedometer overview

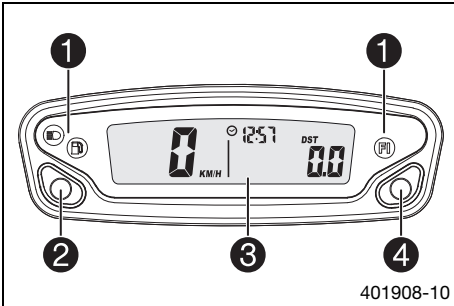

- |   |                                     |
|---|-------------------------------------|
| 1 | Indicator lamps overview (🗨️ p. 16) |
| 2 | Left button                         |
| 3 | Display                             |
| 4 | Right button                        |

401908-10

## 7.2 Activation

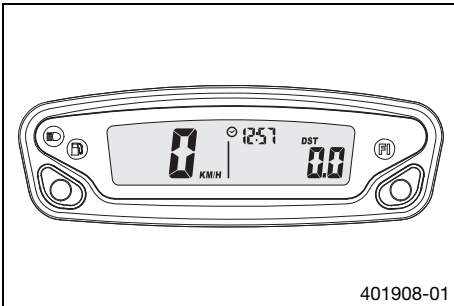


401908-01

### Activating the speedometer

The speedometer is activated when one of the buttons is pressed or an impulse comes from the wheel speed sensor.

## 7.3 Message on the speedometer

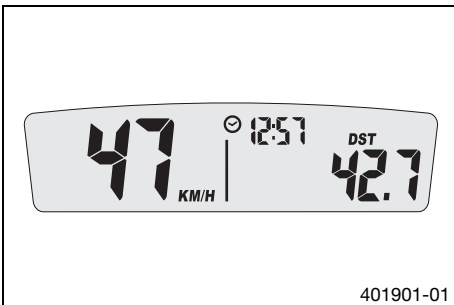


401901-01

### Possible states

	Battery voltage of the speedometer – Battery voltage of the speedometer is too low. Change the battery.
	Service – A service is due. Contact an authorized Husqvarna Motorcycles workshop.

## 7.4 Setting the speedometer

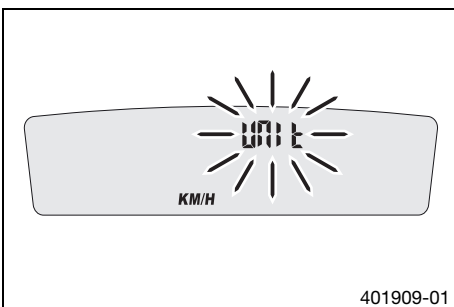


401909-01


### Condition

The motorcycle is stationary.

- Press both buttons for 3–5 seconds.
  - ✓ The Setup menu is displayed. The **UNIT** display flashes.
- Press one of the buttons to select **UNIT** for the speed in kilometers **KM/H** or miles **M/H**.
- Wait for 5 seconds.
  - ✓ The speedometer changes to the next menu item. The ☉ symbol flashes.
- Press one of the buttons to select the 24h or 12h display of the clock.

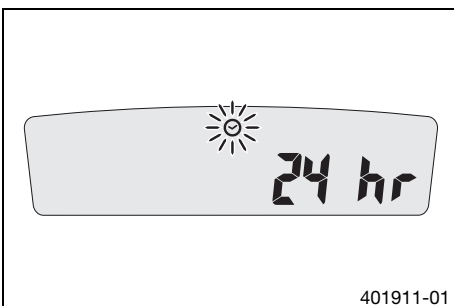

401911-01

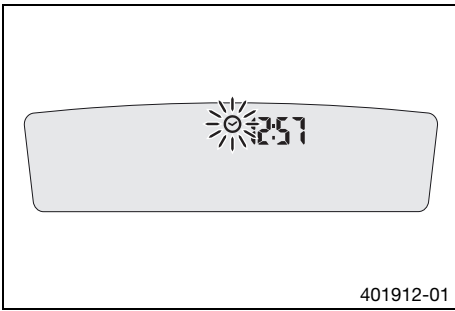


- Wait for 5 seconds.
- ✓ The speedometer changes to the next menu item. The ☀ symbol flashes.

**Resetting the time**

- Press the left button.
- ✓ The value decreases.

**Advancing the time**

- Press the right button.
- ✓ The value increases.

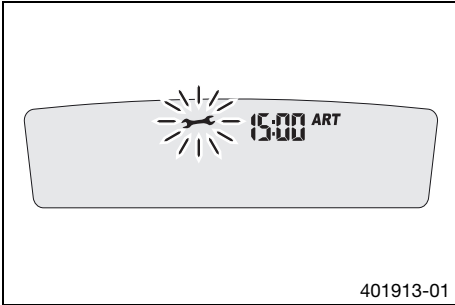

- Wait for 5 seconds.
- ✓ The speedometer changes to the next menu item. The ⚙ symbol flashes.
- Set the service.

**Guideline**

One-time service after	1 h
Service every	15 h

**Shortening the service interval**


- Press the left button.
- ✓ The value decreases.

**Extending the service interval**

- Press the right button.
- ✓ The value increases.

**Switching off the service interval display**

- Press and hold the left button.
- ✓ **off** appears on the display.

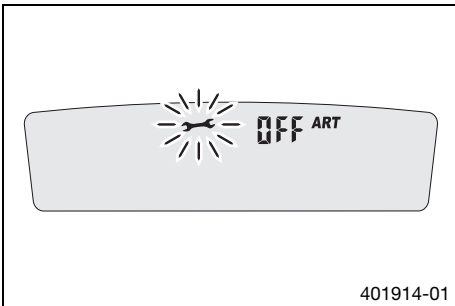

## 7.5 Setting the kilometers or miles




**Info**

If the unit is changed, the value **ODO** is retained and converted accordingly.

**Condition**



The motorcycle is stationary.

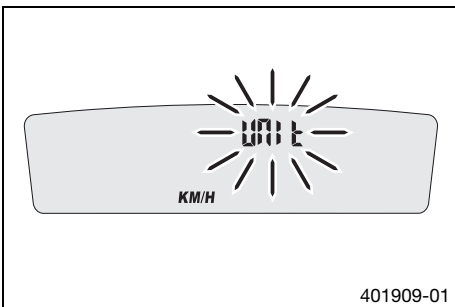

- Press both buttons for 3–5 seconds.
- ✓ The Setup menu is displayed. The **UNIT** display flashes.
- Press one of the buttons to select **UNIT** for the speed in kilometers **KM/H** or miles **M/H**.



## 7.6 Setting the clock

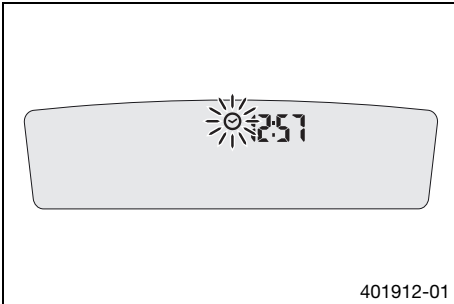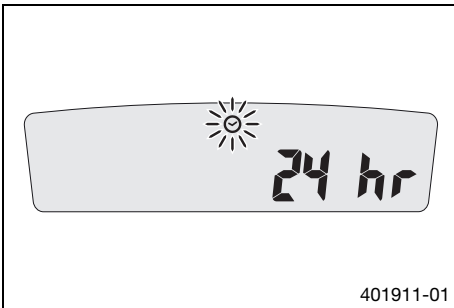

### Condition

The motorcycle is stationary.

- Press both buttons for 3–5 seconds.
  - ✓ The Setup menu is displayed. The **UNIT** display flashes.
- Wait for the menu of the clock ☀ to flash.
- Press one of the buttons to select the 24h or 12h display of the clock.

- Wait for 5 seconds.

- ✓ The speedometer changes to the next menu item. The ☀ symbol flashes.



### Resetting the time

- Press the left button.
  - ✓ The value decreases.

### Advancing the time

- Press the right button.
  - ✓ The value increases.

## 7.7 Setting the service display

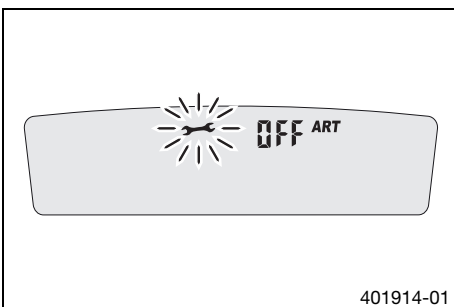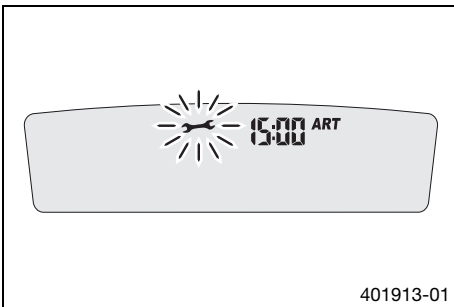

### Condition

The motorcycle is stationary.

- Press both buttons for 3–5 seconds.
  - ✓ The Setup menu is displayed. The **UNIT** display flashes.
- Wait for the menu of the service display ⚙ to flash.
- Set the service.

### Guideline

One-time service after	1 h
Service every	15 h

### Shortening the service interval

- Press the left button.
  - ✓ The value decreases.


### Extending the service interval

- Press the right button.
  - ✓ The value increases.

### Switching off the service interval display

- Press and hold the left button.
  - ✓ **off** appears on the display.

## 7.8 Speed, time, and DST distance 1

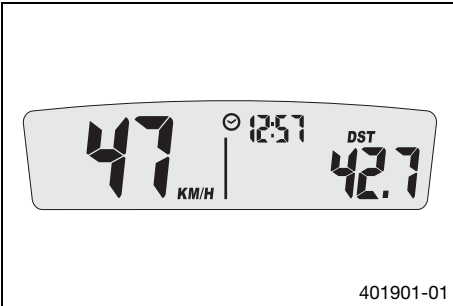


- Press one of the buttons until **DST** appears on the speedometer.
- KM/H** or **M/H** shows the speed.  
 ☉ shows the time.  
**DST** shows the distance since the last reset, such as between two refueling stops.

**Info**  
 If the value of 39999.9 is exceeded, **DST** is automatically reset to 0.0.

Press the left button briefly.	Next display mode
Press the left button for 3 – 5 seconds.	<b>DST</b> can be preset to a value between 0.0 and 39999.9 by pressing the buttons.
Press the right button briefly.	Next display mode
Press the right button for 3 – 5 seconds.	<b>DST</b> is reset to 0.0.

## 7.9 Speed, time, and DST2 distance 2

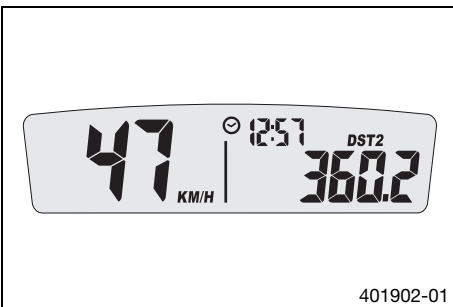


- Press one of the buttons until **DST2** appears on the speedometer.
- KM/H** or **M/H** shows the speed.  
 ☉ shows the time.  
**DST2** shows the distance 2 since the last reset, such as between two refueling stops.

**Info**  
 If the value of 39999.9 is exceeded, **DST2** is automatically reset to 0.0.

Press the left button briefly.	Next display mode
Press the left button for 3 – 5 seconds.	<b>DST2</b> can be preset to a value between 0.0 and 39999.9 by pressing the buttons.
Press the right button briefly.	Next display mode
Press the right button for 3 – 5 seconds.	<b>DST2</b> is reset to 0.0.



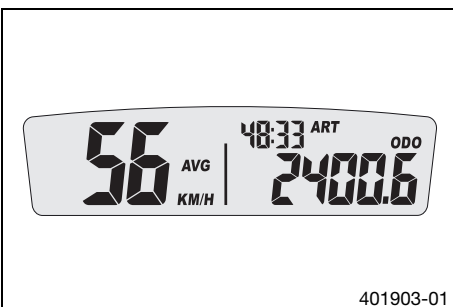





## 7.10 AVG average speed, ART operating hours, and ODO total distance covered




- Press one of the buttons until **AVG**, **ART** and **ODO** appear in the speedometer.
- AVG** shows the average speed since the last reset.  
**ART** shows the operating hours.  
**ODO** shows the total distance covered.


Press the left button briefly.	Next display mode
Press the left button for 3 – 5 seconds.	The OPEN END WRENCH SYMBOL shows the remaining operating hours until the next service is due.
Press the right button briefly.	Next display mode
Press the right button for 3 – 5 seconds.	<b>AVG</b> is reset to 0.0.

## 8.1 Advice on first use

-  **Danger**  
**Danger of accidents** A rider who is not fit to ride poses a danger to him or herself and others.
- Do not operate the vehicle if you are not fit to ride due to alcohol, drugs or medication.
  - Do not operate the vehicle if you are physically or mentally impaired.
-  **Warning**  
**Risk of injury** Missing or poor protective clothing presents an increased safety risk.
- Wear appropriate protective clothing such as helmet, boots, gloves as well as trousers and a jacket with protectors on all rides.
  - Always wear protective clothing that is in good condition and meets the legal regulations.
-  **Warning**  
**Danger of crashing** Different tire tread patterns on the front and rear wheel impair the handling characteristic. Different tire tread patterns can make the vehicle significantly more difficult to control.
- Make sure that only tires with a similar tire tread pattern are fitted to the front and rear wheel.
-  **Warning**  
**Danger of accidents** An unadapted riding style impairs the handling characteristic.
- Adapt your riding speed to the road conditions and your riding ability.
-  **Warning**  
**Danger of accidents** The vehicle is not designed to carry passengers.
- Do not ride with a passenger.
-  **Warning**  
**Danger of accidents** The brake system fails in the event of overheating. If the foot brake lever is not released, the brake linings drag continuously.
- Take your foot off the foot brake lever when you are not braking.
-  **Warning**  
**Danger of accidents** Total weight and axle loads influence the handling characteristic.
- Do not exceed the maximum permissible overall weight or the axle loads.
-  **Warning**  
**Risk of misappropriation** People who act without authorization endanger themselves and others.
- Do not leave the vehicle unattended if the engine is running.
  - Protect the vehicle against access by unauthorized persons.

 **Info**  
When using your motorcycle, remember that others may feel disturbed by excessive noise.

- Make sure that the pre-delivery inspection work has been carried out by an authorized Husqvarna Motorcycles workshop.
  - ✓ You receive a delivery certificate and the Service and Warranty Booklet at vehicle handover.
- Before your first trip, read the entire Owner's Manual carefully.
- Get to know the controls.
- Adjust the basic position of the clutch lever. (📖 p. 67)
- Adjust the free travel of the hand brake lever. (📖 p. 70)
- Adjust the basic position of the foot brake lever. 🦶 (📖 p. 74)
- Adjust the basic position of the shift lever. 🦶 (📖 p. 100)
- Get used to handling the motorcycle on a suitable piece of land before undertaking a more challenging trip.

 **Info**  
When off road, it is recommended that you are accompanied by another person on another vehicle so that you can help each other.

- Try also to ride as slowly as possible and in a standing position to get a better feeling for the motorcycle.
- Do not make any off-road trips that exceed your ability and experience.
- Hold the handlebar firmly with both hands and keep your feet on the footrests when riding.
- If you carry any luggage, make sure you fix it firmly as close as possible to the center of the vehicle and ensure even weight distribution between the front and rear wheels.



**Info**

Motorcycles react sensitively to any changes of weight distribution.

- Do not exceed maximum permissible weight and maximum permissible axle loads.

Guideline

Maximum permissible overall weight	335 kg (739 lb.)
Maximum permissible front axle load	145 kg (320 lb.)
Maximum permissible rear axle load	190 kg (419 lb.)



**Info**

The spoke tension must be checked after half an hour of operation.

- Run in the engine. (📖 p. 26)

## 8.2 Running-in the engine


- During the running-in phase, do not exceed the specified engine speed and engine performance.

Guideline

Maximum engine speed	
During the first operating hour	7,000 rpm
Maximum engine performance	
During the first 3 operating hours	≤ 75 %

- Avoid fully opening the throttle!

## 8.3 Starting power of lithium-ion batteries at low temperatures

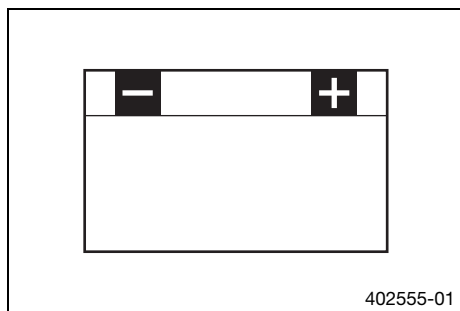

Lithium-ion batteries are far lighter than lead batteries, have a low self-discharge rate, and have more starting power at temperatures over 15 °C (60 °F). At low temperatures, however, the starting power of lithium-ion batteries drops to below that of lead batteries.

Multiple starting attempts may be needed. Press the electric starter button for 5 seconds, and wait 30 seconds between attempts. The pauses are necessary so that the created heat can distribute through the lithium-ion battery and the battery is not damaged.

If the charged lithium-ion battery does not or only weakly turns over the electric starter when temperatures are below 15 °C (60 °F), then the battery is not faulty, but needs to be warmed up internally to increase its starting power (current output).

The starting power increases as the battery warms up.

## 8.4 Preparing the vehicle for difficult riding conditions



**Info**

Use of the vehicle under difficult conditions, such as on sand or on wet and muddy surfaces, can lead to considerably more rapid wear of components such as the drive train, brake system, or suspension components. For this reason, it may be necessary to inspect or replace parts before the next scheduled service.

- Clean the air filter and air filter box. (📖 p. 56)



**Info**

Check the air filter approx. every 30 minutes.

- Seal the air filter box. (📖 p. 57)
- Check the connector for humidity and corrosion and to ensure it is firmly seated.
  - » If humidity, corrosion, or damage is found:

- Clean and dry the connector, or change it if necessary.

**Difficult riding conditions are:**

- Rides on dry sand. (📖 p. 27)
- Rides on wet sand. (📖 p. 27)
- Rides on wet and muddy surfaces. (📖 p. 28)
- Rides at high temperature and slow speed. (📖 p. 28)
- Rides at low temperature or in snow. (📖 p. 28)

## 8.5 Preparing for rides on dry sand



- Fit a dust cover on the air filter.

Dust cover for air filter (79006920000)



**Info**  
See the **Husqvarna Motorcycles** accessories fitting instructions.



- Fit a sand cover on the air filter.

Sand cover for air filter (79006922000)



**Info**  
See the **Husqvarna Motorcycles** accessories fitting instructions.



- Clean the chain.
- Fit the steel sprocket.



**Tip**  
Do not grease the chain.

- Clean the radiator fins.
- Straighten bent radiator fins carefully.

## 8.6 Preparing for rides on wet sand



- Fit a waterproofing device on the air filter.

Waterproofing device for air filter (79006921000)



**Info**  
See the **Husqvarna Motorcycles** accessories fitting instructions.



- Clean the chain.
- Fit the steel sprocket.



**Tip**  
Do not grease the chain.

- Clean the radiator fins.
- Straighten bent radiator fins carefully.

## 8.7 Preparing for rides on wet and muddy surfaces



- Fit a waterproofing device on the air filter.

Waterproofing device for air filter (79006921000)



### Info

See the **Husqvarna Motorcycles** accessories fitting instructions.



- Fit the steel sprocket.
- Clean the motorcycle. (📖 p. 105)
- Straighten bent radiator fins carefully.

## 8.8 Preparing for rides at high temperature and slow speed



- Adjust the secondary drive to the road conditions.



### Info

The engine oil heats up quickly when the clutch is operated frequently due to an excessively high secondary drive.

- Clean the chain.
- Clean the radiator fins.
- Straighten bent radiator fins carefully.
- Check the coolant level. (📖 p. 94)

## 8.9 Preparing for rides at low temperature or in snow



- Fit a waterproofing device on the air filter.

Waterproofing device for air filter (79006921000)



### Info

See the **Husqvarna Motorcycles** accessories fitting instructions.

## 9.1 Checks and maintenance measures when preparing for use

### **i** Info

Before every trip, check the condition of the vehicle and ensure that it is safe to operate. The vehicle must be in perfect technical condition when it is being operated.

- Check the engine oil level. (📖 p. 101)
- Check the electrical system.
- Check the front brake fluid level. (📖 p. 71)
- Check the rear brake fluid level. (📖 p. 75)
- Check the front brake linings. (📖 p. 72)
- Check the rear brake linings. (📖 p. 76)
- Check that the brake system is functioning properly.
- Check the coolant level. (📖 p. 94)
- Check for chain dirt accumulation. (📖 p. 61)
- Check the chain, rear sprocket, engine sprocket, and chain guide. (📖 p. 64)
- Check the chain tension. (📖 p. 62)
- Check the tire condition. (📖 p. 82)
- Check the tire air pressure. (📖 p. 82)
- Check the spoke tension. (📖 p. 83)

### **i** Info

The spoke tension must be checked regularly as incorrect spoke tension will strongly impair riding safety.

- Clean the dust boots of the fork legs. (📖 p. 44)
- Bleed the fork legs. (📖 p. 44)
- Check the air filter.
- Check the settings of all controls and ensure that they can be operated smoothly.
- Check all screws, nuts, and hose clamps regularly for tightness.
- Check the fuel level.

## 9.2 Starting

### **!** Danger


**Danger of poisoning** Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use an effective exhaust extraction system when starting or running the engine in an enclosed space.

### Note

**Engine damage** High revving speed with a cold engine negatively impacts the lifespan of the engine.

- Always run the engine warm at a low speed.

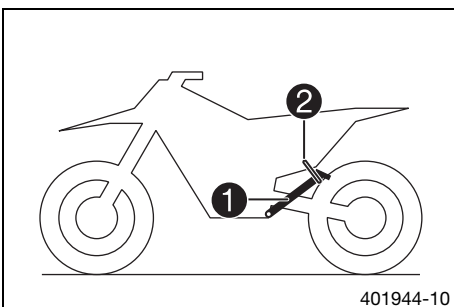


- Take the motorcycle off side stand **1** and secure the side stand with rubber band **2**.
- Shift transmission to neutral.
- Turn the emergency OFF switch to the position  $\circ$ .

### Condition

Ambient temperature: < 20 °C (< 68 °F)

- Push the cold start button in all the way.

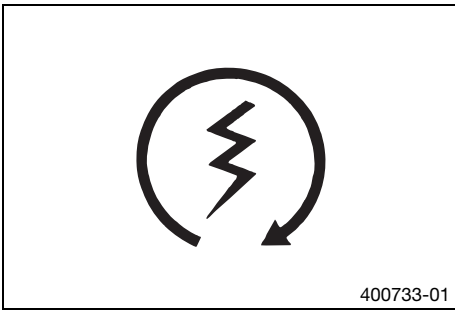

- Press the electric starter button.

**i Info**

Press the electric starter button for a maximum of 5 seconds. Wait for 30 seconds before a further attempt at starting. At temperatures below 15 °C (60 °F), several attempts at starting may be necessary to warm-up the lithium-ion battery and thereby increase the starting power. During the starting process, the malfunction indicator lamp lights up.

## 9.3 Activating Launch Control

**Warning**

**Voiding of the government approval for road use and the insurance coverage** If the combination switch is installed, the vehicle's approval for road use is invalidated.

- Only operate the vehicle in closed-off areas remote from public road traffic if the combination switch is installed.


**i Info**

The **Launch Control** assists the rider to optimally accelerate the motorcycle at the beginning of a race. The maximum speed of the engine with the throttle valve fully opened (full throttle) is reduced. After the start, it is gradually increased up to the maximum engine speed. The rider opens the throttle fully throughout this procedure. The clutch must be activated exactly as it would be without an active **Launch Control**.

**Condition**

The motorcycle is stationary.  
The engine is running at idle speed.  
Transmission in neutral

- Press and hold **MAP** and **TC** buttons simultaneously.
- ✓ **FI** warning lamp flashes orange rapidly.

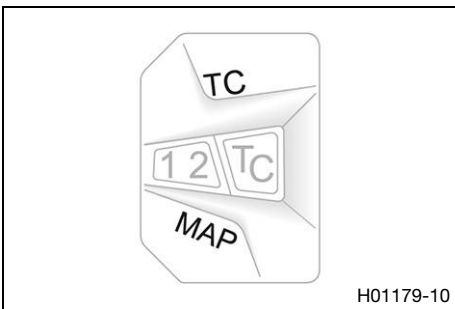

**i Info**

Several seconds after the vehicle starts, **Launch Control** is deactivated automatically. The **Launch Control** is deactivated in the following cases (**FI** warning lamp no longer flashes): After full throttle, the throttle valve was closed by more than 1/3 of the way and/or there is no start within 3 minutes. To reactivate **Launch Control**, the engine must first be switched off for at least 10 seconds for safety reasons. This must occur regardless of whether the engine was started or not.

## 9.4 Activating traction control

**Warning**


**Voiding of the government approval for road use and the insurance coverage** If the combination switch is installed, the vehicle's approval for road use is invalidated.

- Only operate the vehicle in closed-off areas remote from public road traffic if the combination switch is installed.

**i Info**

The traction control reduces excessive slip on the rear wheel in favor of more control and propulsion, particularly in wet conditions. When traction control is switched off, the rear wheel may spin more during high acceleration and on surfaces with low grip. Traction control can be switched on or off during the ride. The setting most recently selected is activated again when restarting.



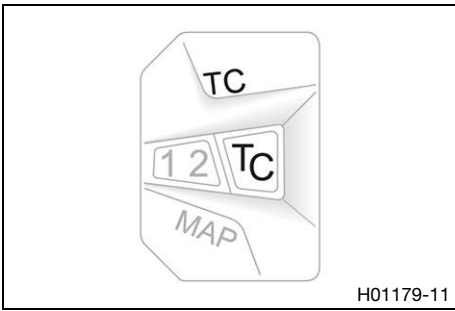

- Press button **TC** to switch the traction control on or off.

Guideline

Engine speed	≤ 4,000 rpm
--------------	-------------

- ✓ The **TC** LED lights up when the traction control is activated.

## 9.5 Starting off



**Info**

While riding, the side stand must be folded up and secured with the rubber band.

- Pull the clutch lever, shift into first gear, release the clutch lever slowly and at the same time open the throttle gently.

## 9.6 Shifting, riding



**Warning**

**Danger of accidents** If you change down at high engine speed, the rear wheel blocks and the engine races.

- Do not change into a low gear at high engine speed.



**Info**

If unusual noises occur while riding, stop immediately, switch off the engine, and contact an authorized Husqvarna Motorcycles workshop.

First gear is used for starting off and for steep inclines.

- Shift into a higher gear when conditions allow (incline, road situation, etc.). To do so, release the throttle while simultaneously pulling the clutch lever, shift into the next gear, release the clutch lever and open the throttle.
- After reaching maximum speed by fully opening the throttle grip, turn the throttle back so it is ¼ open. This will barely reduce the speed but fuel consumption will be considerably lower.
- Always open the throttle only as much as the engine can handle – abrupt throttle opening increases fuel consumption.
- To shift down, apply the brakes and close the throttle at the same time.
- Pull the clutch lever and shift into a lower gear, release the clutch lever slowly, and either open the throttle or shift again.
- Switch off the engine if running at idle or standing for a long time.

Guideline

≥ 2 min
---------

- Avoid frequent and longer slipping of the clutch. As a result the engine oil, engine and cooling system heat up.
- Ride at a low engine speed instead of at a high engine speed with a slipping clutch.

## 9.7 Braking



**Warning**

**Danger of accidents** Excessively forceful application of the brakes blocks the wheels.

- Adjust application of the brakes to the respective riding situation and riding surface conditions.



**Warning**

**Danger of accidents** A spongy pressure point on the front or rear brake reduces braking efficiency.

- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



**Warning**

**Danger of accidents** Moisture and dirt impair the brake system.

- Brake carefully several times to dry out and remove dirt from the brake linings and the brake discs.

- On sandy, wet or slippery surfaces, use the rear brake.
- Braking should always be completed before you go into a bend. Change down to a lower gear appropriate to your road speed.
- Make use of the braking effect of the engine when driving down long downhill stretches. To do so, shift back one or two gears, but do not overrev the engine. You will need to apply the brakes far less often and the brake system will not overheat.

## 9.8 Stopping, parking

### Warning

**Risk of misappropriation** People who act without authorization endanger themselves and others.

- Do not leave the vehicle unattended if the engine is running.
- Protect the vehicle against access by unauthorized persons.

### Warning

**Danger of burns** Some vehicle components become very hot when the vehicle is operated.

- Do not touch any parts such as the exhaust system, radiator, engine, shock absorber, or brake system before the vehicle parts have cooled down.
- Let the vehicle parts cool down before you perform any work on the vehicle.

### Note

**Material damage** The vehicle may be damaged by incorrect procedure when parking.

Significant damage may be caused if the vehicle rolls away or falls over.


The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Ensure that nobody sits on the vehicle when the vehicle is parked on a stand.

### Note

**Fire hazard** Hot vehicle components pose a fire hazard and explosion risk.

- Do not park the vehicle near to materials which are highly flammable or explosive.
- Allow the vehicle to cool down before covering it.

- Apply the brakes on the motorcycle.
- Shift transmission to neutral.
- Press and hold the kill switch  while the engine is idling until the engine stops.
- Park the motorcycle on firm ground.

## 9.9 Transport

### Note


**Danger of damage** The parked vehicle can roll away or fall over.

- Park the vehicle on a firm and level surface.

### Note

**Fire hazard** Hot vehicle components pose a fire hazard and explosion risk.

- Do not park the vehicle near to materials which are highly flammable or explosive.
- Allow the vehicle to cool down before covering it.

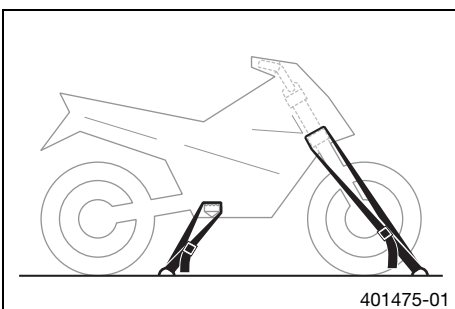

- Switch off the engine.
- Use tension belts or other suitable devices to secure the motorcycle against accidents or falling over.

## 9.10 Refueling



### Danger

**Fire hazard** Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not refuel the vehicle in the vicinity of open flames or lit cigarettes.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it off immediately.
- Observe the specifications for refueling.



### Warning

**Danger of poisoning** Fuel is poisonous and a health hazard.

- Avoid skin, eye and clothing contact with fuel.
- Immediately consult a doctor if you swallow fuel.
- Do not inhale fuel vapors.
- In case of skin contact, rinse the affected area with plenty of water.
- Rinse the eyes thoroughly with water, and consult a doctor in case of fuel contact with the eyes.
- Change your clothing in case of fuel spills on them.

### Note

**Material damage** Inadequate fuel quality causes the fuel filter to quickly become clogged.

In some countries and regions, the available fuel quality and cleanliness may not be sufficient. This will result in problems with the fuel system.


- Refuel only with clean fuel that meets the specified standards. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



### Warning

**Environmental hazard** Improper handling of fuel is a danger to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.

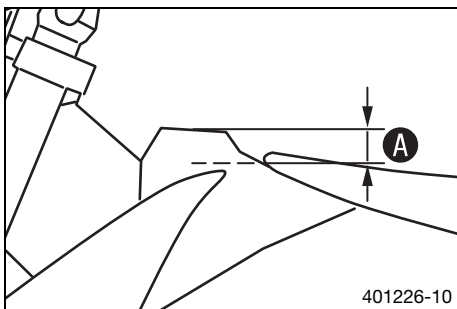

- Switch off engine.
- Open the filler cap. (📖 p. 16)
- Fill the fuel tank with fuel up to measurement **A**.

Guideline



Measurement of <b>A</b>	35 mm (1.38 in)	
Total fuel tank capacity, approx.	8.5 l (2.25 US gal)	Super unleaded (ROZ 95/RON 95/PON 91) (📖 p. 116)

- Close the filler cap. (📖 p. 17)

## 10.1 Additional information

Any further work that results from the required work or from the recommended work must be ordered separately and can be invoiced separately.

## 10.2 Required work

	Every 30 operating hours/after every race	Every 15 operating hours	Once after 1 operating hour
Read out the fault memory using the Husqvarna Motorcycles diagnostics tool. 	○	●	●
Check that the electrical system is functioning properly.	○	●	●
Check and charge the battery. 		●	●
Check the front brake linings. (📖 p. 72)		●	●
Check the rear brake linings. (📖 p. 76)		●	●
Check the brake discs. (📖 p. 70)		●	●
Check the brake lines for damage and leakage.		●	●
Check the rear brake fluid level. (📖 p. 75)		●	●
Check the free travel of the foot brake lever. (📖 p. 74)		●	●
Check the frame and swingarm. 		●	●
Check the swingarm bearing for play. 			●
Check the heim joints at the top of the shock absorber. 		●	●
Check the shock absorber linkage. 		●	●
Check the tire condition. (📖 p. 82)	○	●	●
Check the tire air pressure. (📖 p. 82)	○	●	●
Check the wheel bearing for play. 		●	●
Check the wheel hubs. 		●	●
Check the rim run-out. 	○	●	●
Check the spoke tension. (📖 p. 83)	○	●	●
Check the chain, rear sprocket, engine sprocket, and chain guide. (📖 p. 64)		●	●
Check the chain tension. (📖 p. 62)	○	●	●
Grease all moving parts (e.g. side stand, hand lever, chain, ...) and check for smooth operation. 		●	●
Check/correct the fluid level of the hydraulic clutch. (📖 p. 67)		●	●
Check the front brake fluid level. (📖 p. 71)		●	●
Check the free travel of the hand brake lever. (📖 p. 70)		●	●
Check the play of the steering head bearing. (📖 p. 49)	○	●	●
Check the valve clearance. 	○		●
Check the clutch. 			●
Change the engine oil and oil filter, clean the oil screen.  (📖 p. 102)	○	●	●
Check all hoses (e.g. fuel, cooling, bleeder, drainage, etc.) and sleeves for cracking, leaks, and incorrect routing. 	○	●	●
Check the antifreeze and coolant level. (📖 p. 93)	○	●	●
Check the cables for damage and routing without sharp bends. 		●	●
Check that the throttle cables are undamaged, routed without sharp bends, and set correctly.	○	●	●
Clean the air filter and air filter box.  (📖 p. 56)		●	●
Change glass fiber yarn filling in the main silencer.  (📖 p. 58)			●
Check the screws and nuts for tightness. 	○	●	●
Check the headlight setting. (📖 p. 90)	○	●	●
Change the fuel screen.  (📖 p. 101)	○	●	●
Check the fuel pressure. 		●	●

	Every 30 operating hours/after every race		
	Every 15 operating hours		
	Once after 1 operating hour		
Check idle. 🛠️	○	●	●
Check that the radiator fan is functioning properly. 🛠️	○	●	●
Final check: Check the vehicle is roadworthy and take a test ride. 🛠️	○	●	●
Read out the fault memory after the test ride using the Husqvarna Motorcycles diagnostics tool. 🛠️	○	●	●
Make the service entry in the <b>Husqvarna Motorcycles Dealer.net</b> and in the Service and Warranty Booklet. 🛠️	○	●	●

- One-time interval
- Periodic interval

## 10.3 Recommended work


	Annually			
	Every 135 operating hours			
	Every 70 operating hours when used for motorsports			
	Every 45 operating hours/every 10 operating hours when used for motorsports			
	Once after 10 operating hours			
Change the front brake fluid. 🛠️				●
Change the rear brake fluid. 🛠️				●
Change the hydraulic clutch fluid. 🛠️ (📖 p. 68)				●
Lubricate the steering head bearing. 🛠️ (📖 p. 50)				●
Service the fork. 🛠️	○	●	●	●
Service the shock absorber. 🛠️		●	●	●
Perform engine service including removing and installing the engine. (Change the spark plug and spark plug connector. Change the piston. Check/measure the cylinder. Check the cylinder head. Change the valves, valve springs, and valve spring seats. Check the camshaft and cam lever. Change the connecting rod, conrod bearing, and crank pin. Change the shaft seal rings of the water pump. Check the transmission and shift mechanism. Check the oil pressure regulator valve. Change the suction pump. Check the force pump and lubrication system. Check the timing assembly. Change the timing chain. Change all engine bearings. Change the freewheel.) 🛠️			●	●

- One-time interval
- Periodic interval

## 11.1 Checking the basic chassis setting with the rider's weight

**i Info**

When adjusting the basic chassis setting, first adjust the shock absorber and then the fork.

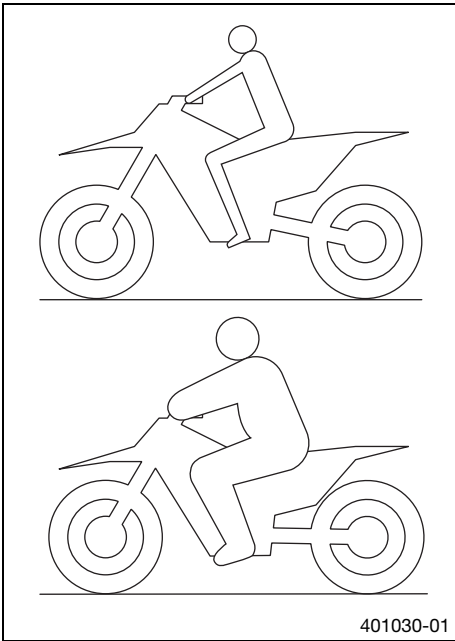

401030-01

- For optimal motorcycle riding characteristics and to avoid damage to forks, shock absorbers, swingarm and frame, the basic settings of the suspension components must match the rider's weight.
- As delivered, Husqvarna motorcycles are adjusted for an average rider's weight (with full protective clothing).

**Guideline**

Standard rider weight	75... 85 kg (165... 187 lb.)
-----------------------	------------------------------

- If the rider's weight is above or below this range, the basic setting of the suspension components must be adjusted accordingly.
- Small weight differences can be compensated by adjusting the spring preload, but in the case of large weight differences, the springs must be replaced.

## 11.2 Compression damping of the shock absorber

The compression damping of the shock absorber is divided into two ranges: high-speed and low-speed. High-speed and low-speed refer to the compression speed of the rear wheel suspension and not to the vehicle speed. The high-speed setting, for example, has an effect on the landing after a jump: the rear wheel suspension compresses quickly. The low-speed setting, for example, has an effect when riding over long ground swells: the rear wheel suspension compresses slowly.

These two ranges can be adjusted separately, although the transition between high-speed and low-speed is gradual. Thus, changes in the high-speed range affect the compression damping in the low-speed range and vice versa.

## 11.3 Adjusting the low-speed compression damping of the shock absorber


**⚠ Caution**

**Risk of injury** Parts of the shock absorber will fly off if the shock absorber is disassembled incorrectly. The shock absorber is filled with highly compressed nitrogen.

- Please follow the description provided. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

**i Info**

The effect of the low-speed setting can be seen in slow to normal compression of the shock absorber.

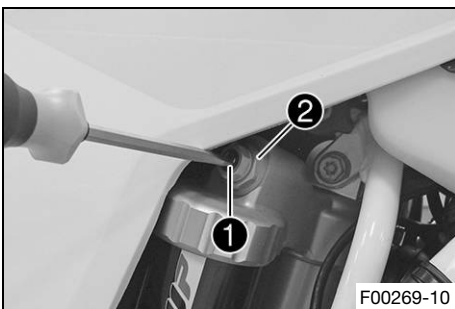

F00269-10

- Turn adjusting screw **1** clockwise with a screwdriver up to the last perceptible click.

**i Info**

Do not loosen fitting **2**!

- Turn counterclockwise by the number of clicks corresponding to the shock absorber type.

**Guideline**

Compression damping, low-speed	
Comfort	17 clicks
Standard	15 clicks
Sport	13 clicks



**Info**

Turn clockwise to increase damping; turn counterclockwise to reduce damping.

## 11.4 Adjusting the high-speed compression damping of the shock absorber



**Caution**


**Risk of injury** Parts of the shock absorber will fly off if the shock absorber is disassembled incorrectly. The shock absorber is filled with highly compressed nitrogen.

- Please follow the description provided. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



**Info**

The effect of the high-speed setting can be seen in fast compression of the shock absorber.

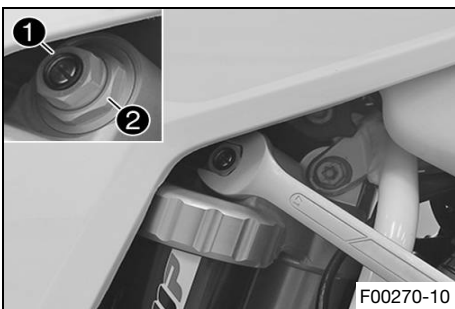

- Using an open end wrench, turn adjusting screw ① clockwise all the way.



**Info**

Do not loosen fitting ②!

- Turn counterclockwise by the number of turns corresponding to the shock absorber type.

Guideline

Compression damping, high-speed	
Comfort	2.5 turns
Standard	2 turns
Sport	1.5 turns



**Info**

Turn clockwise to increase damping; turn counterclockwise to reduce damping.


## 11.5 Adjusting the rebound damping of the shock absorber



**Caution**

**Risk of injury** Parts of the shock absorber will fly off if the shock absorber is disassembled incorrectly. The shock absorber is filled with highly compressed nitrogen.

- Please follow the description provided. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

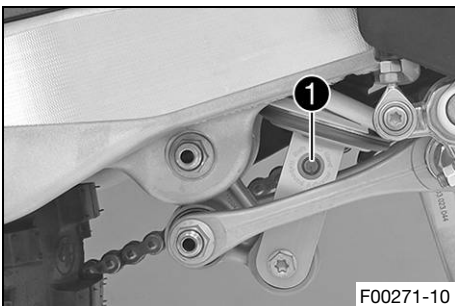

- Turn adjusting screw ① clockwise up to the last perceptible click.
- Turn counterclockwise by the number of clicks corresponding to the shock absorber type.

Guideline


Rebound damping	
Comfort	17 clicks
Standard	15 clicks
Sport	13 clicks



**Info**

Turn clockwise to increase damping; turn counterclockwise to reduce damping.

## 11.6 Measuring the rear wheel dimension unloaded

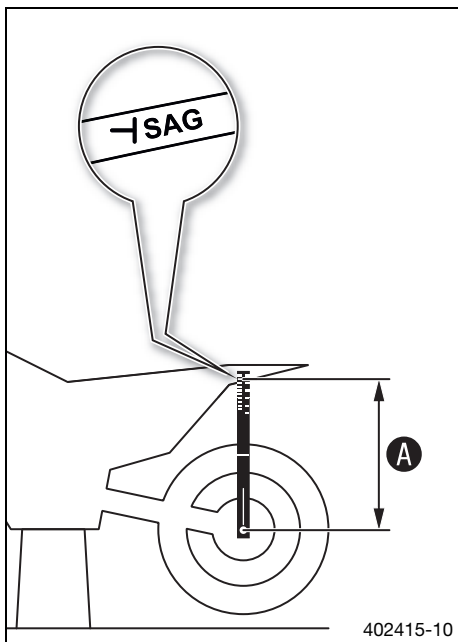

### Preparatory work

- Raise the motorcycle with a lift stand. (📖 p. 44)

### Main work

- Position the sag gauge in the rear axle and measure the distance to marking **SAG** on the rear fender.

Sag gauge (00029090500)
-------------------------


Pin for sag gauge (00029990010)
---------------------------------

- Note down the value as dimension **A**.

### Finishing work

- Remove the motorcycle from the lift stand. (📖 p. 44)

## 11.7 Checking the static sag of the shock absorber

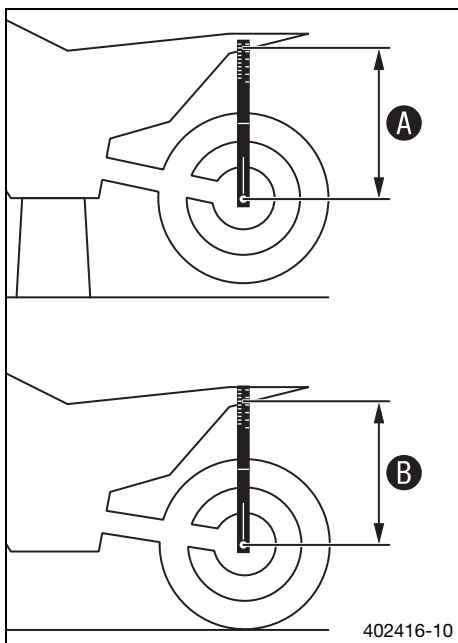

- Measure dimension **A** of rear wheel unloaded. (📖 p. 38)
- Hold the motorcycle upright with the aid of an assistant.
- Again measure the distance between the rear axle and marking **SAG** on the rear fender using the sag gauge.
- Note down the value as dimension **B**.

### **i** Info

The static sag is the difference between measurements **A** and **B**.


- Check the static sag.

Static sag	35 mm (1.38 in)
------------	-----------------

- » If the static sag is less or more than the specified value:
  - Adjust the spring preload of the shock absorber. 📖 (📖 p. 39)



## 11.8 Checking the riding sag of the shock absorber

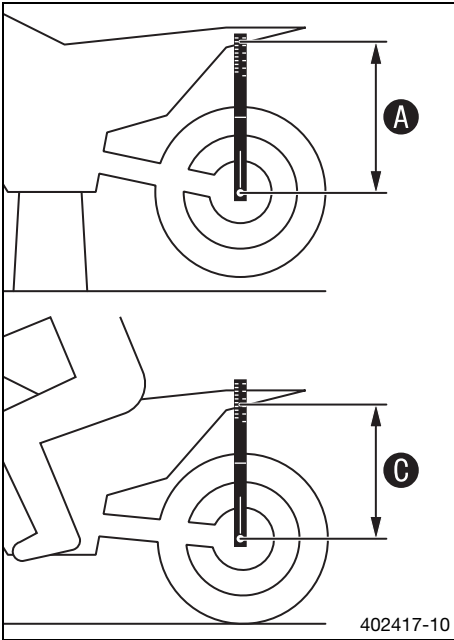

- Measure dimension **A** of rear wheel unloaded. (📖 p. 38)
- With another person holding the motorcycle, the rider, wearing full protective clothing, sits on the seat in a normal sitting position (feet on footrests) and bounces up and down a few times.
  - ✓ The rear wheel suspension levels out.
- Another person again measures the distance between the rear axle and marking **SAG** on the rear fender using the sag gauge.
- Note down the value as dimension **C**.

### **i** Info

The riding sag is the difference between measurements **A** and **C**.

- Check the riding sag.

### Guideline

Riding sag	110 mm (4.33 in)
------------	------------------

- » If the riding sag differs from the specified measurement:
  - Adjust the riding sag. 🛠️ (📖 p. 40)

## 11.9 Adjusting the spring preload of the shock absorber 🛠️

### **⚠️** Caution

**Risk of injury** Parts of the shock absorber will fly off if the shock absorber is disassembled incorrectly. The shock absorber is filled with highly compressed nitrogen.

- Please follow the description provided. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

### **i** Info

Before changing the spring preload, make a note of the present setting, e.g., by measuring the length of the spring.

### Preparatory work

- Raise the motorcycle with a lift stand. (📖 p. 44)
- Remove the shock absorber. 🛠️ (📖 p. 51)
- After removing the shock absorber, clean it thoroughly.

### Main work

- Loosen screw **1**.
- Turn adjusting ring **2** until the spring is no longer under tension.

Hook wrench (90129051000)
---------------------------

- Measure the overall spring length while the spring is not under tension.
- Tighten the spring by turning adjusting ring **2** to measurement **A**.

### Guideline

Spring preload	10 mm (0.39 in)
----------------	-----------------


### **i** Info

Depending on the static sag and/or the riding sag, it may be necessary to increase or decrease the spring preload.

- Tighten screw **1**.

### Guideline

Screw, shock absorber adjusting ring	M5	5 Nm (3.7 lbf ft)
--------------------------------------	----	-------------------

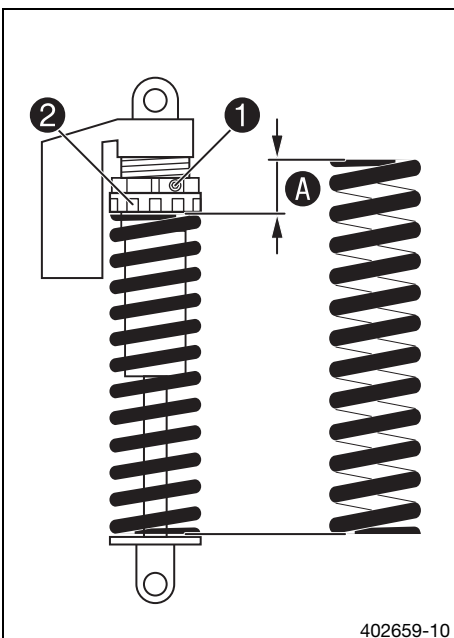

### Finishing work


- Install the shock absorber. 🛠️ (📖 p. 52)
- Check the free travel of the foot brake lever. (📖 p. 74)

- Remove the motorcycle from the lift stand. (📖 p. 44)

## 11.10 Adjusting the riding sag 🛠️

### Preparatory work

- Raise the motorcycle with a lift stand. (📖 p. 44)
- Remove the shock absorber. 🛠️ (📖 p. 51)
- After removing the shock absorber, clean it thoroughly.

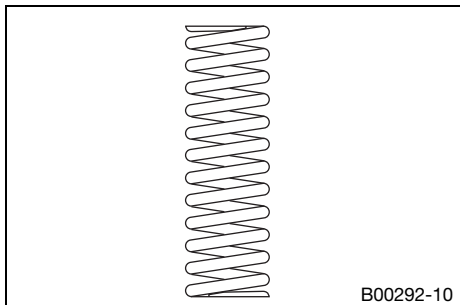

### Main work

- Choose and mount a suitable spring.

#### Guideline

Spring rate	
Weight of rider: 65... 75 kg (143... 165 lb.)	42 N/mm (240 lb/in)
Weight of rider: 75... 85 kg (165... 187 lb.)	45 N/mm (257 lb/in)
Weight of rider: 85... 95 kg (187... 209 lb.)	48 N/mm (274 lb/in)

### **i** Info

The spring rate is shown on the outside of the spring. Smaller weight differences can be compensated by changing the spring preload.


### Finishing work

- Install the shock absorber. 🛠️ (📖 p. 52)
- Check the free travel of the foot brake lever. (📖 p. 74)
- Remove the motorcycle from the lift stand. (📖 p. 44)
- Check the static sag of the shock absorber. (📖 p. 38)
- Check the riding sag of the shock absorber. (📖 p. 39)
- Adjust the rebound damping of the shock absorber. (📖 p. 37)

## 11.11 Checking the basic setting of the fork

### **i** Info

For various reasons, no exact riding sag can be determined for the fork.

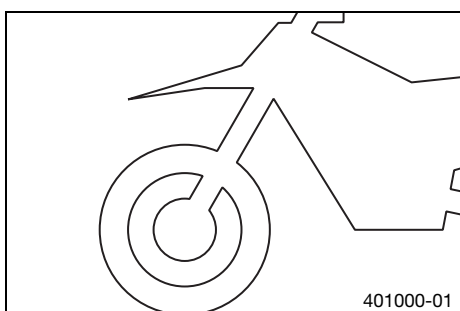


- As with the shock absorber, smaller differences in the rider's weight can be compensated by the spring preload.
- However, if the fork frequently bottoms out (hard end stop on compression), harder springs must be fitted to avoid damage to the fork and frame.
- If the fork feels unusually hard after extended periods of operation, the fork legs need to be bled.

## 11.12 Adjusting the compression damping of the fork

### **i** Info

The hydraulic compression damping determines the fork suspension behavior.

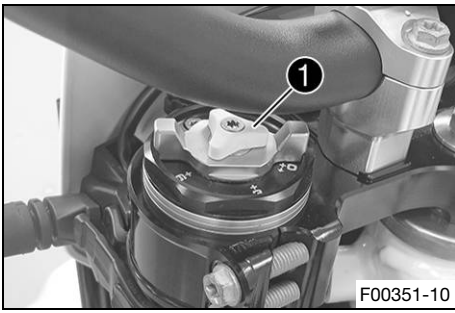

- Turn white adjusting screw ❶ clockwise as far as it will go.

**i Info**

Adjusting screw ❶ is located at the upper end of the left fork leg. The compression damping is located in left fork leg **COM** (white adjusting screw). The rebound damping is located in right fork leg **REB** (red adjusting screw).

- Turn counterclockwise by the number of clicks corresponding to the fork type.

Guideline

Compression damping	
Comfort	18 clicks
Standard	15 clicks
Sport	12 clicks


**i Info**

Turn clockwise to increase damping; turn counterclockwise to reduce damping.

## 11.13 Adjusting the rebound damping of the fork

**i Info**

The hydraulic rebound damping determines the fork suspension behavior.

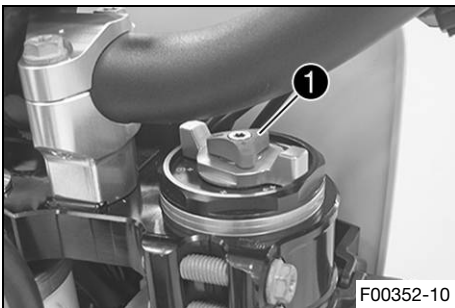

- Turn red adjusting screw ❶ clockwise as far as it will go.

**i Info**

Adjusting screw ❶ is located at the upper end of the right fork leg. The rebound damping is located in right fork leg **REB** (red adjusting screw). The compression damping is located in left fork leg **COM** (white adjusting screw).

- Turn counterclockwise by the number of clicks corresponding to the fork type.


Guideline

Rebound damping	
Comfort	18 clicks
Standard	15 clicks
Sport	12 clicks

**i Info**

Turn clockwise to increase damping; turn counterclockwise to reduce damping.

## 11.14 Adjusting the spring preload of the fork

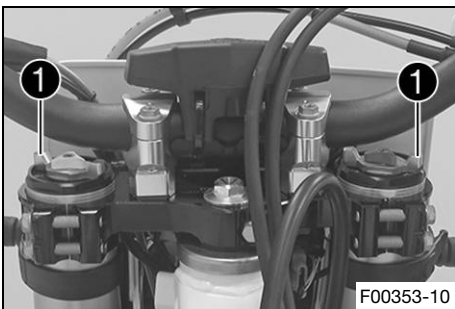

**Preparatory work**

- Raise the motorcycle with a lift stand. (📖 p. 44)

**Main work**

- Turn the adjusting wings ❶ counterclockwise all the way.
- ✓ The marking **+0** aligns with the right wing.

**i Info**

Make the adjustment by hand only. Do not use a tool. Make the same adjustment on both fork legs.

- Turn the adjusting wings clockwise.

Guideline

Spring preload - Preload Adjuster	
Comfort	+0
Standard	+0
Sport	+3


✓ The adjusting wings engage noticeably at the numerical values.

**i Info**  
 Adjust the spring preload to the numerical values only as the preload will not engage between the numerical values.  
 Turn clockwise to increase the spring preload; turn counterclockwise to reduce the spring preload.  
 Adjusting the spring preload has no influence on the absorption setting of the rebound damping.  
 Basically, however, you should set the rebound damping higher with a higher spring preload.

**Finishing work**

- Remove the motorcycle from the lift stand. (📖 p. 44)

## 11.15 Handlebar position

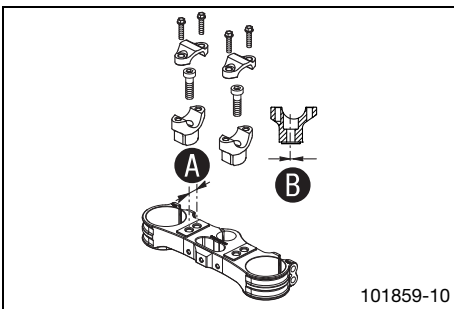

On the upper triple clamp, there are two holes at a distance of **A** to each other.

Hole distance <b>A</b>	15 mm (0.59 in)
------------------------	-----------------

The holes on the handlebar supports are placed at a distance of **B** from the center.

Hole distance <b>B</b>	3.5 mm (0.138 in)
------------------------	-------------------


The handlebar supports can be mounted in four different positions.

## 11.16 Adjusting the handlebar position

**⚠ Warning**  
**Danger of accidents** A repaired handlebar poses a safety risk.

If the handlebar is bent or straightened, the material becomes fatigued. The handlebar may break as a result.

- Change the handlebar if the handlebar is damaged or bent.

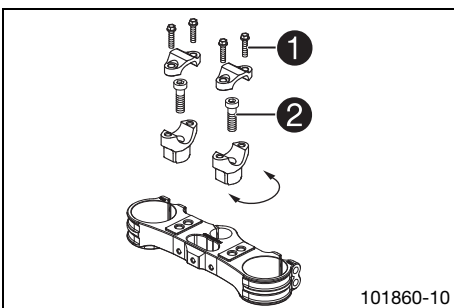

- Remove screws **1**. Take off the handlebar clamps. Take off the handlebar and lay it to one side.

**i Info**  
 Cover the components to protect them against damage.  
 Do not bend the cables and lines.

- Remove screws **2**. Take off the handlebar supports.
- Place the handlebar supports in the required position. Mount and tighten screws **2**.

Guideline

Screw, handlebar holder	M10	40 Nm (29.5 lbf ft)	<b>Loctite® 243™</b>
-------------------------	-----	------------------------	----------------------

**i Info**  
 Position the left and right handlebar holders evenly.

- Position the handlebar.

**i Info**  
 Make sure the cables and wiring are positioned correctly.

- Position the handlebar clamps. Mount and tighten screws **1** evenly.


Guideline

Screw, handlebar clamp	M8	20 Nm (14.8 lbf ft)
------------------------	----	---------------------

**Info**

Make sure the gap width is even.

## 12.1 Raising the motorcycle with a lift stand

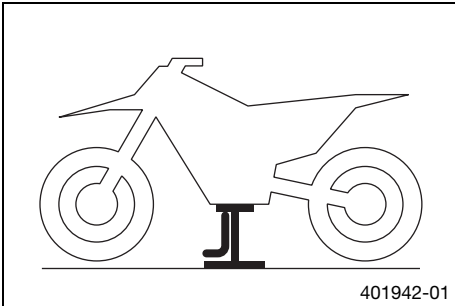

### Note

**Danger of damage** The parked vehicle can roll away or fall over.

- Park the vehicle on a firm and level surface.

- Raise the motorcycle at the frame underneath the engine.

Lift stand (81329955100)

- ✓ Neither wheel is in contact with the ground.


- Secure the motorcycle against falling over.

## 12.2 Removing the motorcycle from the lift stand

### Note

**Danger of damage** The parked vehicle can roll away or fall over.

- Park the vehicle on a firm and level surface.

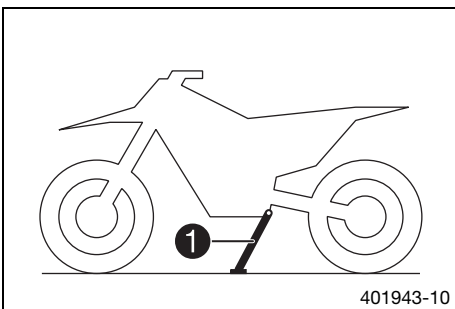

- Remove the motorcycle from the lift stand.


- Remove the lift stand.

- To park the motorcycle, press side stand (1) to the ground with your foot and lean the motorcycle on it.

### Info

When you are riding, the side stand must be folded up and secured with the rubber band.

## 12.3 Bleeding the fork legs

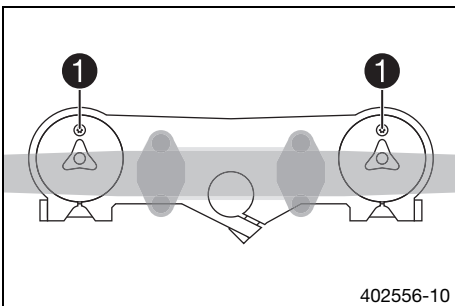

### Preparatory work

- Raise the motorcycle with a lift stand. (📖 p. 44)

### Main work

- Release bleeder screws (1).

✓ Any excess pressure escapes from the interior of the fork.

- Tighten the bleeder screws.

### Finishing work

- Remove the motorcycle from the lift stand. (📖 p. 44)

## 12.4 Cleaning the dust boots of the fork legs

### Preparatory work

- Raise the motorcycle with a lift stand. (📖 p. 44)

- Remove the fork protector. (📖 p. 45)

### Main work

- Push dust boots (1) of both fork legs downward.

### Info

The dust boots remove dust and coarse dirt particles from the inside fork tubes. Over time, dirt can accumulate behind the dust boots. If this dirt is not removed, the oil seals behind can start to leak.





**Warning**

**Danger of accidents** Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.

- Clean and oil the dust boots and inner fork tubes of both fork legs.


Universal oil spray (📖 p. 117)

- Press the dust boots back into their normal position.
- Remove excess oil.

**Finishing work**


- Install the fork protector. (📖 p. 45)
- Remove the motorcycle from the lift stand. (📖 p. 44)

## 12.5 Removing the fork protector

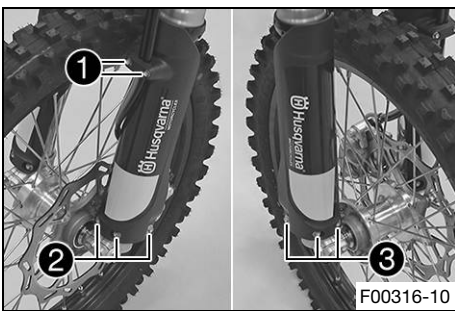

- Remove screws ❶ and take off the clamp.
- Remove screws ❷ on the left fork leg and take off the left fork protector.
- Remove screws ❸ on the right fork leg and take off the right fork protector.

## 12.6 Installing the fork protector

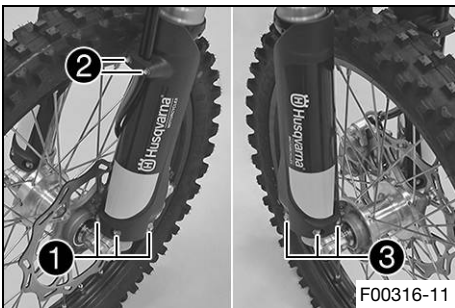

- Position the fork protector on the left fork leg. Mount and tighten screws ❶.
- Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------

- Position the brake line, wiring harness, and clamp. Mount and tighten screws ❷.
- Position the fork protector on the right fork leg. Mount and tighten screws ❸.

Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------


## 12.7 Removing the fork legs ↘

**Preparatory work**


- Switch off all power consumers and switch off the engine.
- Remove the headlight mask with the headlight. (📖 p. 88)
- Raise the motorcycle with a lift stand. (📖 p. 44)
- Remove the front wheel. ↘ (📖 p. 79)

**Main work**

- Remove screws ❶ and take off the clamp.
- Remove the cable tie(s).
- Remove screws ❷ and take off the brake caliper.
- Allow the brake caliper and brake line to hang loosely to the side.

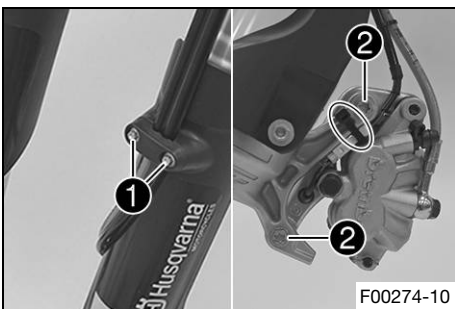




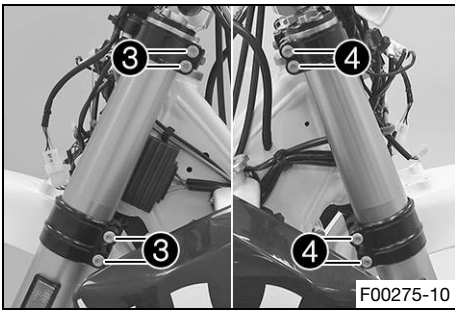

- Loosen screws 3. Take out the left fork leg.
- Loosen screws 4. Take out the right fork leg.

## 12.8 Installing the fork legs

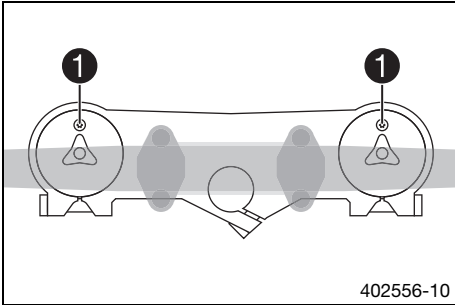


### Main work

- Position the fork legs.
- ✓ Bleeder screws 1 are positioned toward the front.

### Info

The compression damping is located in left fork leg **COM** (white adjusting screw). The rebound damping is located in right fork leg **REB** (red adjusting screw).

Grooves are milled into the side of the upper end of the fork legs. The second milled groove (from the top) must be flush with the top edge of the upper triple clamp.

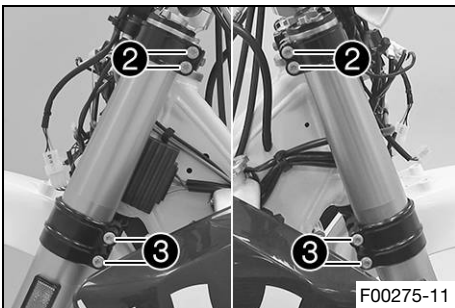

- Tighten screws 2.


### Guideline

Screw, top triple clamp	M8	17 Nm (12.5 lbf ft)
-------------------------	----	---------------------

- Tighten screws 3.

### Guideline

Screw, bottom triple clamp	M8	12 Nm (8.9 lbf ft)
----------------------------	----	--------------------

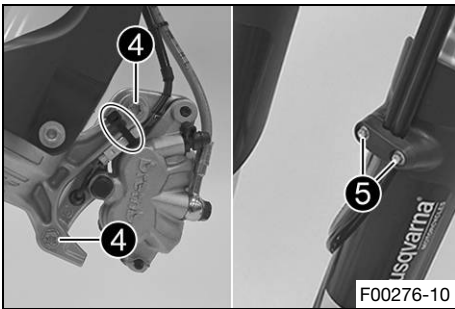

- Position the brake caliper, and mount and tighten screws 4.

### Guideline

Screw, front brake caliper	M8	25 Nm (18.4 lbf ft)	<b>Loctite® 243™</b>
----------------------------	----	---------------------	----------------------

- Mount the cable tie(s).
- Position the brake line, wiring harness, and clamp. Mount and tighten screws 5.

### Finishing work


- Install the front wheel. (📖 p. 79)
- Install the headlight mask with the headlight. (📖 p. 89)
- Check the headlight setting. (📖 p. 90)

## 12.9 Removing the lower triple clamp

### Preparatory work

- Switch off all power consumers and switch off the engine.
- Remove the headlight mask with the headlight. (📖 p. 88)
- Raise the motorcycle with a lift stand. (📖 p. 44)
- Remove the front wheel. (📖 p. 79)
- Remove the fork legs. (📖 p. 45)
- Remove the front fender. (📖 p. 50)
- Remove the handlebar cushion.




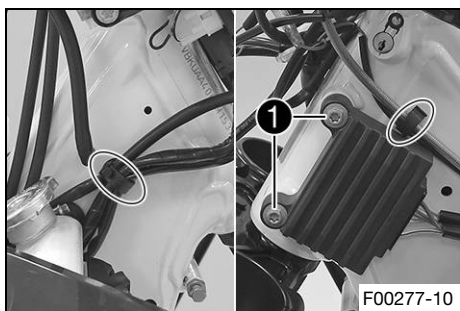

F00277-10

**Main work**

- Open the cable holder in front of the right radiator and detach the wiring harness.
- Remove screws **1** and hang the voltage regulator to the side.
- Open the cable holder in front of the left radiator and detach the wiring harness.

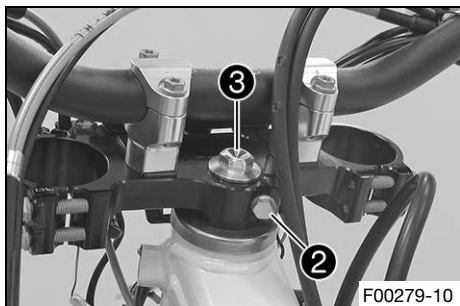


F00279-10

- Remove screw **2**.
- Remove screw **3**.
- Take off the upper triple clamp with the handlebar and set it aside.

**i Info**


Cover the components to protect them against damage.  
Do not kink the cables and lines.

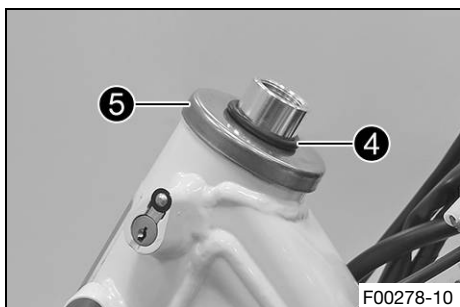

F00278-10

- Remove O-ring **4** and protective ring **5**.
- Take off the lower triple clamp with the steering stem.
- Remove the upper steering head bearing.

## 12.10 Installing the lower triple clamp

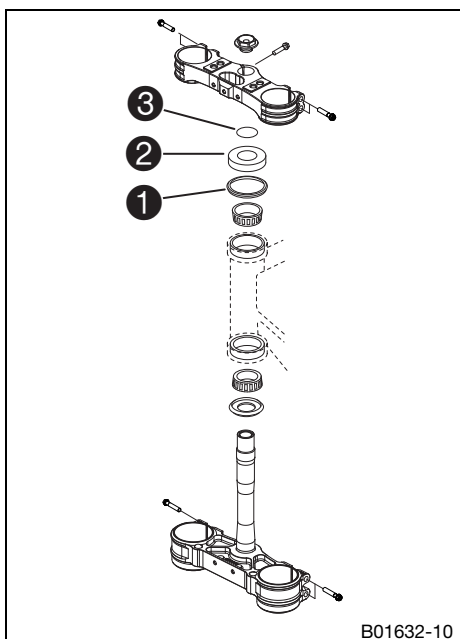


B01632-10

**Main work**

- Clean the bearing and sealing elements, check for damage, and grease.


High viscosity grease (🗨️ p. 117)

- Position the lower triple clamp with the steering stem. Mount the upper steering head bearing.
- Check whether upper steering head seal **1** is correctly positioned.
- Mount protective ring **2** and O-ring **3**.

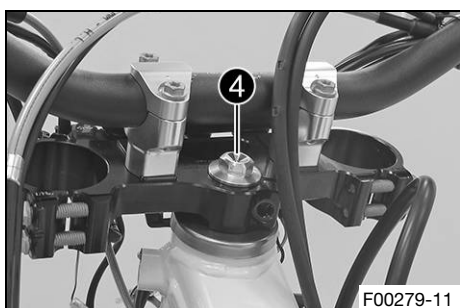

F00279-11

- Position the upper triple clamp with the handlebar.
- Mount screw **4** but do not tighten yet.

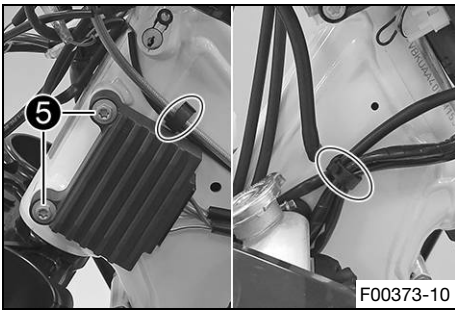


F00373-10

- Secure wiring harness and clutch line with cable holder.
- Position the voltage regulator, and mount and tighten screws **5**.

Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------

- Secure the wiring harness with the cable holder in front of the right radiator.

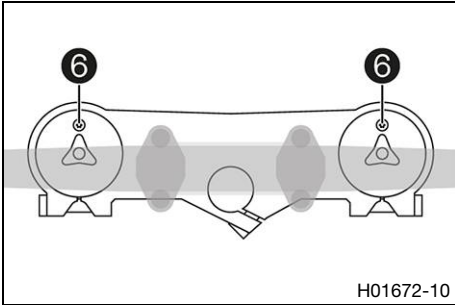


H01672-10

- Position the fork legs.
- ✓ Bleeder screws **6** are positioned toward the front.

**i Info**

The rebound damping is located in right fork leg **REB** (red adjusting screw). The compression damping is located in left fork leg **COM** (white adjusting screw). Grooves are milled into the side of the upper end of the fork legs. The second milled groove (from the top) must be flush with the top edge of the upper triple clamp.

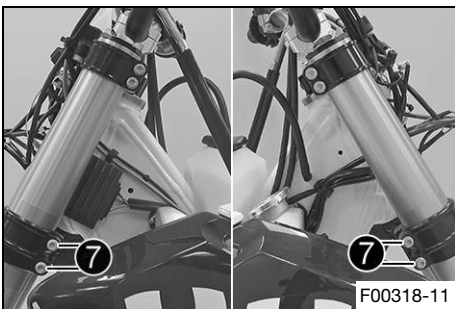


F00318-11

- Tighten screws **7**.

Guideline

Screw, bottom triple clamp	M8	12 Nm (8.9 lbf ft)
----------------------------	----	--------------------

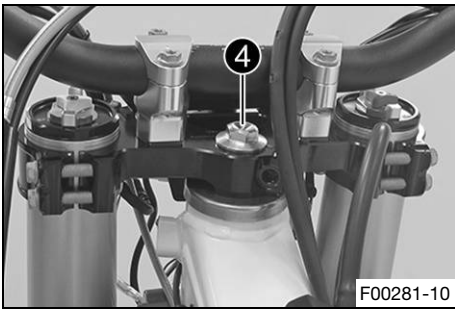


F00281-10

- Tighten screw **4**.

Guideline

Screw, top steering head	M20x1.5	12 Nm (8.9 lbf ft)
--------------------------	---------	--------------------

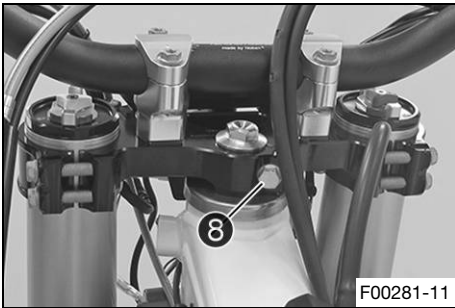


F00281-11

- Mount and tighten screw **8**.

Guideline

Screw, top steering stem	M8	20 Nm (14.8 lbf ft)	<b>Loctite® 243™</b>
--------------------------	----	---------------------	----------------------

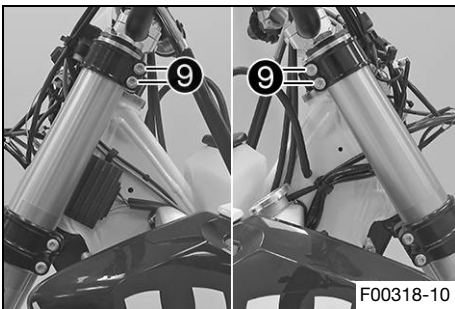


F00318-10

- Tighten screws **9**.

Guideline

Screw, top triple clamp	M8	17 Nm (12.5 lbf ft)
-------------------------	----	---------------------

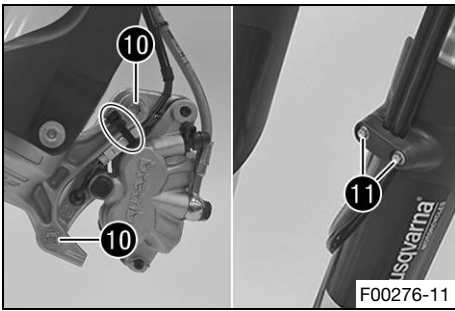

- Position the brake caliper, and mount and tighten screws 10.

Guideline

Screw, front brake caliper	M8	25 Nm (18.4 lbf ft)	Loctite® 243™
----------------------------	----	------------------------	---------------

- Mount the cable tie(s).
- Position the brake line, wiring harness, and clamp. Mount and tighten screws 11.

**Finishing work**


- Mount the handlebar cushion.
- Install the front fender. (📖 p. 51)
- Install the front wheel. 🛠️ (📖 p. 79)
- Install the headlight mask with the headlight. (📖 p. 89)
- Check that the wiring harness, throttle cables, and brake and clutch lines can move freely and are routed correctly.
- Check the play of the steering head bearing. (📖 p. 49)
- Remove the motorcycle from the lift stand. (📖 p. 44)
- Check the headlight setting. (📖 p. 90)

## 12.11 Checking the play of the steering head bearing

**Warning**  
**Danger of accidents** Incorrect steering head bearing play impairs the handling characteristic and damages components.

- Correct incorrect steering head bearing play immediately. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

**i Info**  
 If the vehicle is operated for a lengthy period with play in the steering head bearing, the bearings and the bearing seats in the frame can become damaged over time.

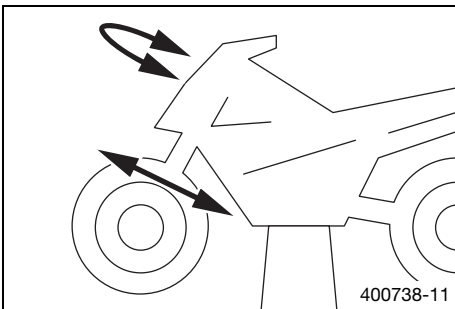

**Preparatory work**

- Raise the motorcycle with a lift stand. (📖 p. 44)

**Main work**

- Move the handlebar to the straight-ahead position. Move the fork legs to and fro in the direction of travel.

Play should not be detectable on the steering head bearing.

- » If there is detectable play:
  - Adjust the steering head bearing play. 🛠️ (📖 p. 50)
- Move the handlebar to and fro over the entire steering range.


It must be possible to move the handlebar easily over the entire steering range. There should be no detectable detent positions.

- » If detent positions are detected:
  - Adjust the steering head bearing play. 🛠️ (📖 p. 50)
  - Check the steering head bearing and replace if necessary.

**Finishing work**

- Remove the motorcycle from the lift stand. (📖 p. 44)

## 12.12 Adjusting the steering head bearing play

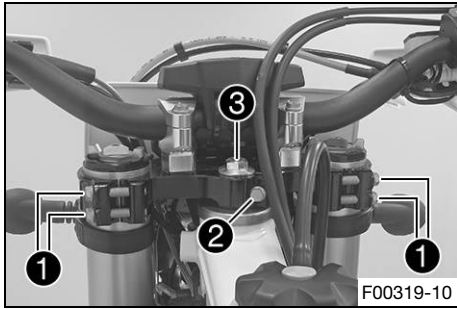

### Preparatory work

- Raise the motorcycle with a lift stand. (p. 44)

### Main work

- Loosen screws ①.
- Remove screw ②.
- Loosen and retighten screw ③.

#### Guideline

Screw, top steering head	M20x1.5	12 Nm (8.9 lbf ft)
--------------------------	---------	--------------------

- Using a plastic hammer, tap lightly on the upper triple clamp to avoid stresses.
- Tighten screws ①.

#### Guideline

Screw, top triple clamp	M8	17 Nm (12.5 lbf ft)
-------------------------	----	---------------------

- Mount and tighten screw ②.


#### Guideline

Screw, top steering stem	M8	20 Nm (14.8 lbf ft)	<b>Loctite® 243™</b>
--------------------------	----	---------------------	----------------------

### Finishing work


- Check the play of the steering head bearing. (p. 49)
- Remove the motorcycle from the lift stand. (p. 44)

## 12.13 Lubricating the steering head bearing

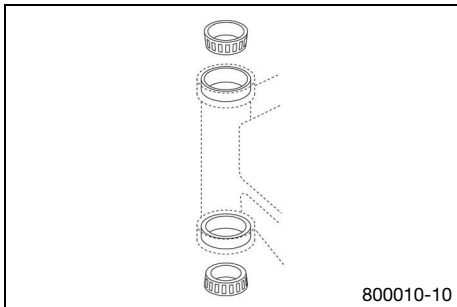

- Remove the lower triple clamp. (p. 46)
- Install the lower triple clamp. (p. 47)

## 12.14 Removing the front fender

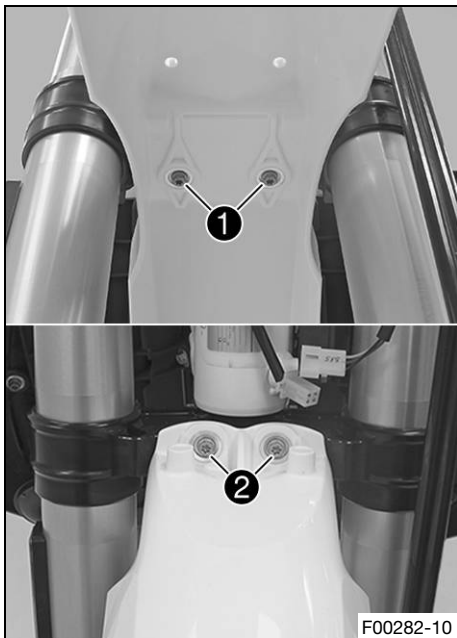


### Preparatory work

- Switch off all power consumers and switch off the engine.
- Remove the headlight mask with the headlight. (p. 88)

### Main work

- Remove screws ①.
- Remove screws ②. Remove the front fender.

## 12.15 Installing the front fender

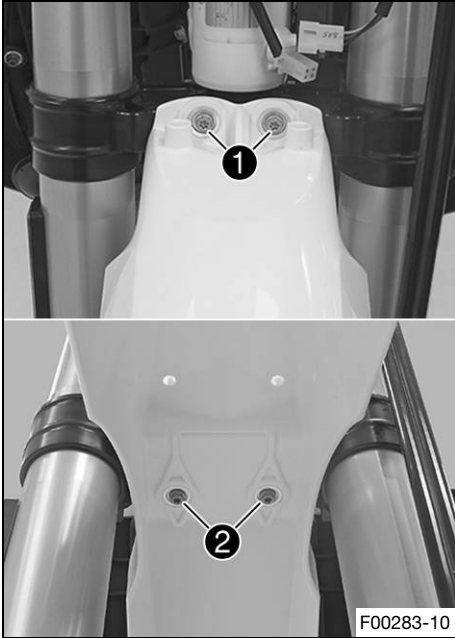

### Main work

- Position the front fender. Mount and tighten screws ①.

#### Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------

- Mount and tighten screws ②.


#### Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------

### Finishing work

- Install the headlight mask with the headlight. (📖 p. 89)
- Check the headlight setting. (📖 p. 90)

## 12.16 Removing the shock absorber

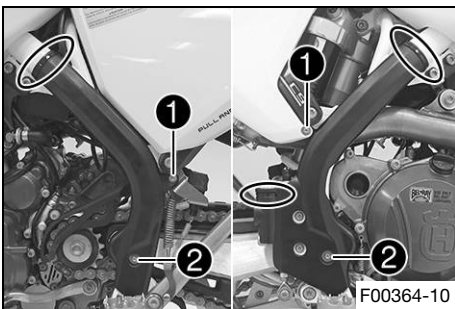


### Preparatory work

- Raise the motorcycle with a lift stand. (📖 p. 44)

### Main work


- Remove the cable ties.
- Remove screws ①.
- Remove screws ② with the washers.
- Remove the frame protectors on the left and right.

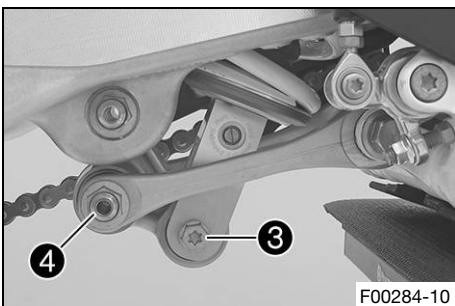

- Remove screw ③.
- Remove fitting ④.


### Info

Raise the wheel slightly to be able to remove the screws more easily.

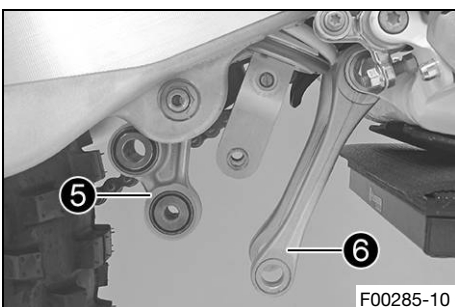


- Press angle lever ⑤ toward the rear.
- Press linkage lever ⑥ downward.




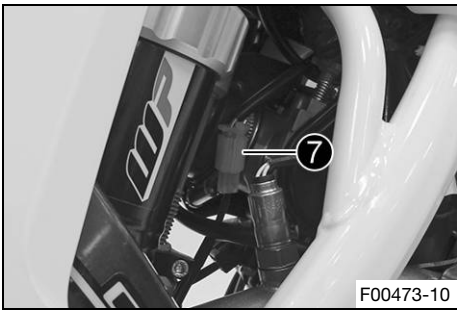


- Disconnect plug-in connector 7.

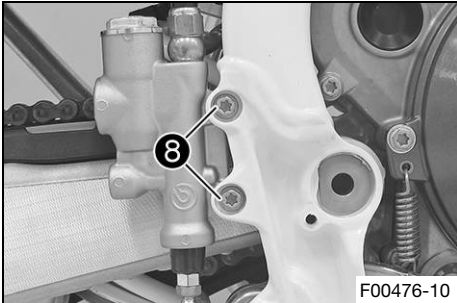


- Remove screws 8.
- Pull off foot brake cylinder from the push rod.

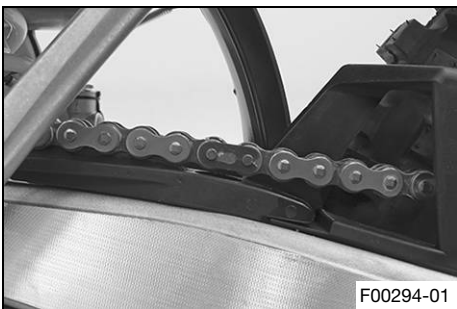

- Remove the connecting link of the chain.
- Take off the chain.

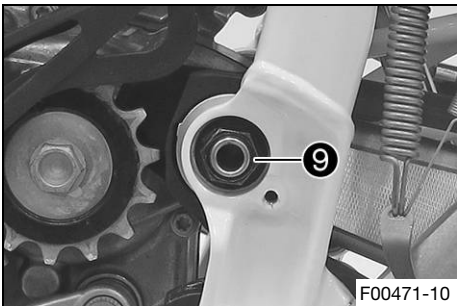


- Remove nut 9 and pull out the swingarm pivot.
- Push the swingarm back and secure it against falling over.

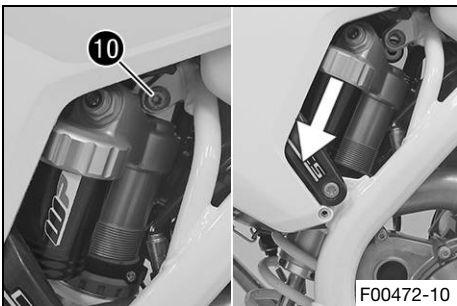

- Hold the shock absorber and remove screw 10.
- Remove the shock absorber carefully at the bottom.

## 12.17 Installing the shock absorber ↱

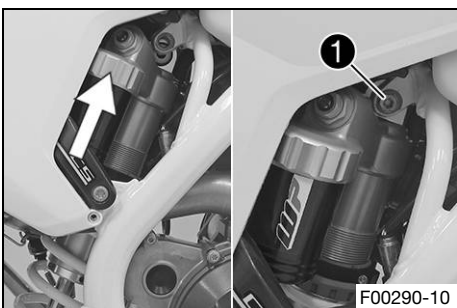


### Main work

- Carefully position the shock absorber into the vehicle from the bottom.
- Mount and tighten screw 1.

### Guideline

Screw, top shock absorber	M10	60 Nm (44.3 lbf ft)	Loctite® 2701™
---------------------------	-----	------------------------	----------------

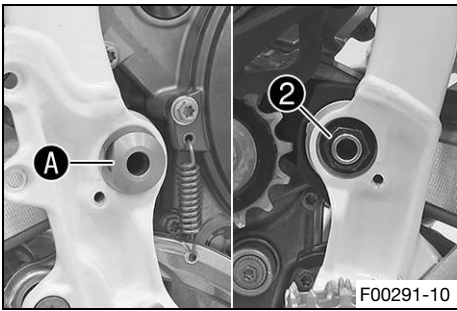


- Position the swingarm and mount the swingarm pivot.

**i Info**  
Pay attention to flat area **A**.

- Mount and tighten nut **2**.

Guideline


Nut, swingarm pivot	M16x1.5	100 Nm (73.8 lbf ft)
---------------------	---------	-------------------------

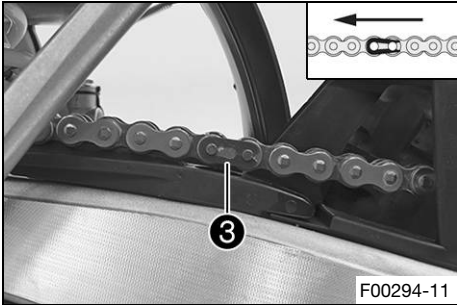


- Mount the chain.
- Connect the chain with connecting link **3**.

Guideline

The closed side of the chain joint lock must face in the direction of travel.
---

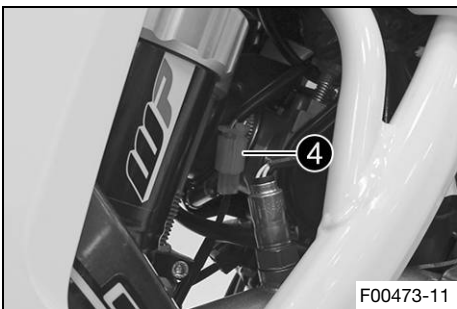

- Connect plug-in connector **4**.

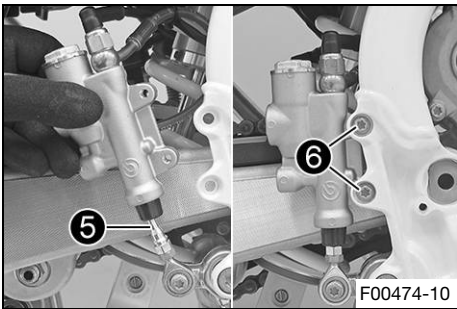


- Position the foot brake cylinder.
- ✓ Push rod **5** engages in the foot brake cylinder.
- ✓ The dust boot is correctly positioned.

- Mount and tighten screws **6**.

Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------

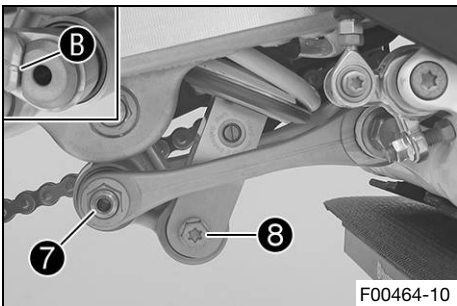

- Position the angle lever and linkage lever.

- Mount and tighten fitting **7**.

Guideline

Nut, linkage lever on angle lever	M14x1.5	80 Nm (59 lbf ft)
-----------------------------------	---------	-------------------


**i Info**  
Pay attention to flat area **B**.

- Mount and tighten screw **8**.

Guideline

Screw, bottom shock absorber	M10	60 Nm (44.3 lbf ft)	<b>Loctite® 2701™</b>
------------------------------	-----	------------------------	-----------------------

**i Info**  
Raise the wheel slightly to be able to mount the screw more easily.

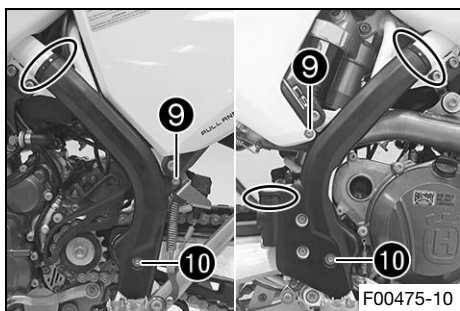

- Position the frame protectors on the left and right.
- Mount and tighten screws 9.

**Guideline**

Screw, frame protector	M5	3 Nm (2.2 lbf ft)
------------------------	----	-------------------

- Mount and tighten screws 10 with the washers.

**Guideline**


Screw, frame protector	M5	3 Nm (2.2 lbf ft)
------------------------	----	-------------------

- Mount the new cable ties.

**Finishing work**

- Check the free travel of the foot brake lever. (📖 p. 74)
- Remove the motorcycle from the lift stand. (📖 p. 44)

## 12.18 Removing the seat

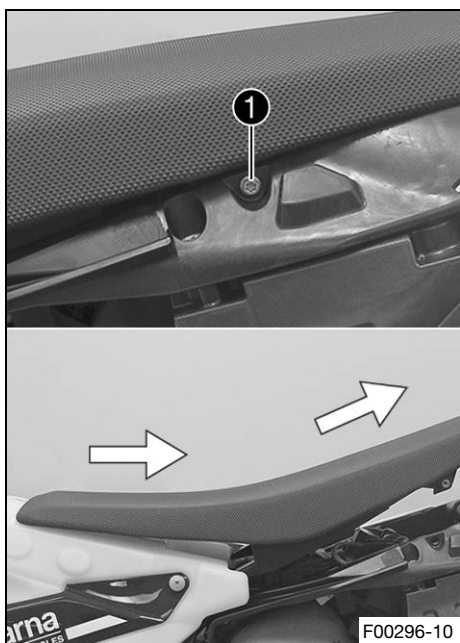


**Preparatory work**

- Remove the air filter box cover. (📖 p. 55)

**Main work**

- Remove screw 1.
- Pull seat back and lift it off.

## 12.19 Mounting the seat

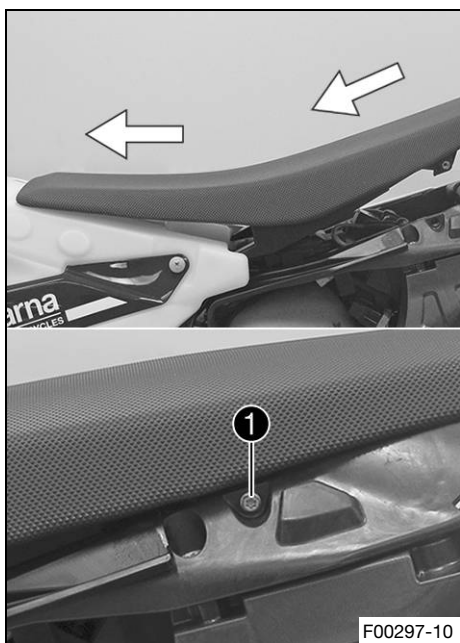

**Main work**

- Mount the front of the seat on the collar bushing of the fuel tank, lower the seat at the rear, and push the seat forward.
- Make sure that the seat is correctly locked in.
- Mount and tighten screw 1.

**Guideline**


Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------

**Finishing work**

- Install the air filter box cover. (📖 p. 55)




## 12.20 Removing the air filter box cover

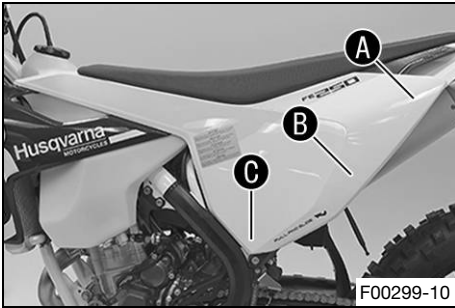

- Pull off the air filter box cover sideways in areas **A**, **B** and **C**, and remove toward the front.

## 12.21 Installing the air filter box cover

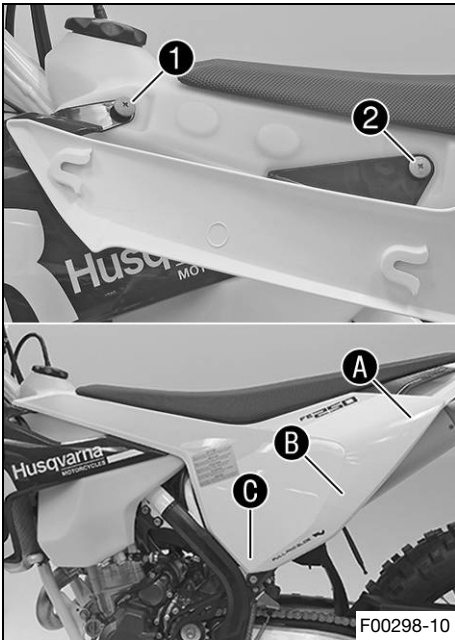

- Position air filter box cover on collar bushings **1** and **2** and push toward the rear.
- Engage the air filter box cover in areas **A**, **B** and **C**.

## 12.22 Removing the air filter

### Note

**Engine damage** Unfiltered intake air has a negative effect on the service life of the engine. Dust and dirt will enter the engine without an air filter.

- Never start to use the vehicle without an air filter.



### Warning

**Environmental hazard** Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.

### Preparatory work


- Remove the air filter box cover. (p. 55)

### Main work

- Detach retaining tab **1**. Remove air filter with air filter support.
- Remove air filter from air filter support.



## 12.23 Installing the air filter

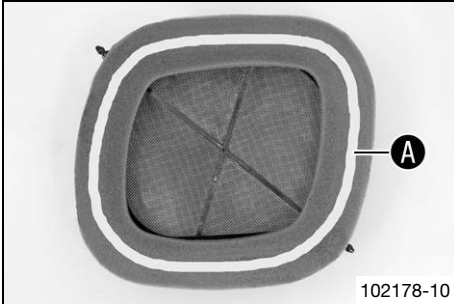

### Main work

- Mount the clean air filter on the air filter support.
- Grease the air filter in area **A**.

Long-life grease (📖 p. 117)



- Insert air filter and position retaining pin **1** in bushing **B**.  
✓ The air filter is correctly positioned.
- Insert retaining tab **3**.  
✓ Retaining pin **2** is secured by retaining tab **3**.

### Info

If the air filter is not mounted correctly, dust and dirt may enter the engine and result in damage.

### Finishing work

- Install the air filter box cover. (📖 p. 55)

## 12.24 Cleaning the air filter and air filter box



### Warning

**Environmental hazard** Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.



### Info

Do not clean the air filter with fuel or petroleum since these substances attack the foam.

### Preparatory work

- Remove the air filter box cover. (📖 p. 55)
- Remove the air filter. (📖 p. 55)

### Main work

- Wash the air filter thoroughly in special cleaning liquid and allow it to dry properly.

Air filter cleaning agent (📖 p. 117)

### Info

Only press the air filter to dry it, never wring it out.



- Oil the dry air filter with a high quality filter oil.

Oil for foam air filter (📖 p. 117)

- Clean the air filter box.
- Check the intake flange for damage and looseness.

### Finishing work

- Install the air filter. (📖 p. 56)
- Install the air filter box cover. (📖 p. 55)


## 12.25 Sealing the air filter box ↗

### Preparatory work

- Remove the air filter box cover. (📖 p. 55)

### Main work


- Seal the air filter box in the marked area **A**.

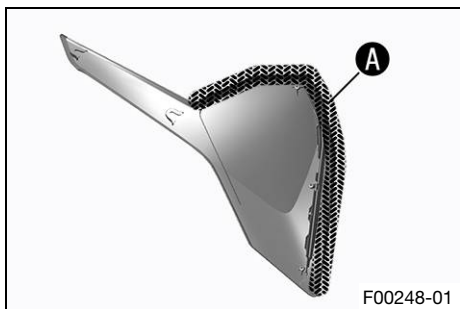

### Finishing work


- Install the air filter box cover. (📖 p. 55)

## 12.26 Removing the right side cover

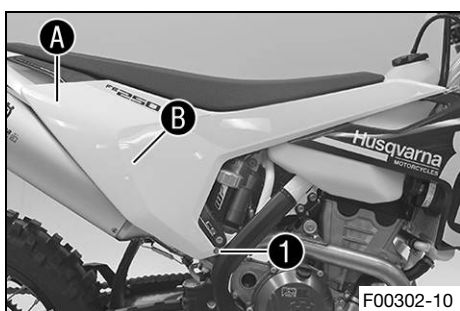

- Remove screw **1**.
- Pull off the side cover sideways in areas **A** and **B**, and remove toward the front.

## 12.27 Installing the right side cover

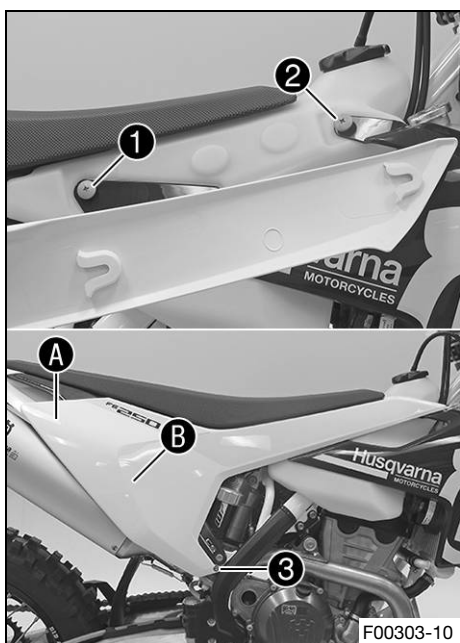

- Position the side cover on collar bushings **1** and **2**, and push toward the rear.
- Engage the side cover in areas **A** and **B**.
- Mount and tighten screw **3**.

### Guideline


Remaining screws, chassis	M5	5 Nm (3.7 lbf ft)
---------------------------	----	-------------------

## 12.28 Removing the main silencer

**Warning**

**Danger of burns** The exhaust system gets very hot when the vehicle is driven.

- Allow the exhaust system to cool down before performing any work on the vehicle.

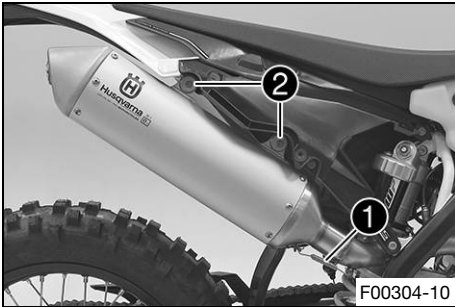

**Preparatory work**

- Remove the right side cover. (📖 p. 57)


**Main work**

- Disconnect spring ①.

Spring hook (50305017000)
---------------------------

- Remove screws ② and take off the main silencer.

## 12.29 Installing the main silencer

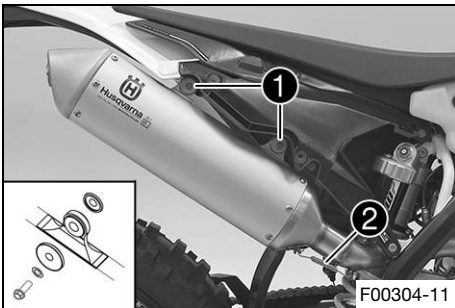

**Main work**

- Position the main silencer. Mount screws ① but do not tighten yet.

- Attach spring ②.

Spring hook (50305017000)
---------------------------

- Tighten screws ①.

**Guideline**

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------

**Finishing work**

- Install the right side cover. (📖 p. 57)

## 12.30 Changing the glass fiber yarn filling in the main silencer ↴

**Warning**

**Danger of burns** The exhaust system gets very hot when the vehicle is driven.

- Allow the exhaust system to cool down before performing any work on the vehicle.


**i Info**

Over time, the fibers of the glass fiber yarn escape and the damper "burns" out. Not only is the noise level higher, the performance characteristic changes.

**Preparatory work**

- Remove the right side cover. (📖 p. 57)

- Remove the main silencer. (📖 p. 58)

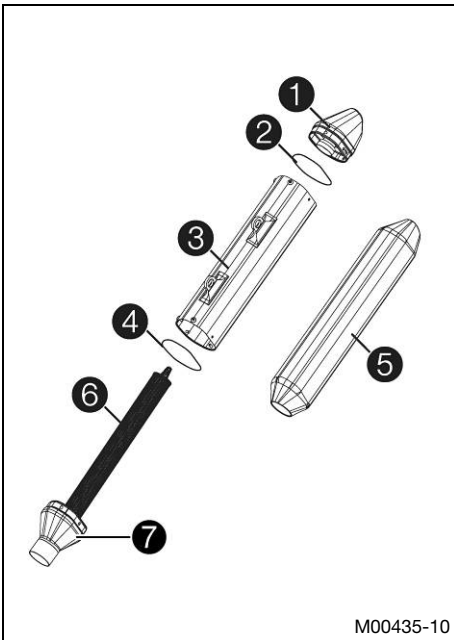

M00435-10

### Main work

- Remove all screws on the main silencer.
- Take off silencer cap ① and O-ring ②.
- Take off outer tube ③ and O-ring ④.
- Remove glass fiber yarn filling ⑤ from inner tube ⑥.
- Clean the parts that need to be reinstalled and check for damage.
- Fit the new glass fiber yarn filling onto the inner tube.
- Mount O-ring ④ onto connecting cap ⑦.
- Position the inner tube with the connecting cap and glass fiber yarn filling in the outer tube.
- Mount O-ring ② on the silencer cap.
- Position the silencer cap with O-ring ② in the outer tube.
- Mount and tighten all of the screws.

### Guideline

Screws on the main silencer	M5	7 Nm (5.2 lbf ft)
-----------------------------	----	-------------------

### Finishing work

- Install the main silencer. (📖 p. 58)
- Install the right side cover. (📖 p. 57)

## 12.31 Removing the fuel tank ↴



### Danger

**Fire hazard** Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not refuel the vehicle in the vicinity of open flames or lit cigarettes.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it off immediately.
- Observe the specifications for refueling.



### Warning

**Danger of poisoning** Fuel is poisonous and a health hazard.

- Avoid skin, eye and clothing contact with fuel.
- Immediately consult a doctor if you swallow fuel.
- Do not inhale fuel vapors.
- In case of skin contact, rinse the affected area with plenty of water.
- Rinse the eyes thoroughly with water, and consult a doctor in case of fuel contact with the eyes.
- Change your clothing in case of fuel spills on them.
- Keep fuels correctly in a suitable canister, and out of the reach of children.

### Preparatory work

- Remove the air filter box cover. (📖 p. 55)
- Remove the seat. (📖 p. 54)
- Remove the right side cover. (📖 p. 57)


### Main work

- Unplug connector ① of the fuel pump.
- Clean plug-in connection ② of the fuel line thoroughly with compressed air.




### Info

Under no circumstances should dirt enter into the fuel line. Dirt in the fuel line clogs the injection valve!

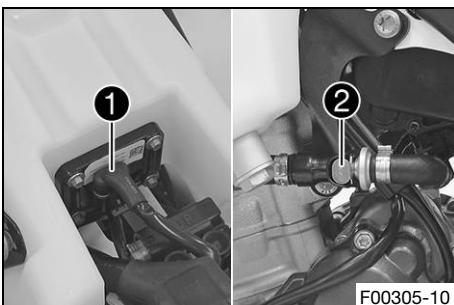

F00305-10

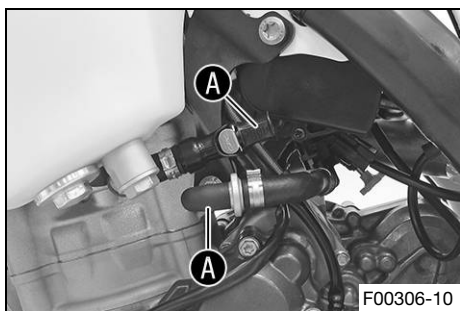

- Disconnect the plug-in connection of the fuel line.




**Info**

Remaining fuel may flow out of the fuel hose.


- Mount wash cap set **A**.

Wash cap set (81212016100)


- Remove the tube from the fuel tank breather.

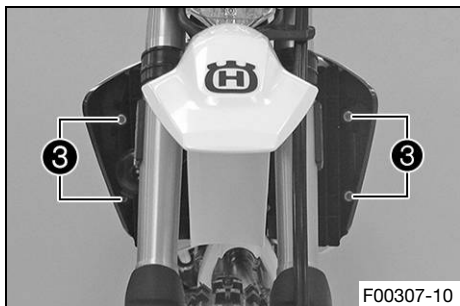

- Remove screws **3** with the collar bushings.
- Hang the horn and horn bracket to one side.

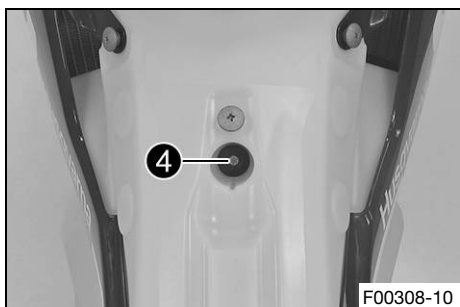

- Remove screw **4** with the rubber bushing.

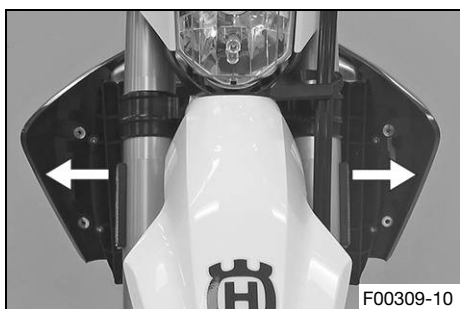

- Pull both spoilers off the sides of the radiator bracket and lift off the fuel tank.

## 12.32 Installing the fuel tank ↻



**Danger**

**Fire hazard** Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not refuel the vehicle in the vicinity of open flames or lit cigarettes.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it off immediately.
- Observe the specifications for refueling.



**Warning**



**Danger of poisoning** Fuel is poisonous and a health hazard.

- Avoid skin, eye and clothing contact with fuel.
- Immediately consult a doctor if you swallow fuel.
- Do not inhale fuel vapors.
- In case of skin contact, rinse the affected area with plenty of water.
- Rinse the eyes thoroughly with water, and consult a doctor in case of fuel contact with the eyes.
- Change your clothing in case of fuel spills on them.



### Main work


- Check throttle cable routing. (📖 p. 66)
- Position the fuel tank and fit the two spoilers to the sides in front of the radiator bracket.
- Make sure that no cables or throttle cables are trapped or damaged.

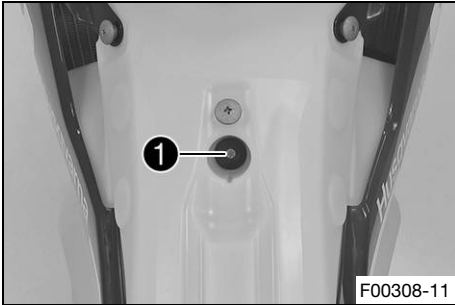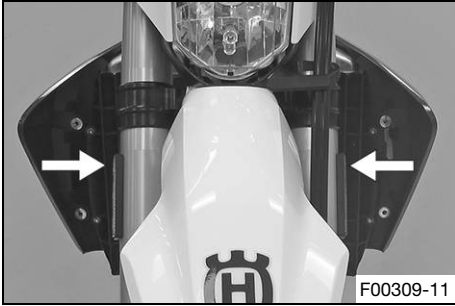

- Attach the fuel tank breather hose.
- Mount and tighten screw **1** with the rubber bushing.

#### Guideline


Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------

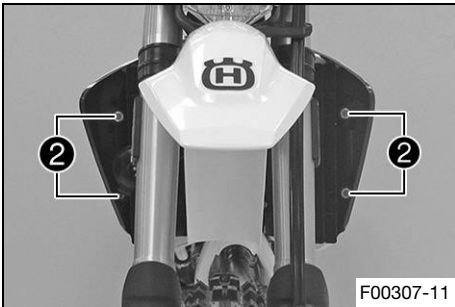

- Position the horn with the horn bracket.
- Mount and tighten screws **2** with the collar bushings.

#### Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------

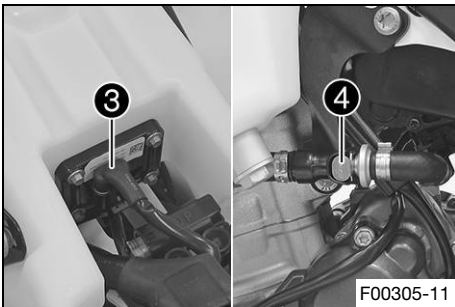

- Plug in connector **3** for the fuel pump.
- Remove the wash cap set.
- Thoroughly clean the plug-in connection of the fuel line using compressed air.

#### **i** Info

Under no circumstances should dirt enter into the fuel line. Dirt in the fuel line clogs the injection valve!

- Lubricate the O-ring and connect plug-in connection **4** for the fuel line.


#### **i** Info

Route the cable and fuel line at a safe distance from the exhaust system.

### Finishing work

- Mount the seat. (📖 p. 54)
- Install the air filter box cover. (📖 p. 55)
- Install the right side cover. (📖 p. 57)

### 12.33 Checking for chain dirt accumulation

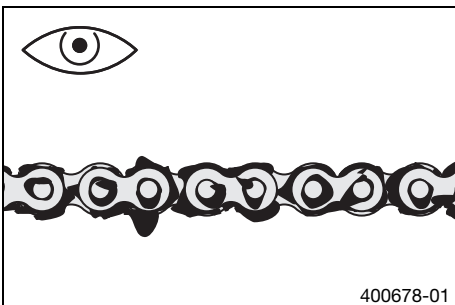


- Check the chain for coarse dirt accumulation.
  - » If the chain is very dirty:
    - Clean the chain. (📖 p. 62)

## 12.34 Cleaning the chain

- Warning**  
**Danger of accidents** Oil or grease on the tires reduces the road grip.
- Remove the lubricant from the tires using a suitable cleaning agent.
- Warning**  
**Danger of accidents** Oil or grease on the brake discs reduces the braking effect.
- Always keep the brake discs free of oil and grease.
  - Clean the brake discs with brake cleaner when necessary.
- Warning**  
**Environmental hazard** Hazardous substances cause environmental damage.
- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.

- Info**  
The service life of the chain depends largely on its maintenance.

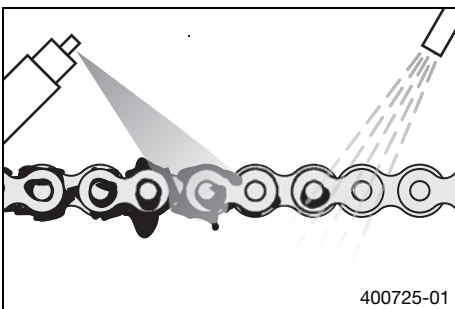

### Preparatory work

- Raise the motorcycle with a lift stand. (📖 p. 44)

### Main work

- Clean the chain regularly and then treat with chain spray.

Offroad chain spray (📖 p. 117)

### Finishing work

- Remove the motorcycle from the lift stand. (📖 p. 44)


## 12.35 Checking the chain tension

- Warning**  
**Danger of accidents** Incorrect chain tension damages components and results in accidents.
- If the chain is tensioned too much, the chain, engine sprocket, rear sprocket, transmission and rear wheel bearings wear more quickly. Some components may break if overloaded.
- If the chain is too loose, the chain may fall off the engine sprocket or the rear sprocket. As a result, the rear wheel locks or the engine will be damaged.
- Check the chain tension regularly.
  - Set the chain tension in accordance with the specification.

### Preparatory work

- Raise the motorcycle with a lift stand. (📖 p. 44)



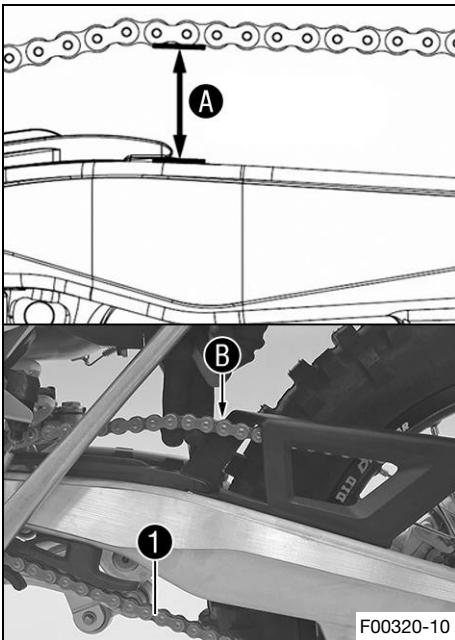

**Main work**

- Pull the chain at the end of the chain sliding piece upward to measure chain tension **A**.

**i Info**

The lower chain section **1** must be taut. When the chain guard is mounted, it must be possible to pull up the chain at least to the point where it makes contact with chain guard **B**. Chain wear is not always even, so you should repeat this measurement at different chain positions.

Chain tension	55... 58 mm (2.17... 2.28 in)
---------------	-------------------------------

- » If the chain tension does not meet the specification:
  - Adjust the chain tension. (📖 p. 63)

**Finishing work**

- Remove the motorcycle from the lift stand. (📖 p. 44)

**12.36 Adjusting the chain tension**

**⚠ Warning**

**Danger of accidents** Incorrect chain tension damages components and results in accidents.

If the chain is tensioned too much, the chain, engine sprocket, rear sprocket, transmission and rear wheel bearings wear more quickly. Some components may break if overloaded.

If the chain is too loose, the chain may fall off the engine sprocket or the rear sprocket. As a result, the rear wheel locks or the engine will be damaged.

- Check the chain tension regularly.
- Set the chain tension in accordance with the specification.

**Preparatory work**

- Raise the motorcycle with a lift stand. (📖 p. 44)
- Check the chain tension. (📖 p. 62)

**Main work**

- Loosen nut **1**.
- Loosen nuts **2**.
- Adjust the chain tension by turning adjusting screws **3** left and right.

**Guideline**

Chain tension	55... 58 mm (2.17... 2.28 in)	
Turn adjusting screws <b>3</b> on the left and right so that the markings on the left and right chain adjusters are in the same position relative to reference marks <b>A</b> . The rear wheel is then correctly aligned.		


- Tighten nuts **2**.
- Make sure that the chain adjusters **4** are fitted correctly on the adjusting screws **3**.
- Tighten nut **1**.

**Guideline**

Nut, rear wheel spindle	M20x1.5	80 Nm (59 lbf ft)
-------------------------	---------	-------------------

**i Info**


The wide adjustment range of the chain adjusters (32 mm (1.26 in)) enables different secondary ratios with the same chain length. Chain adjusters **4** can be turned by 180°.

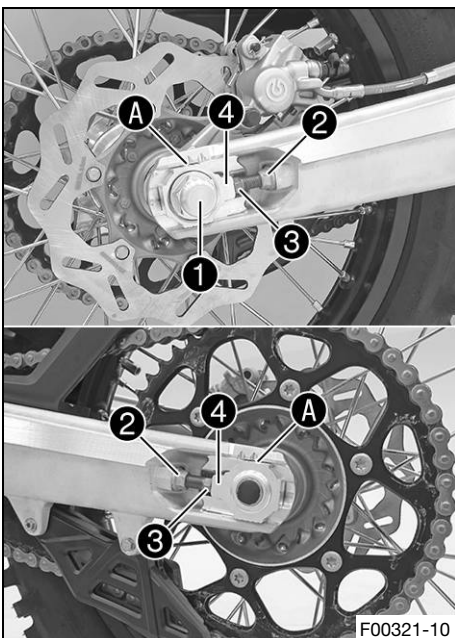

### Finishing work

- Remove the motorcycle from the lift stand. (📖 p. 44)

## 12.37 Checking the chain, rear sprocket, engine sprocket, and chain guide

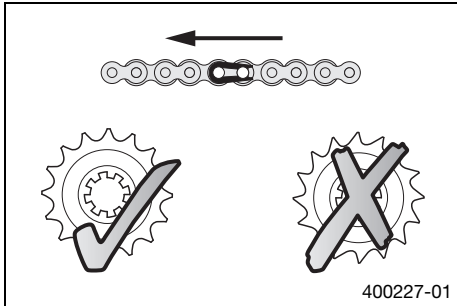

### Preparatory work

- Raise the motorcycle with a lift stand. (📖 p. 44)

### Main work

- Shift the transmission to idle.
- Check the rear sprocket and engine sprocket for wear.
  - » If the rear sprocket and engine sprocket are worn:
    - Change the drivetrain kit. 🛠️



#### Info

The engine sprocket, rear sprocket, and chain should always be replaced together.

- Pull at the top part of the chain with the specified weight **A**.

#### Guideline

Weight of chain wear measurement	10... 15 kg (22... 33 lb.)
----------------------------------	----------------------------

- Measure distance **B** of 18 chain rollers in the lower chain section.



#### Info

Chain wear is not always even, so you should repeat this measurement at different chain positions.

Maximum distance <b>B</b> at the longest chain section	272 mm (10.71 in)
--	-------------------



- » If distance **B** is greater than the specified measurement:

- Change the drivetrain kit. 🛠️



#### Info


When the chain is replaced, the rear sprocket and engine sprocket should also be changed.  
New chains wear out faster on old, worn sprockets.

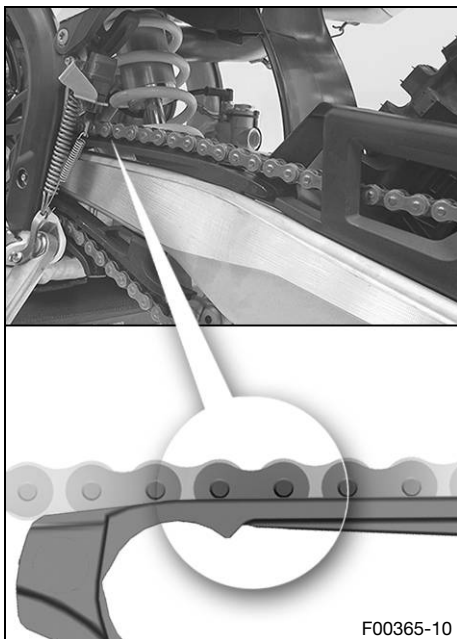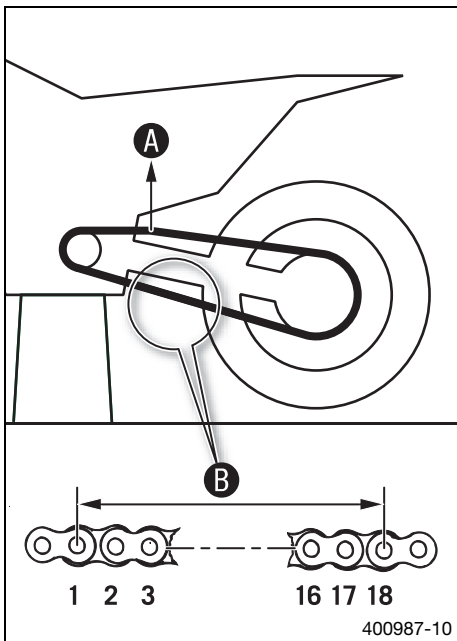

- Check the chain sliding guard for wear.
  - » If the lower edge of the chain pins is in line with or below the chain sliding guard:
    - Change the chain sliding guard. 🛠️
- Check that the chain sliding guard is firmly seated.
  - » If the chain sliding guard is loose:
    - Tighten the screws on the chain sliding guard.

#### Guideline

Screw, chain sliding guard	M6	6 Nm (4.4 lbf ft)	<b>Loctite® 243™</b>
----------------------------	----	----------------------	----------------------

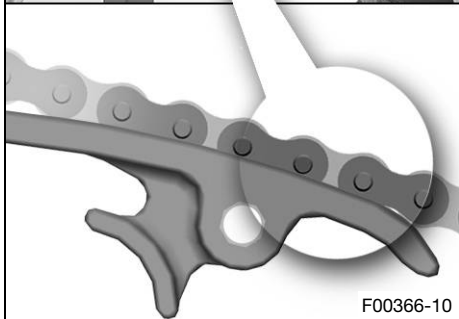


F00366-10

- Check the chain sliding piece for wear.
  - » If the lower edge of the chain pins is in line with or below the chain sliding piece:
    - Change the chain sliding piece. 🛠️
- Check that the chain sliding piece is firmly seated.
  - » If the chain sliding piece is loose:
    - Tighten the screw of the chain sliding piece.

Guideline

Screw, chain sliding piece	M8	15 Nm (11.1 lbf ft)
----------------------------	----	------------------------

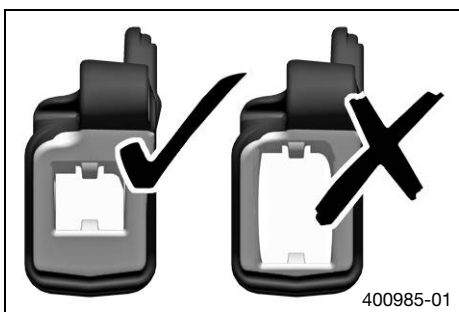


400985-01

- Check the chain guide for wear.

**i Info**

Wear can be seen on the front of the chain guide.

- » If the light part of the chain guide is worn:
  - Change the chain guide. 🛠️

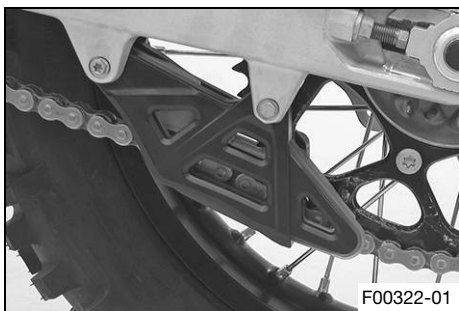

F00322-01

- Check that the chain guide is firmly seated.
  - » If the chain guide is loose:
    - Tighten the fitting on the chain guide.


Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
Remaining nuts, chassis	M6	10 Nm (7.4 lbf ft)

**Finishing work**

- Remove the motorcycle from the lift stand. (📖 p. 44)

**12.38 Checking the frame 🛠️**

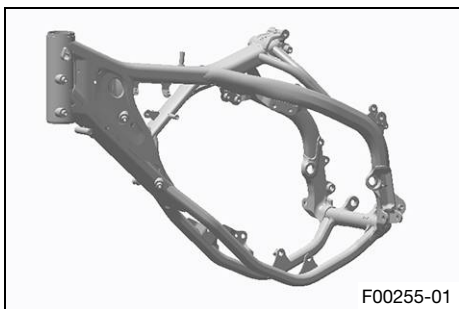

F00255-01


- Check the frame for cracks and deformation.
  - » If the frame exhibits cracks or deformation due to a mechanical impact:
    - Change the frame. 🛠️

**i Info**

Always replace a frame that has been damaged due to a mechanical impact. Repair of the frame is not authorized by Husqvarna Motorcycles.

## 12.39 Checking the swingarm



- Check the swingarm for damage, cracking, and deformation.
- » If the swingarm shows signs of damage, cracking, or deformation:
  - Change the swingarm. 








### Info

Always change a damaged swingarm. Repair of the swingarm is not authorized by Husqvarna Motorcycles.

## 12.40 Checking throttle cable routing

### Preparatory work

- Remove the air filter box cover. ( p. 55)
- Remove the seat. ( p. 54)
- Remove the right side cover. ( p. 57)
- Remove the fuel tank.  ( p. 59)

### Main work






- Check throttle cable routing.

Both throttle cables must be routed, side by side, on the back of the handlebars and above the fuel tank bracket, to the throttle valve body. Both throttle cables must be secured behind the fuel tank contact area rubber band.


- » If the throttle cable routing is not as specified:
  - Correct throttle cable routing.



### Finishing work

- Install the fuel tank.  ( p. 60)
- Mount the seat. ( p. 54)
- Install the air filter box cover. ( p. 55)
- Install the right side cover. ( p. 57)

## 12.41 Checking the rubber grip

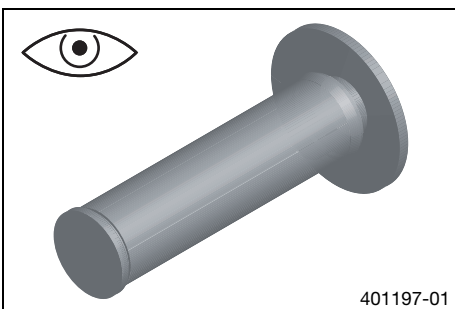

- Check the rubber grips on the handlebar for damage, wear, and looseness.




### Info

The rubber grips are vulcanized onto a sleeve on the left and onto the handle tube of the throttle grip on the right. The left sleeve is clamped onto the handlebar.

The rubber grip can only be replaced with the sleeve or the throttle tube.

- » If a rubber grip is damaged, worn, or loose:
  - Change the rubber grip.

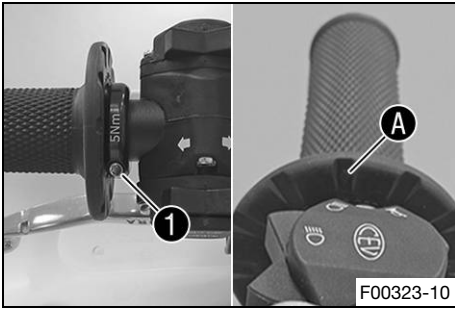


- Check that screw ① is firmly seated.

Guideline

Screw, fixed grip	M4	5 Nm (3.7 lbf ft)	Loctite® 243™
-------------------	----	----------------------	---------------

Diamond ① must be located at the top.

## 12.42 Adjusting the basic position of the clutch lever

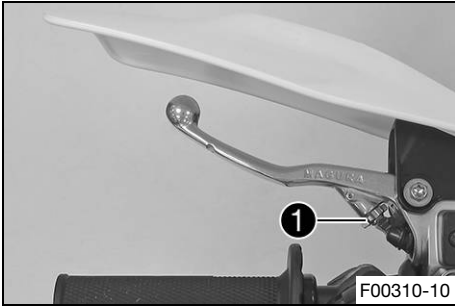

- Adjust the basic setting of the clutch lever to your hand size by turning adjusting screw ①.

### **i** Info

Turn the adjusting screw clockwise to increase the distance between the clutch lever and the handlebar.

Turn the adjusting screw counterclockwise to decrease the distance between the clutch lever and the handlebar.

The range of adjustment is limited.

Turn the adjusting screw by hand only, and do not apply any force.

Do not make any adjustments while riding!

## 12.43 Checking/correcting the fluid level of the hydraulic clutch

### **!** Warning

**Skin irritation** Brake fluid causes skin irritation.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.

### **i** Warning

**Environmental hazard** Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.


### **i** Info

The fluid level rises with increasing wear of the clutch facing discs.

Never use DOT 5 brake fluid. It is silicone-based and purple in color. Oil seals and clutch lines are not designed for DOT 5 brake fluid.

Avoid contact between brake fluid and painted parts. Brake fluid attacks paint.

Only use clean brake fluid from a sealed container.

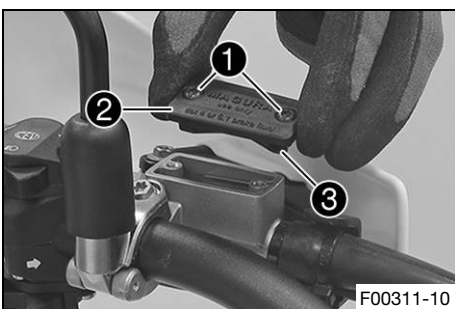

- Move the clutch fluid reservoir mounted on the handlebar to a horizontal position.
- Remove screws ①.
- Remove cover ② with membrane ③.
- Check the fluid level.

Fluid level below container rim	4 mm (0.16 in)
---------------------------------	----------------

» If the level of the fluid does not meet specifications:

- Correct the fluid level of the hydraulic clutch.

Brake fluid DOT 4 (📖 p. 116)



- Position the cover with the membrane. Mount and tighten the screws.



**Info**

Clean up overflowed or spilled brake fluid immediately with water.

## 12.44 Changing the hydraulic clutch fluid



**Warning**

**Skin irritation** Brake fluid causes skin irritation.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



**Warning**

**Environmental hazard** Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.




**Info**


Never use DOT 5 brake fluid. It is silicone-based and purple in color. Oil seals and clutch lines are not designed for DOT 5 brake fluid.

Avoid contact between brake fluid and painted parts. Brake fluid attacks paint.

Only use clean brake fluid from a sealed container.

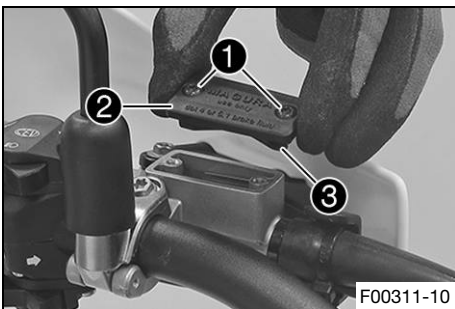


- Move the clutch fluid reservoir mounted on the handlebar to a horizontal position.
- Remove screws ①.
- Remove cover ② with membrane ③.

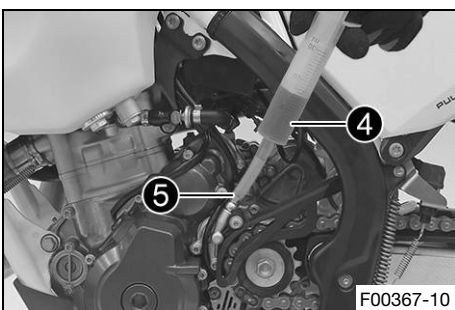

- Fill bleeding syringe ④ with the appropriate hydraulic fluid.

Bleed syringe (50329050000)
Brake fluid DOT 4 (p. 116)

- On the clutch slave cylinder, remove bleeder screw ⑤ and mount bleeding syringe ④.

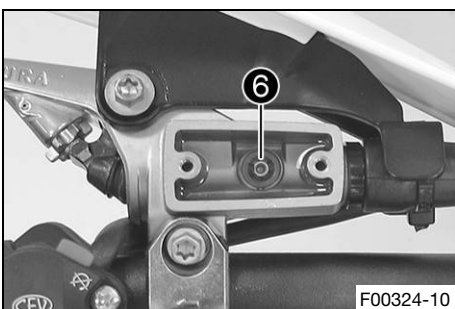

- Now inject the liquid into the system until it emerges from drill hole ⑥ of the master cylinder without bubbles.
- Now and then, extract fluid from the master cylinder reservoir to prevent overflow.
- Remove the bleeding syringe. Mount and tighten screws bleeder screw.
- Correct the fluid level of the hydraulic clutch.

**Guideline**

Fluid level below container rim	4 mm (0.16 in)
---------------------------------	----------------


- Position the cover with the membrane. Mount and tighten the screws.



**Info**


Clean up overflowed or spilled brake fluid immediately with water.

## 12.45 Removing the engine guard

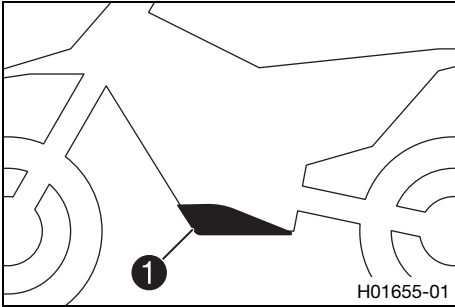

- Remove screws **1** and engine guard.

## 12.46 Installing the engine guard

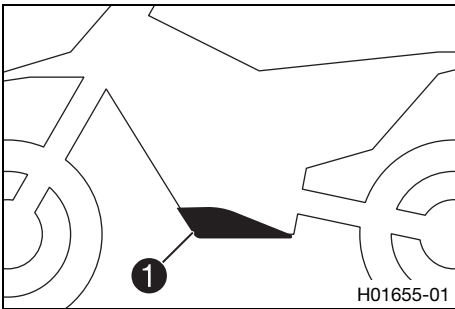

- Attach the engine guard on the frame at the rear and swing up at the front.
- Mount and tighten screws **1**.

Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------

## 13.1 Checking free travel of hand brake lever




### Warning

**Danger of accidents** The brake system fails in the event of overheating.

If there is no free travel on the hand brake lever, pressure builds up on the front brake circuit.

- Set the free travel on the hand brake lever in accordance with the specification.

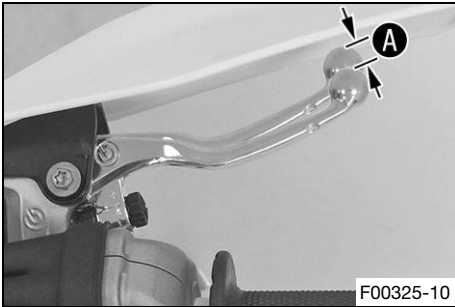


- Push the hand brake to the handlebar and check free travel **A**.

Free travel of hand brake lever	$\geq 3 \text{ mm } (\geq 0.12 \text{ in})$
---------------------------------	---

- » If the free travel does not meet specifications:
  - Adjust the free travel of the hand brake lever. (🔧 p. 70)

## 13.2 Adjusting free travel of hand brake lever

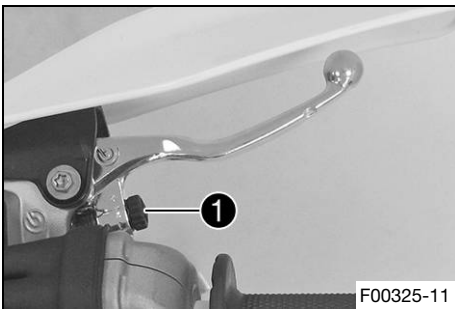

- Check the free travel of the hand brake lever. (🔧 p. 70)
- Adjust the free travel of the hand brake lever with adjusting screw **1**.



### Info

Turn the adjusting screw clockwise to reduce free travel. The pressure point moves away from the handlebar.

Turn the adjusting screw counterclockwise to increase free travel. The pressure point moves towards the handlebar.

The range of adjustment is limited.

Turn the adjusting screw by hand only, and do not apply any force.

Do not make any adjustments while riding!


## 13.3 Checking the brake discs



### Warning

**Danger of accidents** Worn-out brake discs reduce the braking effect.

- Make sure that worn-out brake discs are replaced immediately. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

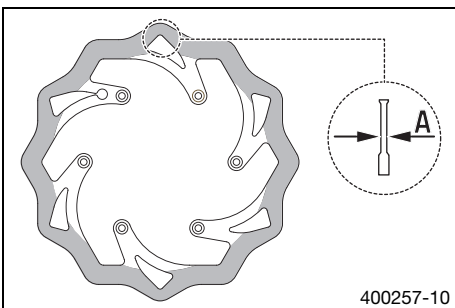

- Check the thickness of the front and rear brake discs at multiple points on each brake disc to ensure it is at least thickness **A**.



### Info

Wear reduces the thickness of the brake disc around the area used by the brake linings.

Brake discs - wear limit	
Front	2.5 mm (0.098 in)
Rear	3.5 mm (0.138 in)


- » If the brake disc thickness is less than the specified value:
  - Change the front brake disc. 🛠️
  - Change the rear brake disc. 🛠️
- Check the front and rear brake discs for damage, cracking, and deformation.
  - » If the brake disc exhibits damage, cracking, or deformation:
    - Change the front brake disc. 🛠️
    - Change the rear brake disc. 🛠️



## 13.4 Checking the front brake fluid level

- Warning**  
**Danger of accidents** An insufficient brake fluid level will cause the brake system to fail.  
 If the brake fluid level drops below the specified marking or the specified value, the brake system is leaking or the brake linings are worn down.
- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

- Warning**  
**Danger of accidents** Old brake fluid reduces the braking effect.
- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

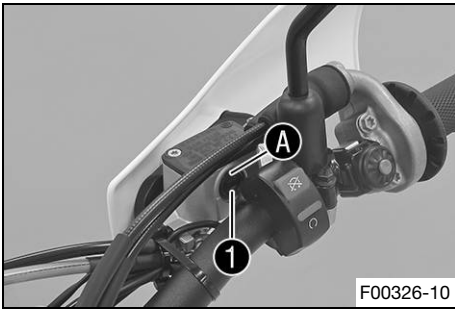

- Move the brake fluid reservoir mounted on the handlebar to a horizontal position.
- Check the brake fluid level in the viewer **1**.
  - » If the brake fluid level has dropped below marking **A**:
    - Add front brake fluid. 📖 (p. 71)

## 13.5 Adding front brake fluid 📖


- Warning**  
**Danger of accidents** An insufficient brake fluid level will cause the brake system to fail.  
 If the brake fluid level drops below the specified marking or the specified value, the brake system is leaking or the brake linings are worn down.
- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

- Warning**  
**Skin irritation** Brake fluid causes skin irritation.
- Keep brake fluid out of the reach of children.
  - Wear suitable protective clothing and safety glasses.
  - Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
  - Consult a doctor immediately if brake fluid has been swallowed.
  - Rinse the affected area with plenty of water in the event of contact with the skin.
  - Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
  - If brake fluid spills on to your clothing, change the clothing.

- Warning**  
**Danger of accidents** Old brake fluid reduces the braking effect.
- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

- Warning**  
**Environmental hazard** Hazardous substances cause environmental damage.
- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.

- Info**  
 Never use DOT 5 brake fluid. It is silicone-based and purple in color. Oil seals and brake lines are not designed for DOT 5 brake fluid.  
 Avoid contact between brake fluid and painted parts. Brake fluid attacks paint.  
 Only use clean brake fluid from a sealed container.

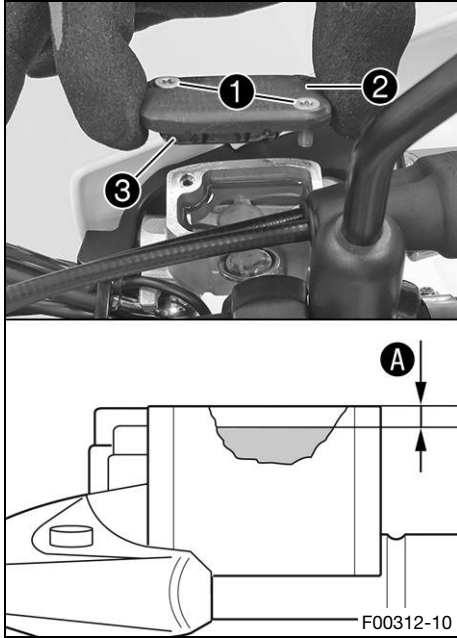

**Preparatory work**

- Check the front brake linings. (📖 p. 72)

**Main work**

- Move the brake fluid reservoir mounted on the handlebar to a horizontal position.
- Remove screws ①.
- Remove cover ② with membrane ③.
- Add brake fluid to level A.

**Guideline**

Level A (brake fluid level below reservoir rim)	5 mm (0.2 in)
---	---------------

Brake fluid DOT 4 (📖 p. 116)
------------------------------

- Position the cover with the membrane. Mount and tighten the screws.



**Info**


Clean up overflowed or spilled brake fluid immediately with water.

## 13.6 Checking the front brake linings

**Warning**

**Danger of accidents** Worn-out brake linings reduce the braking effect.

- Ensure that worn-out brake linings are replaced immediately. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

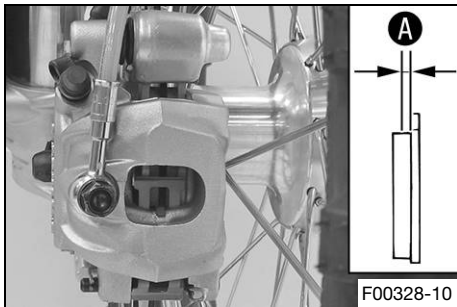

- Check the brake linings for minimum thickness A.

Minimum thickness A	≥ 1 mm (≥ 0.04 in)
---------------------	--------------------

- » If the minimum thickness is less than specified:
  - Change the front brake linings. 🛠️ (📖 p. 72)
- Check the brake linings for damage and cracking.
  - » If damage or cracking is visible:
    - Change the front brake linings. 🛠️ (📖 p. 72)

## 13.7 Changing the front brake linings 🛠️

**Warning**

**Danger of accidents** Incorrect maintenance will cause the brake system to fail.

- Ensure that service work and repairs are performed professionally. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

**Warning**

**Skin irritation** Brake fluid causes skin irritation.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.


- Warning**  
**Danger of accidents** Old brake fluid reduces the braking effect.
- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

- Warning**  
**Danger of accidents** Oil or grease on the brake discs reduces the braking effect.
- Always keep the brake discs free of oil and grease.
  - Clean the brake discs with brake cleaner when necessary.


- Warning**  
**Danger of accidents** Brake linings which have not been approved alter the braking efficiency.
- Not all brake linings are tested and approved for Husqvarna motorcycles. The structure and friction coefficient of the brake linings, and thus their brake power, may vary greatly from that of original brake linings. If brake linings are used that differ from the original equipment, compliance with the original homologation is not guaranteed. In this case, the vehicle no longer corresponds to its condition at delivery and the warranty shall be void.
- Only use brake linings approved and recommended by Husqvarna motorcycles.

- Warning**  
**Environmental hazard** Hazardous substances cause environmental damage.
- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.

- i Info**  
 Never use DOT 5 brake fluid. It is silicone-based and purple in color. Oil seals and brake lines are not designed for DOT 5 brake fluid.  
 Avoid contact between brake fluid and painted parts. Brake fluid attacks paint.  
 Only use clean brake fluid from a sealed container.

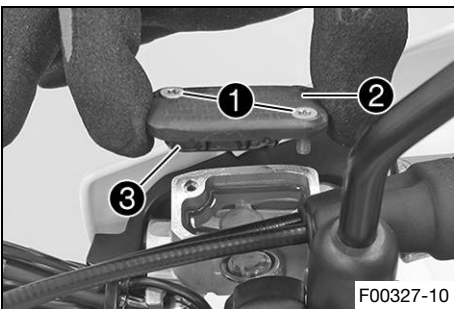


- Move the brake fluid reservoir mounted on the handlebar to a horizontal position.
- Remove screws **1**.
- Remove cover **2** with membrane **3**.

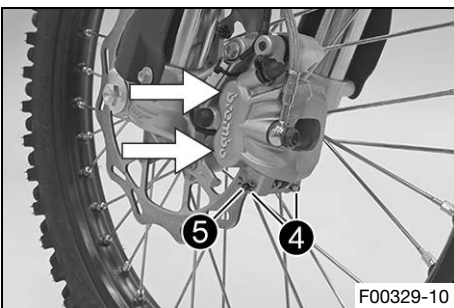


- Press the brake caliper onto the brake disc by hand in order to push back the brake pistons. Ensure that brake fluid does not flow out of the brake fluid reservoir, extracting it by suction if it does.

- i Info**  
 Make sure that you do not press the brake caliper against the spokes when pushing back the brake pistons.

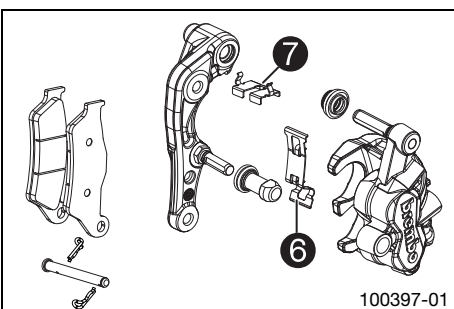

- Remove cotter pins **4**, pull out pin **5**, and remove the brake linings.
- Clean the brake caliper and brake caliper support.
- Check that leaf spring **6** in the brake caliper and sliding plate **7** in the brake caliper support are seated correctly.

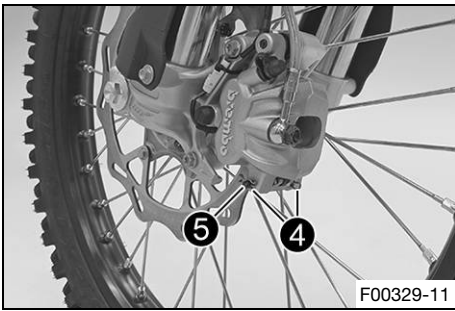


- Insert the new brake linings, insert pin 5, and mount cotter pins 4.



**Info**

Always change the brake linings in pairs.

- Operate the hand brake lever repeatedly until the brake linings are in contact with the brake disc and there is a pressure point.

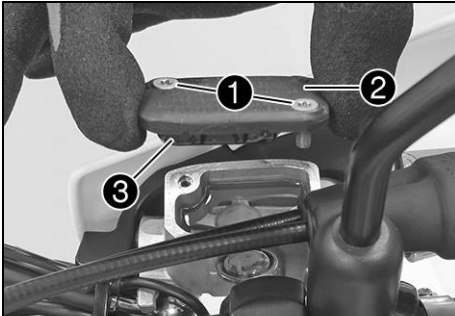

- Correct the brake fluid quantity to level A.

Guideline

Level A (brake fluid level below reservoir rim)	5 mm (0.2 in)
---	---------------


Brake fluid DOT 4 (📖 p. 116)

- Position cover 2 with membrane 3.
- Mount and tighten screws 1.



**Info**

Clean up overflowed or spilled brake fluid immediately with water.

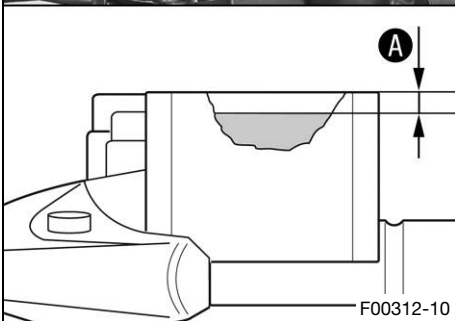


## 13.8 Checking the free travel of foot brake lever



**Warning**

**Danger of accidents** The brake system fails in the event of overheating. If there is no free travel on the foot brake lever, pressure builds up in the brake system on the rear brake.

- Set the free travel on the foot brake lever in accordance with the specification.

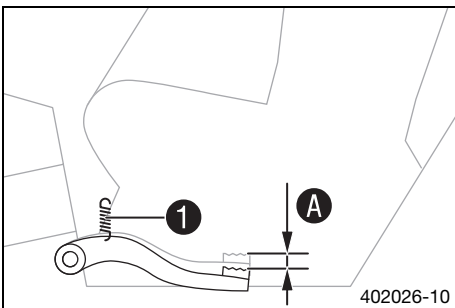

- Disconnect spring 1.
- Move the foot brake lever back and forth between the end stop and the contact to the foot brake cylinder piston and check free travel A.

Guideline

Free travel at foot brake lever	3... 5 mm (0.12... 0.2 in)
---------------------------------	----------------------------

- » If the free travel does not meet specifications:
  - Adjust the basic position of the foot brake lever. 🗨️ (📖 p. 74)
- Reconnect spring 1.


## 13.9 Adjusting the basic position of the foot brake lever 🗨️



**Warning**

**Danger of accidents** The brake system fails in the event of overheating. If there is no free travel on the foot brake lever, pressure builds up in the brake system on the rear brake.

- Set the free travel on the foot brake lever in accordance with the specification.

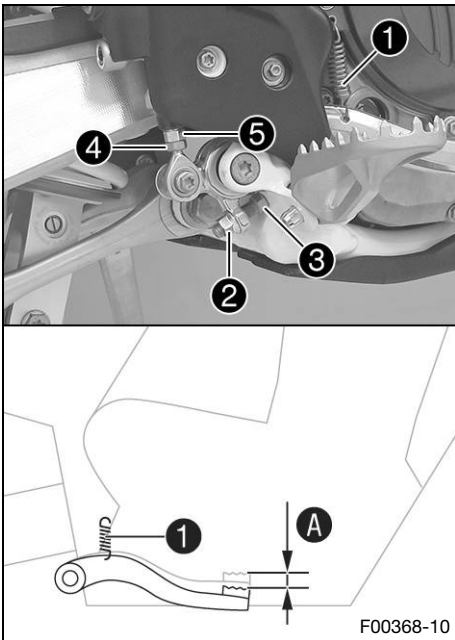

- Disconnect spring ①.
- Loosen nut ④ and, with push rod ⑤, turn it back until you have maximum free travel.
- To adjust the basic position of the foot brake lever individually, loosen nut ② and turn screw ③ accordingly.

**i Info**  
The range of adjustment is limited.

- Turn push rod ⑤ accordingly until you have free travel A. If necessary, adjust the basic position of the foot brake lever.

**Guideline**

Free travel at foot brake lever	3... 5 mm (0.12... 0.2 in)
---------------------------------	----------------------------

- Hold screw ③ and tighten nut ②.

**Guideline**

Nut, foot brake lever stop	M8	20 Nm (14.8 lbf ft)
----------------------------	----	---------------------

- Hold push rod ⑤ and tighten nut ④.

**Guideline**

Remaining nuts, chassis	M6	10 Nm (7.4 lbf ft)
-------------------------	----	--------------------

- Reconnect spring ①.


## 13.10 Checking the rear brake fluid level

**Warning**  
**Danger of accidents** An insufficient brake fluid level will cause the brake system to fail.  
If the brake fluid level drops below the specified marking or the specified value, the brake system is leaking or the brake linings are worn down.

- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

**Warning**  
**Danger of accidents** Old brake fluid reduces the braking effect.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

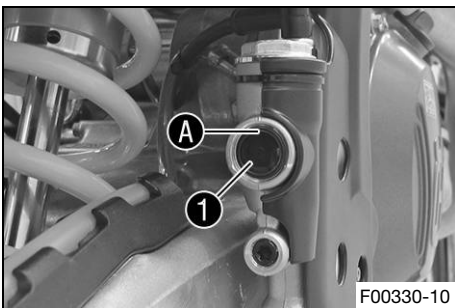

- Stand the vehicle upright.
- Check the brake fluid level in level viewer ①.
  - » If the brake fluid level has dropped below marking A:
    - Add rear brake fluid. 🛠️ (p. 75)

## 13.11 Adding rear brake fluid 🛠️

**Warning**  
**Danger of accidents** An insufficient brake fluid level will cause the brake system to fail.  
If the brake fluid level drops below the specified marking or the specified value, the brake system is leaking or the brake linings are worn down.

- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)





**Warning**

**Skin irritation** Brake fluid causes skin irritation.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



**Warning**

**Danger of accidents** Old brake fluid reduces the braking effect.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



**Warning**

**Environmental hazard** Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.




**Info**

Never use DOT 5 brake fluid. It is silicone-based and purple in color. Oil seals and brake lines are not designed for DOT 5 brake fluid.

Avoid contact between brake fluid and painted parts. Brake fluid attacks paint.

Only use clean brake fluid from a sealed container.

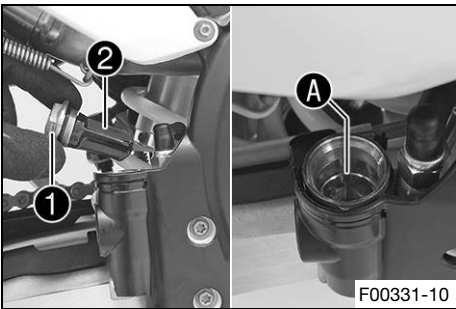

**Preparatory work**

- Check the rear brake linings. (📖 p. 76)

**Main work**

- Stand the vehicle upright.
- Remove screw cap ① with membrane ② and the O-ring.
- Add brake fluid to level A.

Brake fluid DOT 4 (📖 p. 116)

- Mount the screw cap with the membrane and the O-ring.



**Info**

Clean up overflowed or spilled brake fluid immediately with water.


**13.12 Checking the rear brake linings**



**Warning**

**Danger of accidents** Worn-out brake linings reduce the braking effect.

- Ensure that worn-out brake linings are replaced immediately. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

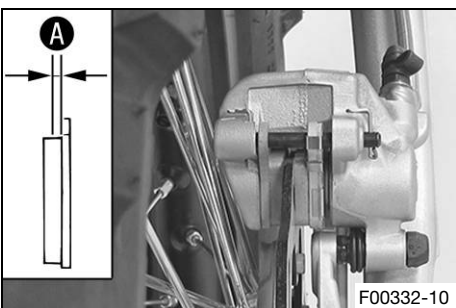

- Check the brake linings for minimum thickness A.

Minimum thickness A	≥ 1 mm (≥ 0.04 in)
---------------------	--------------------

- » If the minimum thickness is less than specified:
  - Change the rear brake linings. 📖 (p. 77)
- Check the brake linings for damage and cracking.
  - » If damage or cracking is visible:
    - Change the rear brake linings. 📖 (p. 77)

## 13.13 Changing the rear brake linings

**Warning**  
**Danger of accidents** Incorrect maintenance will cause the brake system to fail.

- Ensure that service work and repairs are performed professionally. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

**Warning**  
**Skin irritation** Brake fluid causes skin irritation.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.

**Warning**  
**Danger of accidents** Old brake fluid reduces the braking effect.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

**Warning**  
**Danger of accidents** Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.

**Warning**  
**Danger of accidents** Brake linings which have not been approved alter the braking efficiency.

Not all brake linings are tested and approved for Husqvarna motorcycles. The structure and friction coefficient of the brake linings, and thus their brake power, may vary greatly from that of original brake linings. If brake linings are used that differ from the original equipment, compliance with the original homologation is not guaranteed. In this case, the vehicle no longer corresponds to its condition at delivery and the warranty shall be void.

- Only use brake linings approved and recommended by Husqvarna motorcycles.

**Warning**  
**Environmental hazard** Hazardous substances cause environmental damage.


- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.

**i Info**

Never use DOT 5 brake fluid. It is silicone-based and purple in color. Oil seals and brake lines are not designed for DOT 5 brake fluid.


Avoid contact between brake fluid and painted parts. Brake fluid attacks paint.

Only use clean brake fluid from a sealed container.

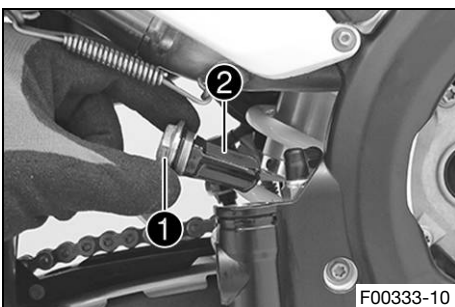

- Stand the vehicle upright.
- Remove screw cap ① with membrane ② and the O-ring.




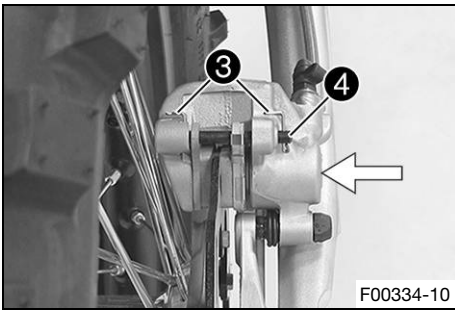


- Press the brake caliper onto the brake disc by hand in order to push back the brake piston and ensure that brake fluid does not flow out of the brake fluid reservoir, extracting it by suction if it does.

**i Info**

Make sure when pushing back the brake piston that you do not press the brake caliper against the spokes.

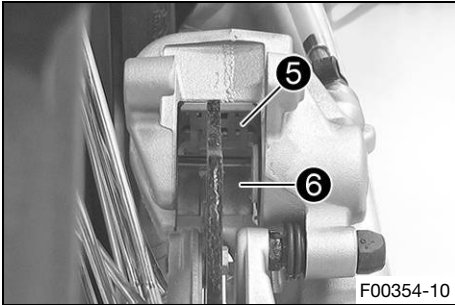

- Remove cotter pins 3, pull out pin 4, and remove the brake linings.
- Clean the brake caliper and brake caliper support.
- Check that leaf spring 5 in the brake caliper and sliding plate 6 in the brake caliper support are seated correctly.
- ✓ The arrow on the leaf spring points in the rotation direction of the brake disc.

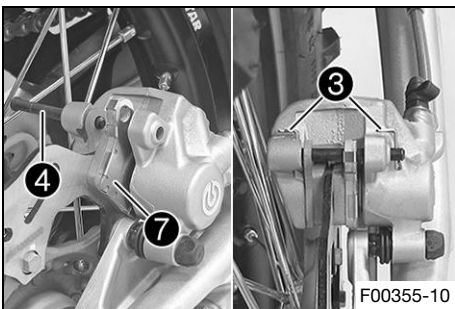


- Insert the new brake linings, insert pin 4, and mount cotter pins 3.

**i Info**

Always change the brake linings in pairs.  
Make sure that decoupling plate 7 is mounted on the piston side brake lining.

- Operate the foot brake lever repeatedly until the brake linings are in contact with the brake disc and there is a pressure point.

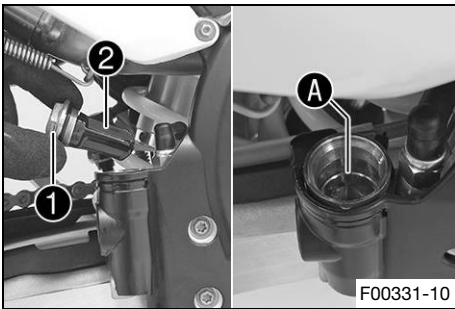

- Add brake fluid to level A.


Brake fluid DOT 4 (p. 116)

- Mount screw cap 1 with membrane 2 and O-ring.

**i Info**

Clean up overflowed or spilled brake fluid immediately with water.

## 14.1 Removing the front wheel

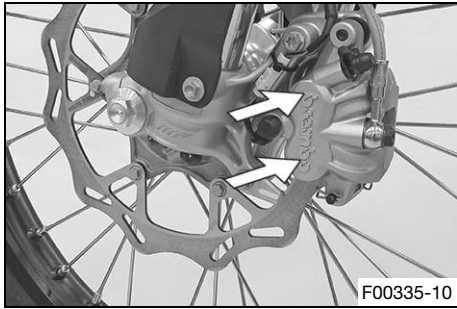

### Preparatory work


- Raise the motorcycle with a lift stand. (📖 p. 44)

### Main work


- Press the brake caliper onto the brake disc by hand in order to push back the brake pistons.

### **i** Info

Make sure that you do not press the brake caliper against the spokes when pushing back the brake pistons.

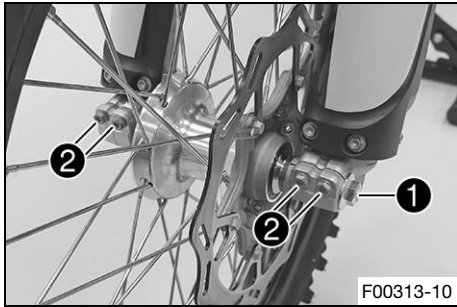

- Loosen screw ① by several rotations.
- Loosen screws ②.
- Press on screw ① to push the wheel spindle out of the axle clamp.
- Remove screw ①.

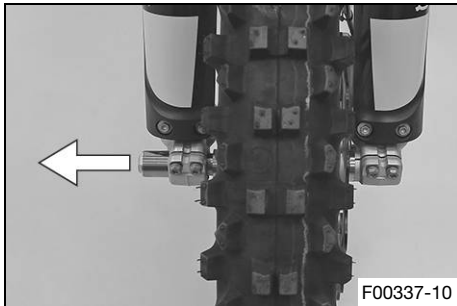

### **!** Warning


**Danger of accidents** Damaged brake discs reduce the braking effect.

- Always lay the wheel down in such a way that the brake disc is not damaged.

- Holding the front wheel, withdraw the wheel spindle. Take the front wheel out of the fork.

### **i** Info

Do not pull the hand brake lever when the front wheel is removed.

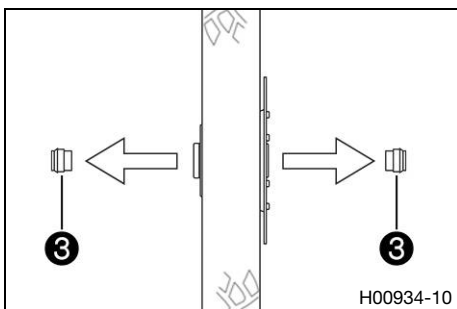


- Remove spacers ③.

## 14.2 Installing the front wheel

### **!** Warning


**Danger of accidents** Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.

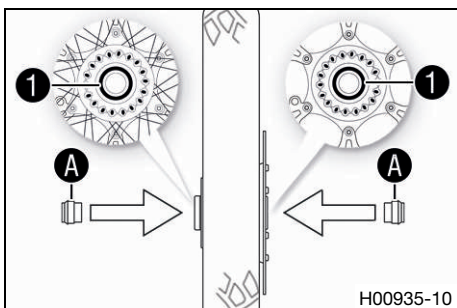

- Check the wheel bearing for damage and wear.
  - » If the wheel bearing is damaged or worn:
    - Change the front wheel bearing. 🛠️
- Clean and grease shaft seal rings ① and contact surface A of the spacers.

Long-life grease (📖 p. 117)

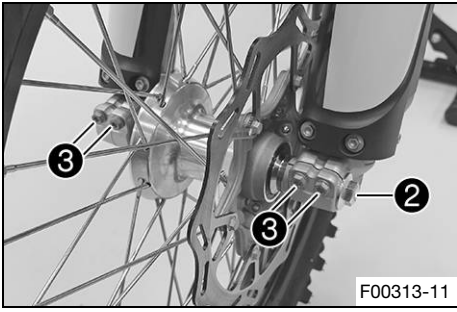

F00313-11

- Insert the spacers.
- Position the front wheel and insert the wheel spindle.
  - ✓ The brake linings are correctly positioned.
- Mount and tighten screw ②.

Guideline

Screw, front wheel spindle	M20x1.5	35 Nm (25.8 lbf ft)
----------------------------	---------	---------------------

- Operate the hand brake lever several times until the brake linings are seated correctly against the brake disc.
- Remove the motorcycle from the lift stand. (📖 p. 44)
- Operate the front brake and compress the fork a few times firmly.
  - ✓ The fork legs straighten.
- Tighten screws ③.

Guideline

Screw, fork stub	M8	15 Nm (11.1 lbf ft)
------------------	----	---------------------

## 14.3 Removing the rear wheel 🛠️



### Preparatory work

- Raise the motorcycle with a lift stand. (📖 p. 44)

### Main work

- Press the brake caliper onto the brake disc by hand in order to push back the brake piston.

**i Info**  
Make sure when pushing back the brake piston that you do not press the brake caliper against the spokes.

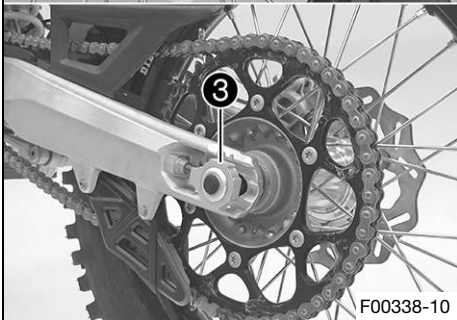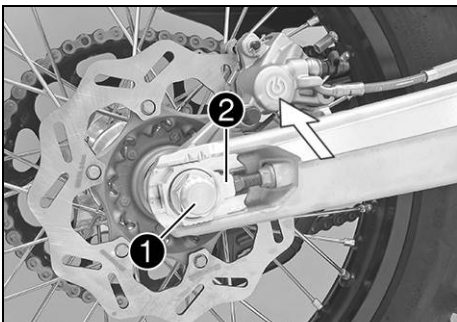

F00338-10

- Remove nut ①.
- Remove chain adjuster ②. Withdraw wheel spindle ③ only enough to allow the rear wheel to be pushed forward.
- Push the rear wheel forward as far as possible. Remove the chain from the rear sprocket.

**i Info**  
Cover the components to protect them against damage.


**⚠ Warning**

- Danger of accidents** Damaged brake discs reduce the braking effect.
- Always lay the wheel down in such a way that the brake disc is not damaged.

- Holding the rear wheel, withdraw the wheel spindle. Take the rear wheel out of the swingarm.

**i Info**  
Do not operate the foot brake lever when the rear wheel is removed.

- Remove spacers ④.

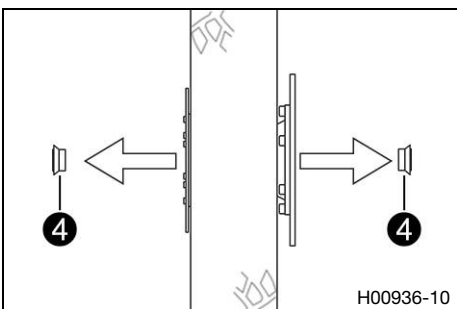


H00936-10

## 14.4 Installing the rear wheel ↗

### Warning

**Danger of accidents** Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.

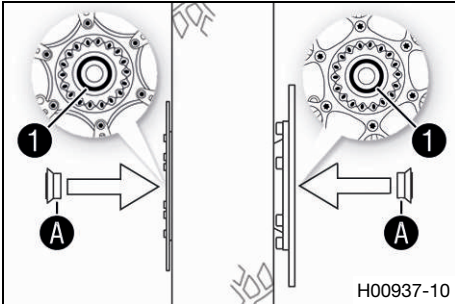


### Main work


- Check the wheel bearing for damage and wear.
  - » If the wheel bearing is damaged or worn:
    - Change the rear wheel bearing. ↗
- Clean and grease shaft seal rings ① and contact surface A of the spacers.

Long-life grease (📖 p. 117)

- Insert the spacers.

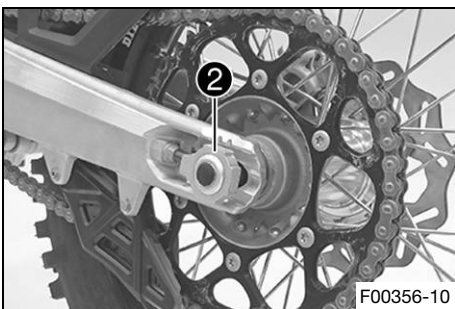

- Position the rear wheel and insert wheel spindle ②.
- Mount the chain.
  - ✓ The brake linings are correctly positioned.

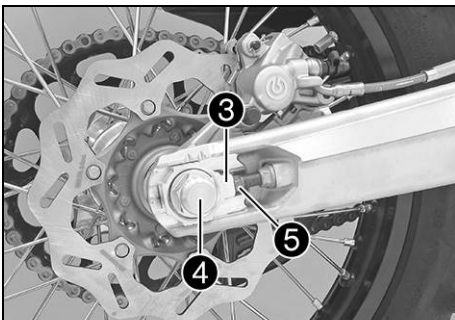

- Position chain adjuster ③. Mount nut ④, but do not tighten it yet.
- Make sure that chain adjusters ③ are fitted correctly on adjusting screws ⑤.
- Check the chain tension. (📖 p. 62)
- Tighten nut ④.


### Guideline

Nut, rear wheel spindle	M20x1.5	80 Nm (59 lbf ft)
-------------------------	---------	-------------------

### Info

The wide adjustment range of the chain adjusters (32 mm (1.26 in)) enables different secondary ratios with the same chain length. Chain adjusters ③ can be turned by 180°.

- Operate the foot brake lever repeatedly until the brake linings are in contact with the brake disc and there is a pressure point.

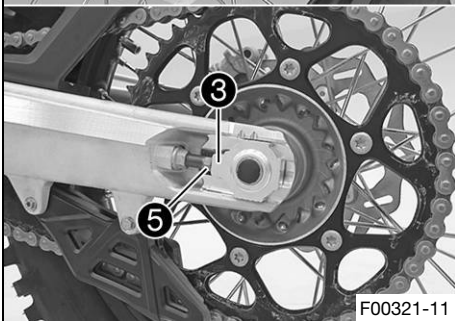


### Finishing work

- Remove the motorcycle from the lift stand. (📖 p. 44)

## 14.5 Checking the tire condition

**i Info**  
 Only mount tires approved and/or recommended by Husqvarna Motorcycles.  
 Other tires could have a negative effect on handling characteristics.  
 The type, condition, and air pressure of the tires all have a major impact on the handling of the motorcycle.  
 The tires mounted on the front and rear wheels must have a similar profile.  
 Worn tires have a negative effect on handling characteristics, especially on wet surfaces.

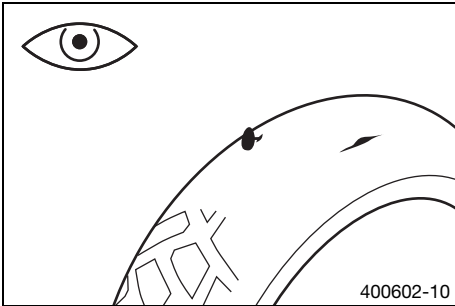


- Check the front and rear tires for cuts, run-in objects, and other damage.
  - » If the tires have cuts, run-in objects, or other damage:
    - Change the tires.
- Check the tread depth.

**i Info**  
 Adhere to the legally required minimum tread depth.

Minimum tread depth	≥ 2 mm (≥ 0.08 in)
---------------------	--------------------

- » If the tread depth is less than the minimum tread depth:
  - Change the tires.
- Check the tire age.

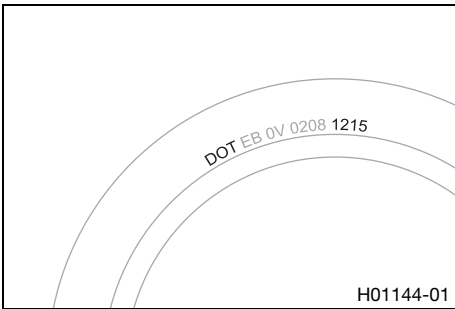


**i Info**  
 The tire date of manufacture is usually contained in the tire label and is indicated by the last four digits of the **DOT** number. The first two digits indicate the week of manufacture and the last two digits the year of manufacture.  
 Husqvarna Motorcycles recommends that the tires be changed after 5 years at the latest, regardless of the actual state of wear.

- » If the tires are more than 5 years old:
  - Change the tires.

## 14.6 Checking the tire air pressure

**i Info**  
 Low tire air pressure leads to abnormal wear and overheating of the tire.  
 Correct tire air pressure ensures optimal riding comfort and maximum tire service life.

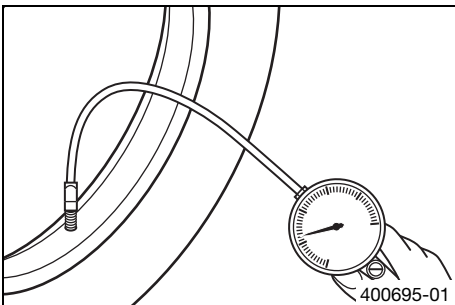

- Remove the protection cap.
- Check the tire air pressure when the tires are cold.

Tire air pressure off road	
Front	1.0 bar (15 psi)
Rear	1.0 bar (15 psi)

Road tire pressure	
Front	1.5 bar (22 psi)
Rear	1.5 bar (22 psi)

- » If the tire air pressure does not meet specifications:
  - Correct the tire air pressure.
- Mount protection cap.




## 14.7 Checking spoke tension

**Warning**

**Danger of accidents** Incorrectly tensioned spokes impair the handling characteristic and result in secondary damage. The spokes break due to being overloaded if they are too tightly tensioned. If the tension in the spokes is too low, then lateral and radial run-out will form in the wheel. Other spokes will become looser as a result.

- Check spoke tension regularly, and in particular on a new vehicle. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

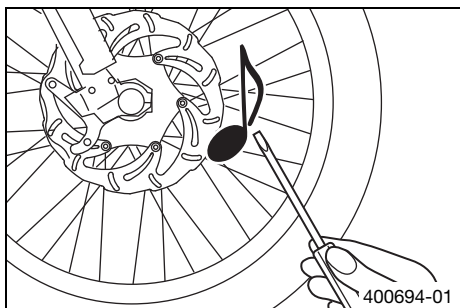

- Strike each spoke briefly using a screwdriver blade.

**i Info**

The frequency of the sound depends on the spoke length and spoke diameter.

If you hear different tone frequencies from different spokes of equal length and diameter, this is an indication of different spoke tensions.

You should hear a high note.

- » If the spoke tension differs:
  - Correct the spoke tension. 🛠️
- Check the spoke torque.

Guideline

Spoke nipple, front wheel	M4.5	6 Nm (4.4 lbf ft)
Spoke nipple, rear wheel	M4.5	6 Nm (4.4 lbf ft)


Torque wrench with various accessories in set (58429094000)

## 15.1 Removing the battery ↘

### Warning

**Risk of injury** Batteries contain harmful substances.

- Keep batteries out of the reach of children.
- Keep sparks and open flames away from the batteries.
- Only charge batteries in well-ventilated rooms.
- Maintain a minimum clearance from inflammable materials when charging batteries.  
Minimum clearance 1 m (3 ft)
- Do not charge deeply discharged batteries if charge is already below the minimum voltage.  
Minimum voltage before the start of the charge 9 V
- Dispose of batteries with less than the minimum voltage correctly.

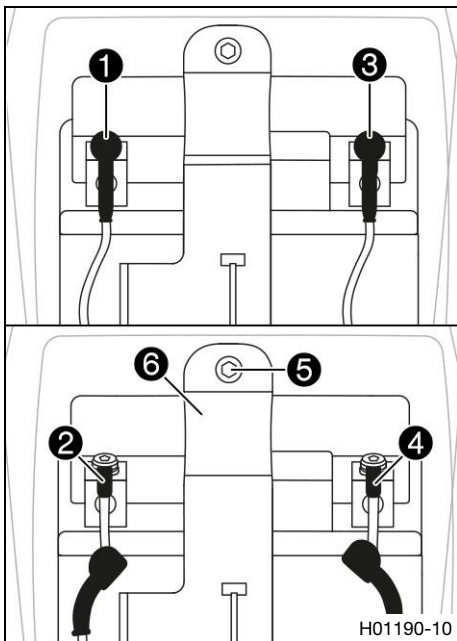


### Preparatory work

- Switch off all power consumers and switch off the engine.
- Remove the air filter box cover. (📖 p. 55)
- Remove the seat. (📖 p. 54)

### Main work

- Pull back the negative terminal cover **1** and disconnect negative cable **2** from the battery.
- Pull back the positive terminal cover **3** and disconnect positive cable **4** from the battery.
- Remove screw **5**.
- Pull holding bracket **6** forward and remove battery toward the top.

## 15.2 Installing the battery ↘

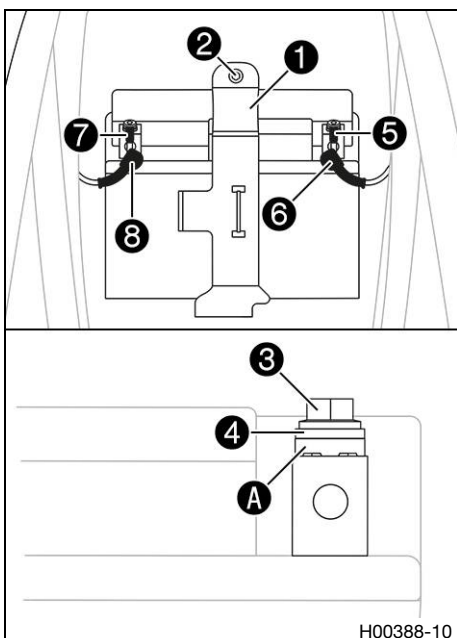

### Main work

- Insert the battery into the battery compartment with the terminals facing forward and secure with holding bracket **1**.

Battery (HJTZ5S-FP) (📖 p. 113)

- Mount and tighten screw **2**.

#### Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------

### **i** Info

Contact disks **A** must be mounted under screws **3** and cable sockets **4** with the claws toward the battery terminal.

- Connect positive cable **5** to the battery.

#### Guideline

Screw, battery terminal	M5	2.5 Nm (1.84 lbf ft)
-------------------------	----	-------------------------



- Slide positive terminal cover **6** over the positive terminal.
- Connect negative cable **7** to the battery.

Guideline

Screw, battery terminal	M5	2.5 Nm (1.84 lbf ft)
-------------------------	----	-------------------------

- Slide negative terminal cover **8** over the negative terminal.

**Finishing work**

- Mount the seat. (📖 p. 54)
- Install the air filter box cover. (📖 p. 55)

## 15.3 Recharging the battery ↘



**Warning**

**Risk of injury** Batteries contain harmful substances.

- Keep batteries out of the reach of children.
  - Keep sparks and open flames away from the batteries.
  - Only charge batteries in well-ventilated rooms.
  - Maintain a minimum clearance from inflammable materials when charging batteries.
- |                   |            |
|-------------------|------------|
| Minimum clearance | 1 m (3 ft) |
|-------------------|------------|
- Do not charge deeply discharged batteries if charge is already below the minimum voltage.
- |  |     |
|--|-----|
| Minimum voltage before the start of the charge | 9 V |
|--|-----|
- Dispose of batteries with less than the minimum voltage correctly.



**Warning**

**Environmental hazard** Batteries contain environmentally-hazardous materials.

- Do not dispose of batteries as household waste.
- Dispose of batteries at a collection point for used batteries.



**Warning**

**Environmental hazard** Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.



**Info**

Even when there is no load on the battery, it discharges steadily.  
 The charging level and the method of charging are very important for the service life of the battery.  
 Rapid recharging with a high charging current shortens the service life of the battery.  
 If the charging current, charging voltage, or charging time are exceeded, the battery will be destroyed.  
 If the battery is depleted by repeated starting, the battery must be charged immediately.  
 If the battery is left in a discharged state for an extended period, it will become over-discharged and sulfated, destroying the battery.  
 The battery is maintenance-free.

**Preparatory work**

- Switch off all power consumers and switch off the engine.
- Remove the air filter box cover. (📖 p. 55)
- Remove the seat. (📖 p. 54)
- Remove the battery. ↘ (📖 p. 84)

**Main work**

- Check the battery voltage.
  - » Battery voltage: < 9 V
    - Do not charge the battery.
    - Replace the battery and dispose of the old battery properly.
  - » If the specifications have been met:
    - Battery voltage: ≥ 9 V



- Recharge the battery.

Guideline

Maximum charging voltage	14.4 V
Maximum charging current	3.0 A
Maximum charging time	12 h
Charge the battery regularly when the motorcycle is not in use	6 months
Ideal charging and storage temperature of the lithium-ion battery	10... 20 °C (50... 68 °F)

**i** **Info**

If the charging current, charging voltage, or charging time are exceeded, the battery will be destroyed.  
 If the battery is left in a discharged state for an extended period, it will become over-discharged and sulfated, destroying the battery.  
 The battery is maintenance-free.  
 Never remove cover ❶.

- Connect the battery charger to the battery. Switch on the battery charger.

Battery charger (81229074000)

The charging time may be longer at low temperatures.

This battery charger is not suitable for the trickle charging of lithium-ion batteries.

- Switch off the battery charger after charging and disconnect from the battery.

**Finishing work**

- Install the battery. (📖 p. 84)
- Mount the seat. (📖 p. 54)
- Install the air filter box cover. (📖 p. 55)

## 15.4 Changing the main fuse

**⚠** **Warning**

**Fire hazard** Incorrect fuses overload the electrical system.

- Only use fuses with the required ampere value.
- Do not bypass or repair fuses.

**i** **Info**

The main fuse protects all power consumers of the vehicle.


**Preparatory work**

- Switch off all power consumers and switch off the engine.
- Remove the air filter box cover. (📖 p. 55)
- Remove the seat. (📖 p. 54)

**Main work**

- Pull starter relay ❶ from the holder.



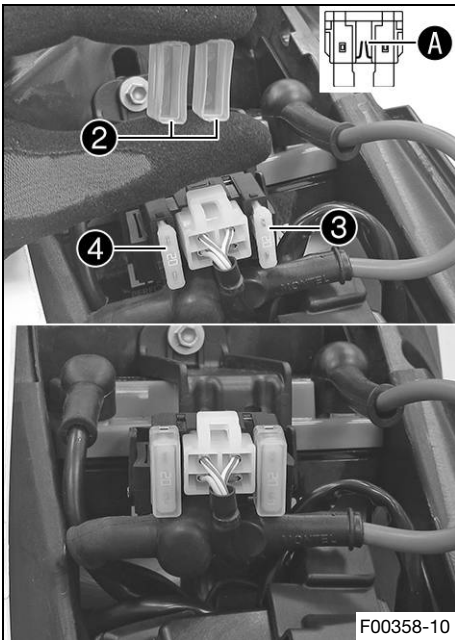

- Take off protection caps **2**.
- Remove faulty main fuse **3**.

**i Info**  
 You can recognize a defective fuse by a burned-out fuse wire **A**.  
 A spare fuse **4** is located in the starter relay.

- Install a new main fuse.

Fuse (58011109120) (📖 p. 113)

- Check that the electrical system is functioning properly.

**i Tip**  
 Insert a spare fuse so that it is available if needed.

- Mount the protection caps.
- Mount the starter relay onto the holder and route the cable.

### Finishing work

- Mount the seat. (📖 p. 54)
- Install the air filter box cover. (📖 p. 55)

## 15.5 Changing the fuses of individual power consumers



**i Info**  
 The fuse box containing the fuses of individual power consumers is located under the seat.

### Preparatory work

- Switch off all power consumers and switch off the engine.
- Remove the air filter box cover. (📖 p. 55)
- Remove the seat. (📖 p. 54)

### Main work

- Pull EFI control unit **1** from the holder and hang it to one side.

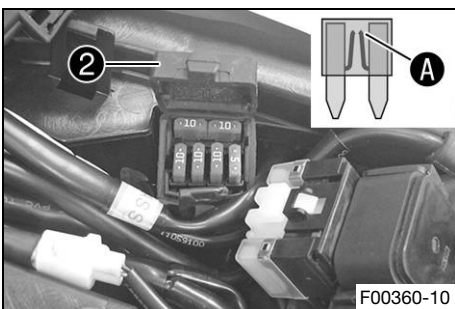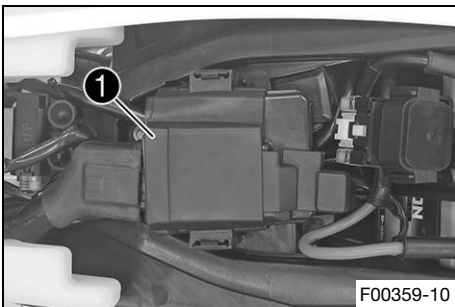

- Open fuse box cover **2**.
- Remove the defective fuse.

### Guideline

#### (EU)

Fuse **1** - 10 A - EFI control unit, lambda sensor, speedometer, combination switch (optional), fuel injection, diagnostics connector, fuse **4**

#### (AU)

Fuse **1** - 10 A - EFI control unit, speedometer, combination switch (optional), fuel injection, diagnostics connector, fuse **4**

Fuse **2** - 10 A - high beam, low beam, parking light, tail light, license plate lamp

Fuse **3** - 10 A - radiator fan, horn, brake light, turn signal

Fuse **4** - 5 A - fuel pump

Fuses **res** - 10 A - spare fuse

**i Info**  
 You can recognize a defective fuse by a burned-out fuse wire **A**.



**Warning**

**Fire hazard** Incorrect fuses overload the electrical system.

- Only use fuses with the required ampere value.
- Do not bypass or repair fuses.

- Use spare fuses with the correct rating only.

Fuse (75011088010) (📖 p. 113)
-------------------------------


Fuse (58011109105) (📖 p. 113)
-------------------------------



**Tip**

Replace the spare fuse in the fuse box so that it is available if needed.

- Check that the power consumer is functioning properly.
- Close the fuse box cover.
- Mount EFI control unit **1** on the holder.

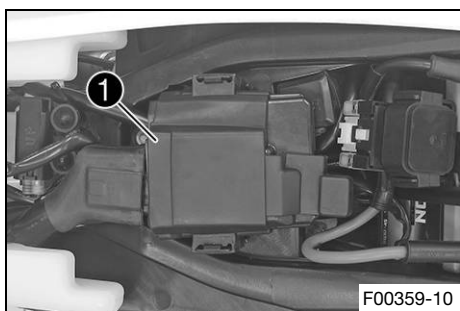

**Finishing work**

- Mount the seat. (📖 p. 54)
- Install the air filter box cover. (📖 p. 55)



## 15.6 Removing the headlight mask with the headlight

**Preparatory work**

- Switch off all power consumers and switch off the engine.


**Main work**

- Detach brake line **1** and wiring harness **2**.
- Release rubber straps **3**. Slide the headlight mask up and swing it forward.

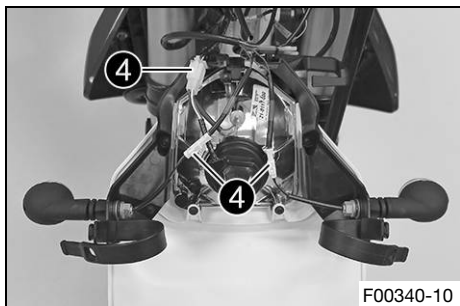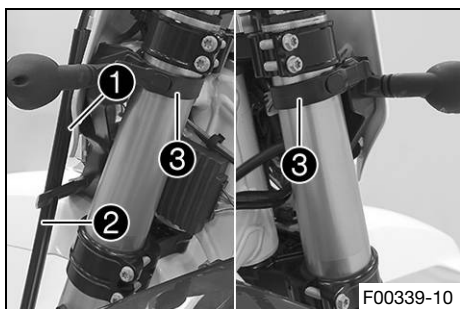


- Detach plug-in connectors **4** and take off the headlight mask with the headlight.

## 15.7 Installing the headlight mask with the headlight

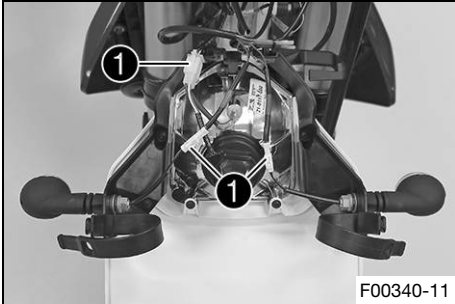


### Main work

- Connect plug-in connectors ①.

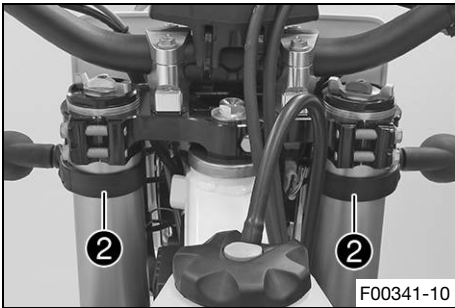

- Position the headlight mask and secure it with rubber bands ②.  
✓ The holding lugs engage in the fender.

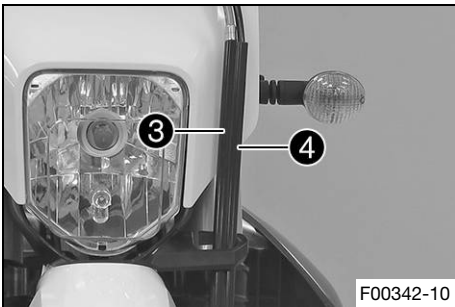

- Position brake line ③ and wiring harness ④ in the brake line guide.

### Finishing work

- Check the headlight setting. (📖 p. 90)

## 15.8 Changing the headlight bulb

### Note

**Damage to reflector** Reduced brightness.


- Grease on the lamp will evaporate due to the heat and be deposited on the reflector. Clean the lamp and keep it free of grease before mounting.


### Preparatory work

- Switch off all power consumers and switch off the engine.
- Remove the headlight mask with the headlight. (📖 p. 88)

### Main work

- Turn protection cap ① together with the underlying bulb socket counterclockwise all the way and remove it.
- Pull bulb socket ② of the parking light out of the reflector.

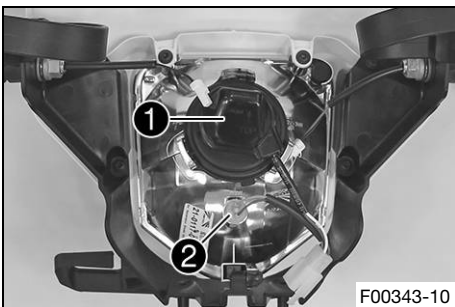

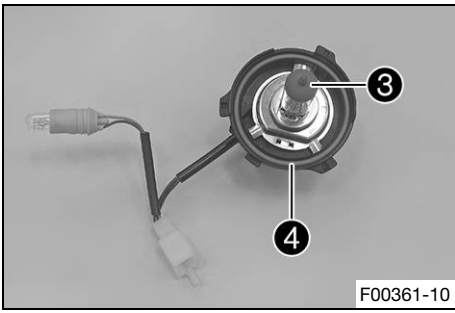

- Pull out headlight bulb ③.
- Insert the new headlight bulb.

Headlight (HS1/socket PX43t) (📖 p. 113)

- Insert the protection cap with the bulb socket into the reflector and turn it clockwise all the way.



**Info**

Ensure that O-ring ④ is seated properly.

- Insert the bulb socket of the parking light into the reflector.

**Finishing work**


- Install the headlight mask with the headlight. (📖 p. 89)
- Check the headlight setting. (📖 p. 90)

## 15.9 Changing the turn signal bulb

**Note**

**Damage to reflector** Reduced brightness.

- Grease on the lamp will evaporate due to the heat and be deposited on the reflector. Clean the lamp and keep it free of grease before mounting.

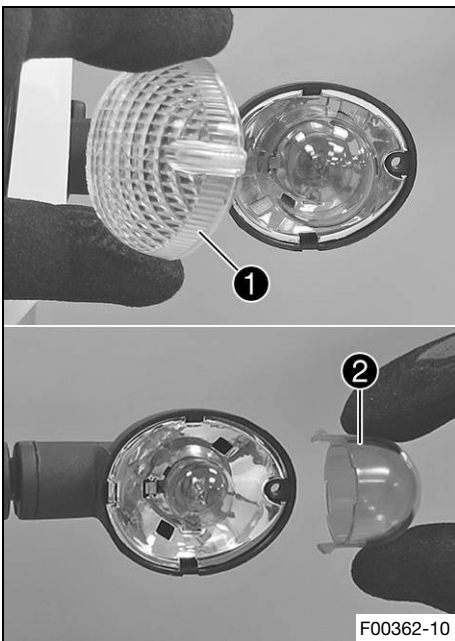

**Main work**

- Remove the screw on the rear of the turn signal housing.
- Carefully remove diffuser ①.
- Lightly squeeze orange cap ② in the area of the holding lugs and take it off.
- Press the turn signal bulb lightly into the socket, turn it counterclockwise by about 30°, and take it out of the socket.



**Info**

Do not touch the reflector with your fingers, and keep it free from grease.

- Press the new turn signal bulb carefully into the socket and turn it clockwise until it stops.


Turn signal (R10W / socket BA15s) (📖 p. 113)

- Mount the orange cap.
- Position the diffuser.
- Insert the screw and turn it counterclockwise first until it engages in the thread with a light jerk. Tighten the screw slightly.

**Finishing work**

- Check that the turn signal system is functioning properly.

## 15.10 Checking the headlight setting

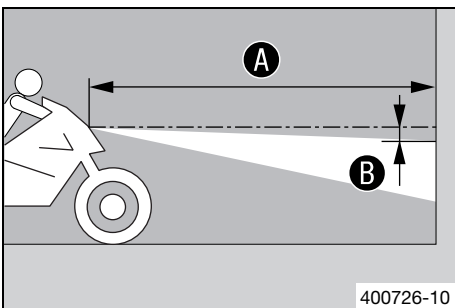

- Position the vehicle upright on a horizontal surface in front of a light wall and make a mark at the height of the center of the low beam headlight.
- Make another mark at a distance ② under the first mark.

Guideline

Distance ② 5 cm (2 in)

- Position the vehicle vertically at a distance ① away from the wall.

Guideline

Distance ① 5 m (16 ft)


- The rider now sits down on the motorcycle.
- Switch on the low beam.
- Check the headlight setting.

The boundary between light and dark must be exactly on the lower mark for a motorcycle with rider.



- » If the light-dark border does not meet specifications:
  - Adjust the headlight range. (📖 p. 91)

## 15.11 Adjusting the headlight range

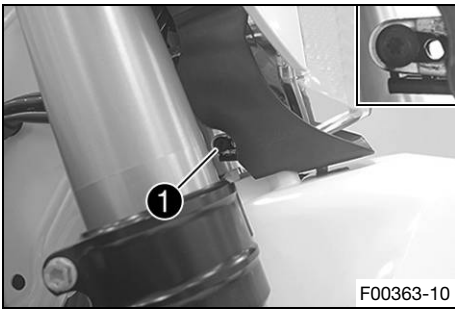

### Preparatory work

- Check the headlight setting. (📖 p. 90)

### Main work

- Loosen screw ❶.
- Adjust the headlight range by pivoting the headlight.

### Guideline


The boundary between light and dark must be exactly on the lower marking for a motorcycle with rider (instructions on how to apply the marking: Checking the headlight setting).

### Info

A change in weight on the vehicle may require a correction of the headlight range.

- Tighten screw ❶.

## 15.12 Changing the speedometer battery

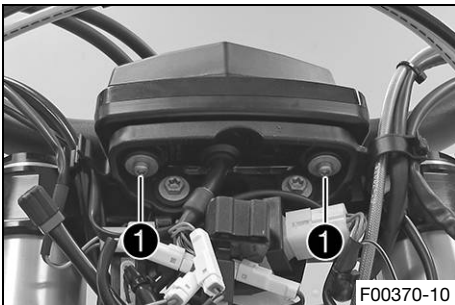


### Preparatory work

- Switch off all power consumers and switch off the engine.
- Remove the headlight mask with the headlight. (📖 p. 88)

### Main work


- Remove screws ❶ with the washers.
- Pull the speedometer upward out of the holder.

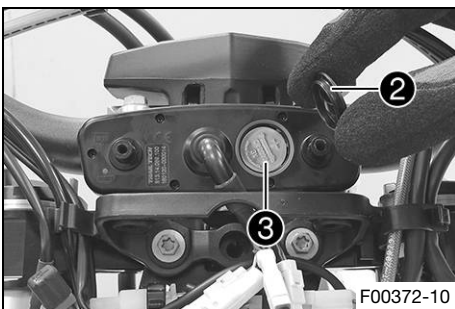

- Using a coin, turn protection cap ❷ all the way counterclockwise and remove it.
- Remove speedometer battery ❸.
- Insert the new battery with the label facing outward.

Speedometer battery (CR 2032) (📖 p. 113)

- Check the O-ring of the protection cap for correct seating.

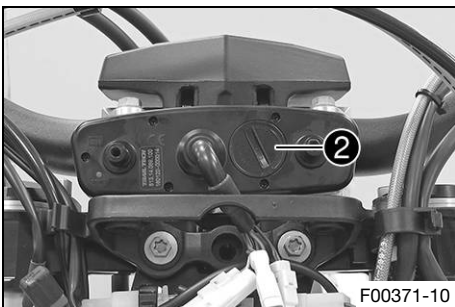


- Position protection cap ❷ and turn all the way clockwise using a coin.
- Press any button on the speedometer.
  - ✓ The speedometer is activated.
- Position the speedometer in the holder.
- Mount and tighten the screws with washers.

### Finishing work

- Install the headlight mask with the headlight. (📖 p. 89)
- Check the headlight setting. (📖 p. 90)
- Set the speedometer. (📖 p. 21)




## 15.13 Diagnostics connector

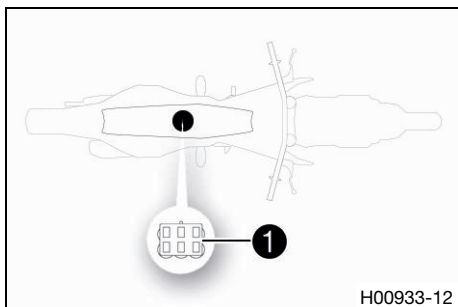

Diagnostics connector ① is located under the seat.

## 16.1 Cooling system

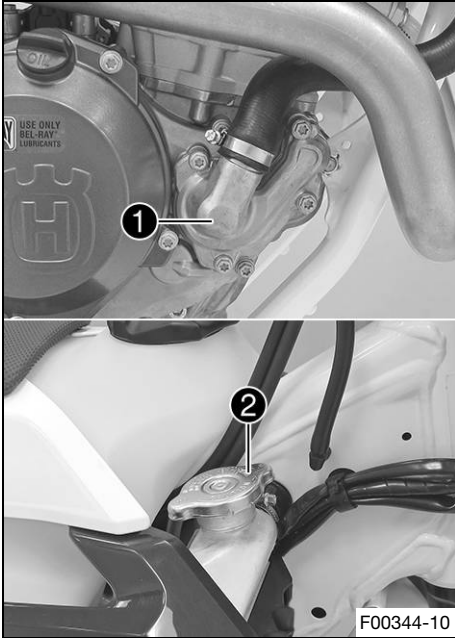

The water pump ① in the engine forces the coolant to flow. The pressure resulting from the warming of the cooling system is regulated by a valve in radiator cap ②. The specified coolant temperature is therefore permissible without the danger of malfunctions.

120 °C (248 °F)
-----------------

Cooling is effected by the air stream.

The lower the speed, the less the cooling effect. Dirty cooling fins also reduce the cooling effect.

The radiator fan provides extra cooling. It is controlled by a thermostwitch.

## 16.2 Checking the antifreeze and coolant level

### Warning

**Danger of scalding** During motorcycle operation, the coolant gets very hot and is under pressure.

- Do not open the radiator, the radiator hoses or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.

### Warning

**Danger of poisoning** Coolant is toxic and a health hazard.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

### Condition

The engine is cold.

- Stand the motorcycle upright on a horizontal surface.
- Remove the radiator cap.
- Check the antifreeze in the coolant.

-25... -45 °C (-13... -49 °F)
-------------------------------

» If the antifreeze in the coolant does not match the specified value:

- Correct the antifreeze in the coolant.


- Check the coolant level in the radiator.

Coolant level ① above the radiator fins	10 mm (0.39 in)
---	-----------------

» If the coolant level does not match the specified value:

- Correct the coolant level.

Coolant (📖 p. 116)
--------------------

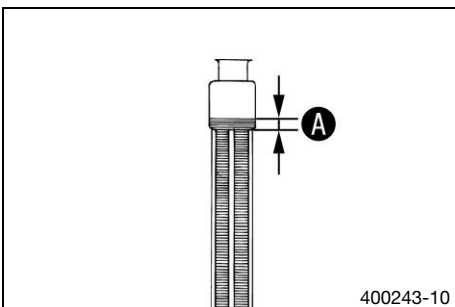

- Mount the radiator cap.

## 16.3 Checking the coolant level

### Warning


**Danger of scalding** During motorcycle operation, the coolant gets very hot and is under pressure.

- Do not open the radiator, the radiator hoses or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.

### Warning

**Danger of poisoning** Coolant is toxic and a health hazard.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

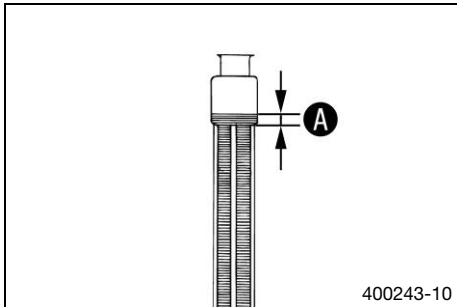

### Condition

The engine is cold.

- Stand the motorcycle upright on a horizontal surface.
- Remove the radiator cap.
- Check the coolant level in the radiator.

Coolant level <b>A</b> above the radiator fins	10 mm (0.39 in)
--	-----------------

- » If the coolant level does not match the specified value:
  - Correct the coolant level.

Coolant (📖 p. 116)
--------------------

- Mount the radiator cap.

## 16.4 Draining the coolant

### Warning

**Danger of scalding** During motorcycle operation, the coolant gets very hot and is under pressure.

- Do not open the radiator, the radiator hoses or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.


### Warning

**Danger of poisoning** Coolant is toxic and a health hazard.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

### Condition

The engine is cold.

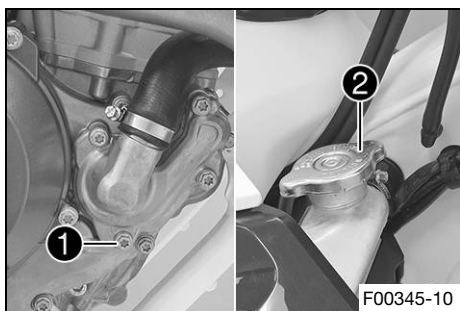

- Position the motorcycle upright.
- Place a suitable container under the water pump cover.
- Remove screw ①. Take off radiator cap ②.
- Completely drain the coolant.
- Mount and tighten screw ① with a new seal ring.

**Guideline**

Screw, water pump cover	M6	10 Nm (7.4 lbf ft)
-------------------------	----	--------------------


## 16.5 Refilling coolant



**Warning**

**Danger of poisoning** Coolant is toxic and a health hazard.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

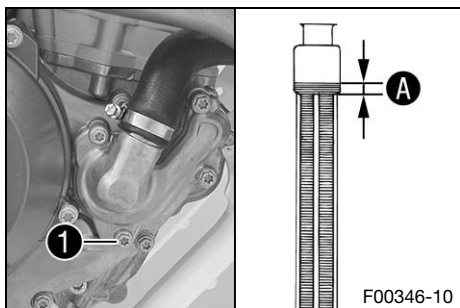

**Main work**

- Make sure that the screw ① is tightened.
- Stand the vehicle upright.
- Pour coolant in up to measurement A above the radiator fins.

**Guideline**


10 mm (0.39 in)		
Coolant	1.2 l (1.3 qt.)	Coolant (📖 p. 116)

- Refit the radiator cap.

**Finishing work**

- Take a short test ride.
- Check the coolant level. (📖 p. 94)

## 17.1 Checking the play in the throttle cable

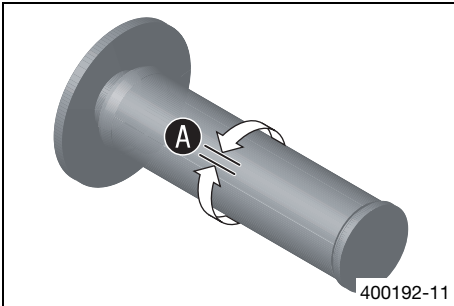

- Check the throttle grip for smooth operation.
- Move the handlebar to the straight-ahead position. Turn the throttle grip back and forth slightly and determine the play in throttle cable **A**.

Play in throttle cable	3... 5 mm (0.12... 0.2 in)
------------------------	----------------------------

» If the throttle cable play does not meet the specified value:

- Adjust the play in the throttle cable. 🛠️ (p. 96)

- Push the cold start button in all the way.

When the throttle grip is turned forward, the cold start button returns to its original position.

» If the cold start button does not return to its original position:

- Adjust the play in the throttle cable. 🛠️ (p. 96)



### Danger

**Danger of poisoning** Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use an effective exhaust extraction system when starting or running the engine in an enclosed space.

- Start the engine and let it run idle. Move the handlebar to and fro over the entire steering range.

The idle speed must not change.

» If the idle speed changes:

- Adjust the play in the throttle cable. 🛠️ (p. 96)

## 17.2 Adjusting the play in the throttle cable 🛠️



### Info

If the correct routing of the throttle cables has already been secured, the fuel tank does not need to be removed.

### Preparatory work

- Remove the air filter box cover. (p. 55)
- Remove the seat. (p. 54)
- Remove the right side cover. (p. 57)
- Remove the fuel tank. 🛠️ (p. 59)
- Check throttle cable routing. (p. 66)


### Main work

- Move the handlebar to the straight-ahead position.
- Push back sleeve **1**.
- Loosen nut **2**.
- Turn adjusting screw **3** in as far as possible.
- Loosen nut **4**.
- Push cold start button **6** all the way to the stop.
- Turn adjusting screw **5** so that the cold start button moves to the basic position when the throttle grip is turned to the front.
- Tighten nut **4**.
- Turn adjusting screw **3** so that there is play in the throttle cable at the throttle grip.

### Guideline

Play in throttle cable	3... 5 mm (0.12... 0.2 in)
------------------------	----------------------------

- Tighten nut **2**.

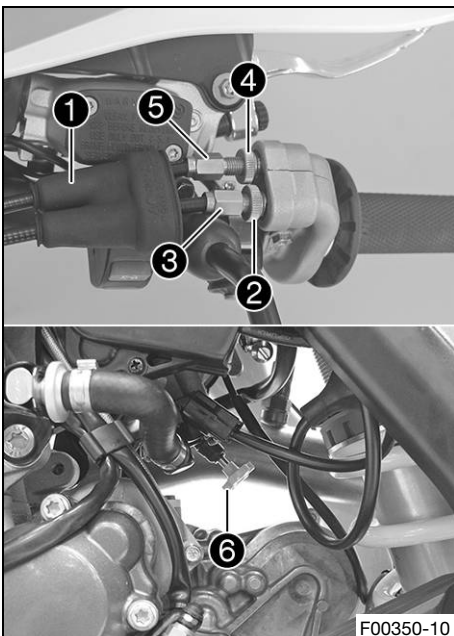

- Slide on sleeve ①.
- Check the throttle grip for smooth operation.


**Finishing work**

- Check the play in the throttle cable. (🗨️ p. 96)

## 17.3 Setting the characteristic map of the throttle response 🗨️


**i Info**

On the throttle grip, the characteristic map of the throttle response is changed by changing the guide plate. A guide plate with a different characteristic map is supplied.

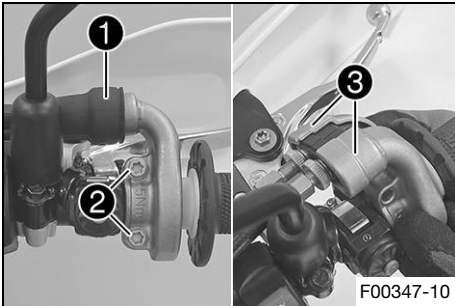

**Main work**

- Push back sleeve ①.
- Remove screws ② and half-shells ③.
- Detach the throttle cables and take off the grip tube.

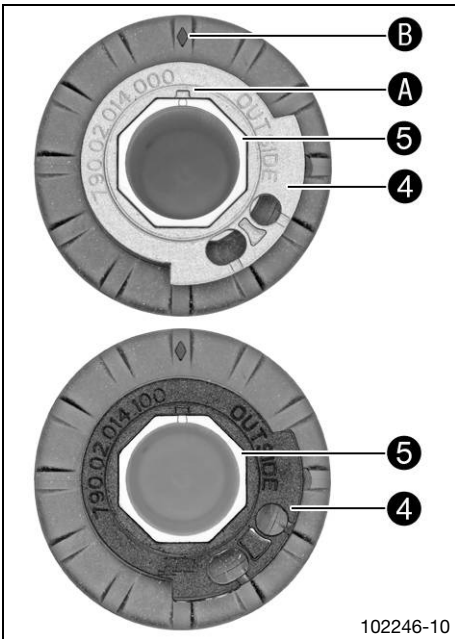

- Remove guide plate ④ from handle tube ⑤.
- Position the required guide plate on the grip tube.

**Guideline**

The label **OUTSIDE** must be visible. Marking **A** must be positioned at marking **B**.

**Alternative 1**


Grey guide plate (79002014000)

**Alternative 2**


Black guide plate (79002014100)

**i Info**

The gray guide plate opens the throttle valve more slowly.  
The black guide plate opens the throttle valve more quickly.  
The gray guide plate is mounted upon delivery.

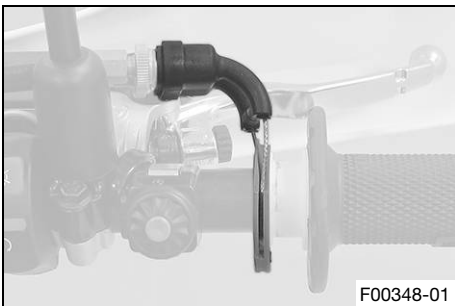

- Clean the outside of the handlebar and the inside of the grip tube. Mount the grip tube on the handlebar.
- Attach the throttle cables to the guide plate and route correctly.

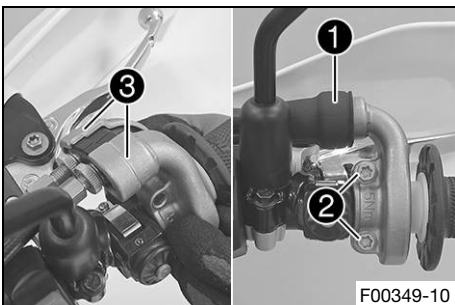

- Position half-shells ③, mount and tighten screws ②.

**Guideline**

Screw, throttle grip	M6	5 Nm (3.7 lbf ft)
----------------------	----	-------------------

- Slide on sleeve ① and check the throttle grip for ease of movement.

### Finishing work

- Check the play in the throttle cable. (🗨️ p. 96)

## 17.4 Changing the mapping


### Warning

**Voiding of the government approval for road use and the insurance coverage** If the combination switch is installed, the vehicle's approval for road use is invalidated.

- Only operate the vehicle in closed-off areas remote from public road traffic if the combination switch is installed.

### Info

The desired engine characteristic can be activated via the **MAP** button on the combination switch. The setting most recently selected is activated again when restarting. The traction control can also be activated in each mapping using the **TC** button. The mapping can also be changed during the ride.

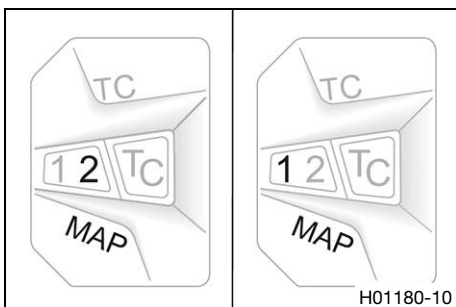


#### Activating STANDARD mapping:

- Press button **MAP** until LED 1 lights up.

#### Guideline

Engine speed	< 4,000 rpm
--------------	-------------

- ✓ STANDARD – balanced response

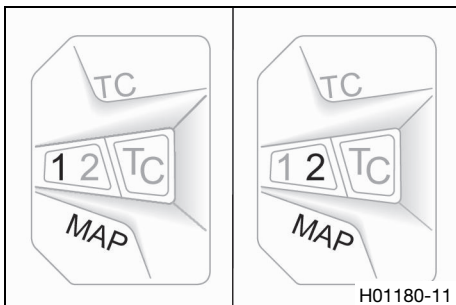

#### Activating ADVANCED mapping:

- Press button **MAP** until LED 2 lights up.

#### Guideline

Engine speed	< 4,000 rpm
--------------	-------------

- ✓ ADVANCED – direct response


## 17.5 Adjusting the idle speed ↻

### Warning

**Danger of accidents** The engine may go out spontaneously if the idle speed is set too low.

- Set the idle speed to the specified value. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



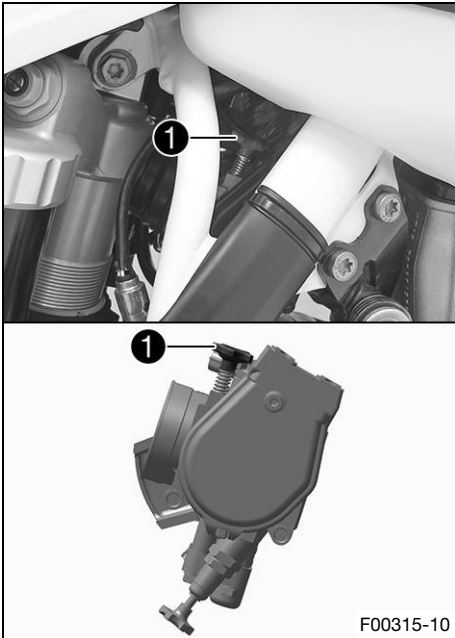

- Run the engine until warm.
- ✓ The cold start button is deactivated – The cold start button is in its basic position. (📖 p. 17)



**Danger**

**Danger of poisoning** Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use an effective exhaust extraction system when starting or running the engine in an enclosed space.

- Set the idle speed by turning idle speed adjusting screw ①.

Guideline

Idle speed	2,050... 2,150 rpm
------------	--------------------

Tachometer (45129075000)
--------------------------



**Info**

Turning counterclockwise lowers the idle speed.  
Turning clockwise raises the idle speed.

## 17.6 Teaching the throttle valve position



**Info**

If the control unit detects that the throttle valve idle position needs to be retaught, then the malfunction indicator lamp flashes 2x per second.



**Danger**

**Danger of poisoning** Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use an effective exhaust extraction system when starting or running the engine in an enclosed space.

- Allow the vehicle to idle.
- ✓ The malfunction indicator lamp stops flashing once teaching is completed.



**Info**


If the engine becomes too hot, perform a cool-down ride at medium revs. Then do not switch off the engine after this, but leave it running at idle speed until teaching is completed.

## 17.7 Checking the basic position of the shift lever



**Info**

When driving, the shift lever must not touch the driver's boot when in the basic position. When the shift lever keeps touching the boot, the transmission will be subject to an excessive load.

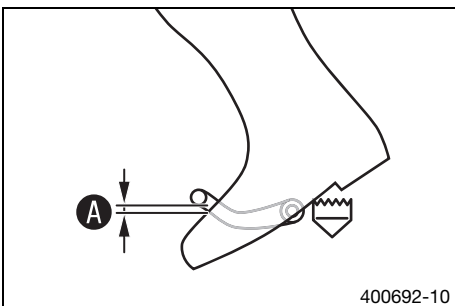


- Sit on the vehicle in the riding position and determine the distance ① between the upper edge of your boot and the shift lever.


Gap between the shift lever and the top of the boot	10... 20 mm (0.39... 0.79 in)
---	-------------------------------

- » If the distance does not meet the specifications:
  - Adjust the basic position of the shift lever. 🛠️ (📖 p. 100)

## 17.8 Adjusting the basic position of the shift lever ↗

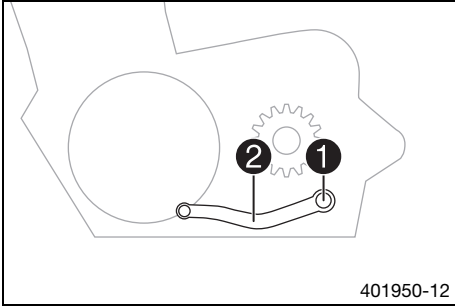

- Remove screw ① with washers and take off shift lever ②.

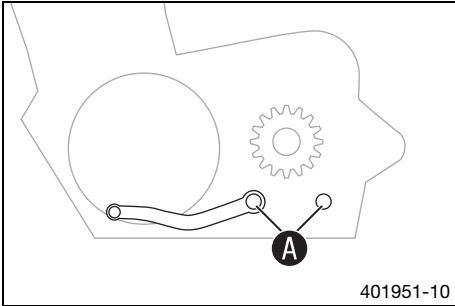

- Clean gear teeth A of the shift lever and shift shaft.
- Mount the shift lever on the shift shaft in the required position and engage the gearing.

### **i** Info

The range of adjustment is limited.

The shift lever must not come into contact with any other vehicle components during the shift procedure.

- Mount and tighten screw ① with the washers.

### Guideline

Screw, shift lever	M6	14 Nm (10.3 lbf ft)	Loctite® 243™
--------------------	----	------------------------	---------------

## 18.1 Changing the fuel screen ↩



### Danger

**Fire hazard** Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not refuel the vehicle in the vicinity of open flames or lit cigarettes.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it off immediately.
- Observe the specifications for refueling.



### Warning

**Danger of poisoning** Fuel is poisonous and a health hazard.


- Avoid skin, eye and clothing contact with fuel.
- Immediately consult a doctor if you swallow fuel.
- Do not inhale fuel vapors.
- In case of skin contact, rinse the affected area with plenty of water.
- Rinse the eyes thoroughly with water, and consult a doctor in case of fuel contact with the eyes.
- Change your clothing in case of fuel spills on them.



### Warning

**Environmental hazard** Improper handling of fuel is a danger to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.

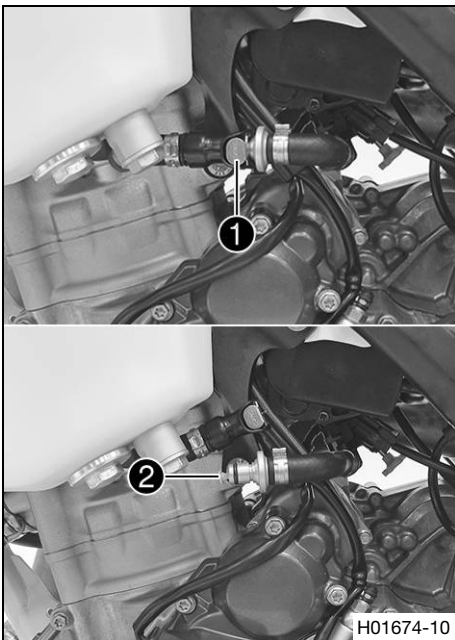

- Clean plug-in connection **1** of the fuel line thoroughly with compressed air.



### Info

Under no circumstances should dirt enter into the fuel line. Dirt in the fuel line clogs the injection valve!

- Disconnect the plug-in connection of the fuel line.



### Info

Remaining fuel may flow out of the fuel hose.

- Pull fuel screen **2** out of the connecting piece.
- Insert the new fuel screen all the way into the connecting piece.
- Lubricate the O-ring and connect plug-in connection of the fuel line.



### Danger

**Danger of poisoning** Exhaust gases are toxic and inhaling them may result in unconsciousness and death.


- Always make sure there is sufficient ventilation when running the engine.
- Use an effective exhaust extraction system when starting or running the engine in an enclosed space.

- Start the engine and check the response.

## 18.2 Checking the engine oil level

### Preparatory work

- Stand the motorcycle upright on a horizontal surface.

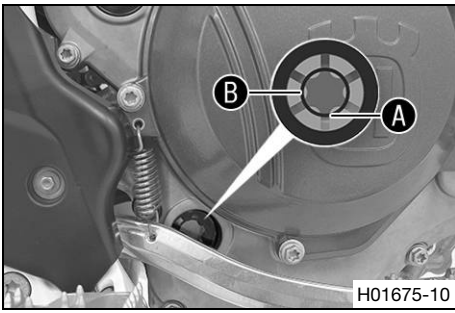

**Condition**

The engine is cold.

- Check the engine oil level.

The engine oil reaches the lower edge of level viewer **A**.

- » If the engine oil does not reach the lower edge of the level viewer:
  - Add engine oil. (📖 p. 104)

**Condition**

The engine is at operating temperature.

- Check the engine oil level.

**i Info**  
After switching off the engine, wait one minute before checking the level.

The engine oil is at a level between lower edge **A** and middle **B** of the level viewer.

- » If the engine oil is not at a level between lower edge **A** and middle **B** of the level viewer:
  - Add engine oil. (📖 p. 104)

**18.3 Changing the engine oil and oil filter, cleaning the oil screen**

- ⚠ Warning**  
**Danger of scalding** Engine and gear oil get very hot when the motorcycle is ridden.
- Wear suitable protective clothing and safety gloves.
  - In the event of scalding, rinse the area affected immediately with lukewarm water.

- ☀ Warning**  
**Environmental hazard** Hazardous substances cause environmental damage.
- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.

**i Info**  
Drain engine oil with engine at operating temperature.



**Preparatory work**

- Park the motorcycle on a level surface.
- Remove the engine guard. (📖 p. 69)


**Main work**

- Place a suitable container under the engine.
- Remove oil drain plug **1** with the magnet and seal ring.


**i Info**  
Do not remove screws **A** on both sides.

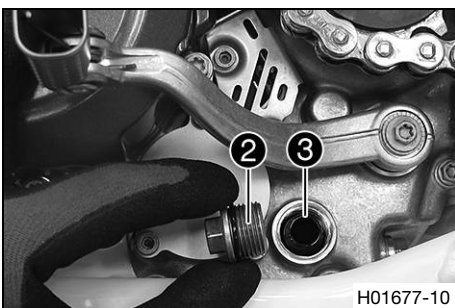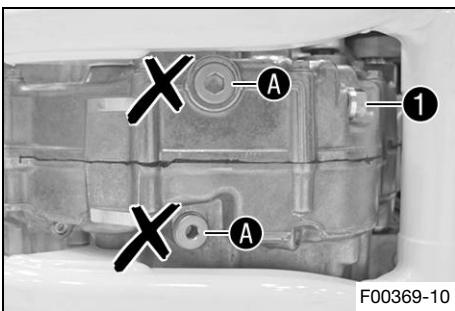

- Remove screw plug **2** with oil screen **3** and the O-rings.
- Completely drain the engine oil.
- Thoroughly clean the parts and sealing surfaces.

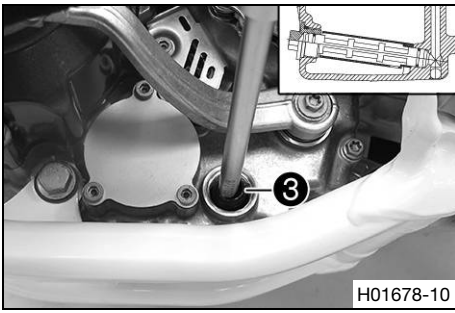

- Position oil screen **3** with the O-rings on a pin wrench.
- Position the pin wrench through the drilled hole of the screw plug in the opposite section of the engine case.
- Push the oil screen all the way into the engine case.

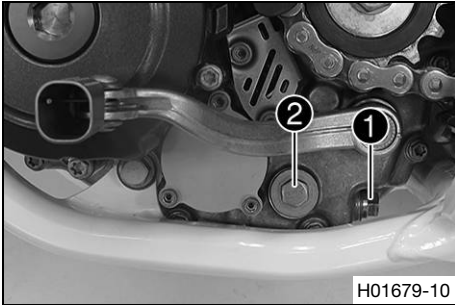

- Mount and tighten screw plug **2** with the O-ring.


Guideline

Screw plug, oil screen	M20x1.5	15 Nm (11.1 lbf ft)
------------------------	---------	---------------------


- Mount and tighten oil drain plug **1** with the magnet and a new seal ring.

Guideline

Oil drain plug with magnet	M12x1.5	20 Nm (14.8 lbf ft)
----------------------------	---------	---------------------

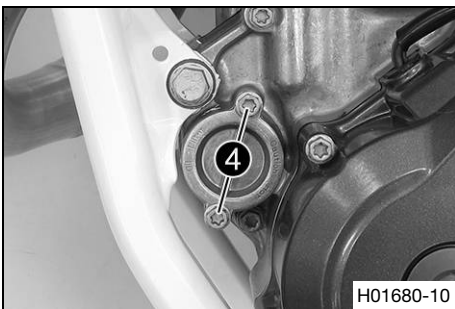


- Remove screws **4**. Remove the oil filter cover with the O-ring.

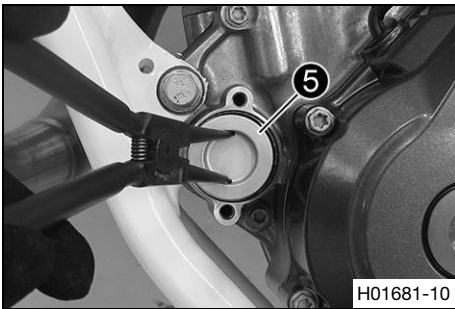

- Pull oil filter **5** out of the oil filter housing.

Circlip pliers reverse (51012011000)
--------------------------------------

- Completely drain the engine oil.
- Thoroughly clean the parts and sealing surface.

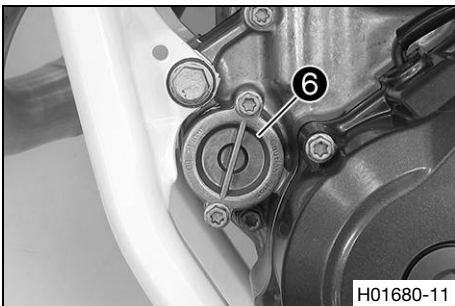


- Lay the motorcycle on its side and fill the oil filter housing to about 1/3 full with engine oil.
- Place the oil filter into the oil filter housing.
- Oil the O-ring of the oil filter cover and mount it with the oil filter cover **6**.
- Mount and tighten the screws.

Guideline

Screw, oil filter cover	M6	10 Nm (7.4 lbf ft)
-------------------------	----	--------------------

- Stand the motorcycle upright.

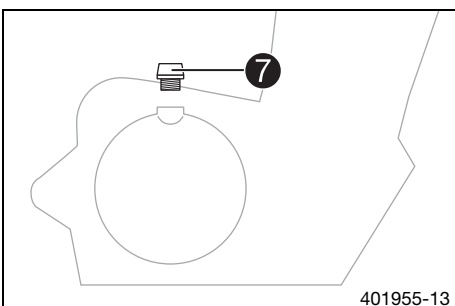

- Remove filler plug **7** with the O-ring from the clutch cover and fill up with engine oil.

Engine oil	1.0 l (1.1 qt.)	Engine oil (SAE 10W/50) (p. 116)
------------	-----------------	----------------------------------

**i Info**

Too little engine oil or poor-quality engine oil results in premature wear of the engine.

- Install and tighten the oil filler plug with O-ring.

**Danger**

**Danger of poisoning** Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use an effective exhaust extraction system when starting or running the engine in an enclosed space.

- Start the engine and check that it is oil-tight.



**Finishing work**

- Check the engine oil level. (📖 p. 101)
- Install the engine guard. (📖 p. 69)

## 18.4 Adding engine oil

**Info**

Too little engine oil or poor-quality engine oil results in premature wear of the engine.

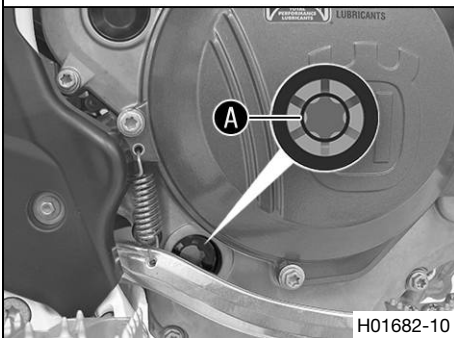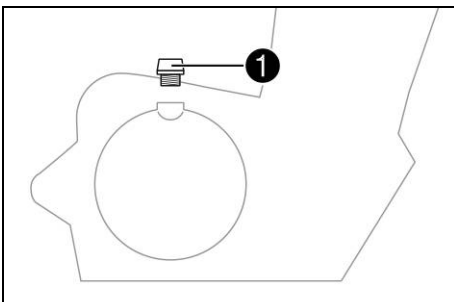

H01682-10

**Main work**

- Remove oil filler plug ① with the O-ring from the clutch cover.
- Fill engine oil to the middle ① of the level viewer.

Engine oil (SAE 10W/50) (📖 p. 116)

**Info**

For optimal performance of the engine oil, do not mix different types of engine oil.

We recommend changing the engine oil when necessary.

- Install and tighten the oil filler plug with O-ring.

**Danger**

**Danger of poisoning** Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use an effective exhaust extraction system when starting or running the engine in an enclosed space.

- Start the engine and check that it is oil-tight.

**Finishing work**

- Check the engine oil level. (📖 p. 101)



## 19.1 Cleaning the motorcycle

### Note

**Material damage** Components become damaged or destroyed if a pressure cleaner is used incorrectly.

The high pressure forces water into the electrical components, connectors, throttle cables, and bearings, etc. Pressure which is too high causes malfunctions and destroys components.

- Do not direct the water jet directly on to electrical components, connectors, throttle cables or bearings.
- Maintain a minimum distance between the nozzle of the pressure cleaner and the component.

Minimum clearance 60 cm (23.6 in)


### Warning

**Environmental hazard** Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.

### Info

To maintain the value and appearance of the motorcycle over a long period, clean it regularly. Avoid direct sunshine when cleaning the motorcycle.

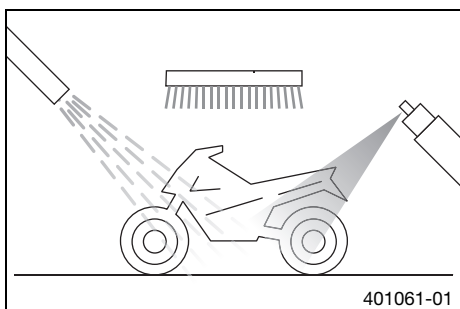

- Close off the exhaust system to keep water from entering.
- Remove coarse dirt particles with a gentle water jet.
- Spray dirty parts with a normal commercial engine cleaner and then brush off with a soft brush.

### Info

Use warm water containing normal motorcycle cleaner and a soft sponge. Never apply motorcycle cleaner to a dry vehicle; always rinse the vehicle with water first.

- After rinsing the motorcycle with a gentle spray of water, allow it to dry thoroughly.
- Remove the closure of the exhaust system.

### Warning

**Danger of accidents** Moisture and dirt impair the brake system.

- Brake carefully several times to dry out and remove dirt from the brake linings and the brake discs.

- After cleaning, ride the vehicle a short distance until the engine warms up.

### Info

The heat produced causes water at inaccessible locations in the engine and on the brake system to evaporate.

- After the motorcycle has cooled off, lubricate all moving parts and bearings.
- Clean the chain. (📖 p. 62)
- Treat bare metal (except for brake discs and the exhaust system) with a corrosion inhibitor.

Preserving materials for paints, metal and rubber (📖 p. 117)


- Treat all plastic parts and powder-coated parts with a mild cleaning and care product.
- Grease steering lock.

Universal oil spray (📖 p. 117)



## 19.2 Checks and maintenance steps for winter operation

- i Info**  
 If you use the vehicle in winter, you must expect salt on the roads. You should therefore take precautions against aggressive road salt.  
 If the vehicle was operated in road salt, clean it with cold water after riding. Warm water would enhance the corrosive effects of salt.

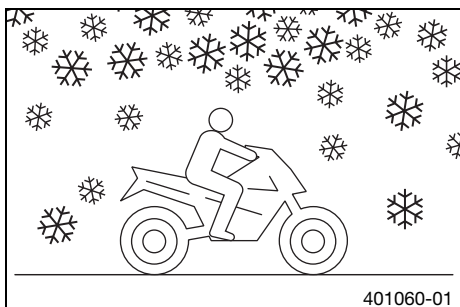

- Clean the motorcycle. (🗨️ p. 105)
- Clean the brake system.

- i Info**  
 After **EVERY** trip on salted roads, thoroughly wash the brake calipers and brake linings, in the cooled down and installed state, with cold water and dry carefully.  
 After riding on salted roads, thoroughly wash the vehicle with cold water and dry it well.

- Treat the engine, swingarm, and all other bright and zinc-plated parts (except for the brake discs) with a wax-based corrosion inhibitor.

- i Info**  
 Corrosion inhibitor is not permitted to come in contact with the brake discs as this would greatly reduce the braking force.

- Clean the chain. (🗨️ p. 62)

## 20.1 Storage



### Warning


**Danger of poisoning** Fuel is poisonous and a health hazard.

- Avoid skin, eye and clothing contact with fuel.
- Immediately consult a doctor if you swallow fuel.
- Do not inhale fuel vapors.
- In case of skin contact, rinse the affected area with plenty of water.
- Rinse the eyes thoroughly with water, and consult a doctor in case of fuel contact with the eyes.
- Change your clothing in case of fuel spills on them.
- Keep fuels correctly in a suitable canister, and out of the reach of children.



### Info

If you plan to garage the motorcycle for a longer period, perform the following steps or have them performed. Before storing the motorcycle, check all parts for function and wear. If service, repairs, or replacements are necessary, you should do this during the storage period (less workshop overload). In this way, you can avoid long workshop waiting times at the start of the new season.

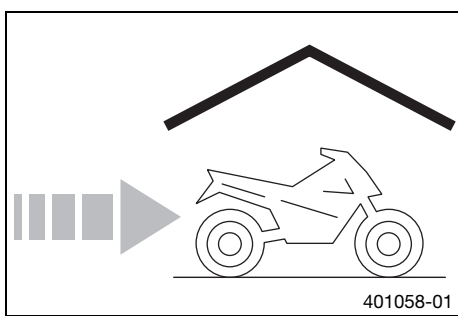

- When refueling for the last time before taking the motorcycle out of service, add fuel additive.
- Refuel. (📖 p. 33)
- Clean the motorcycle. (📖 p. 105)
- Change the engine oil and oil filter, clean the oil screen. 🛠️ (📖 p. 102)
- Check the antifreeze and coolant level. (📖 p. 93)
- Check the tire air pressure. (📖 p. 82)
- Remove the battery. 🛠️ (📖 p. 84)
- Recharge the battery. 🛠️ (📖 p. 85)

#### Guideline

Storage temperature of battery without direct sunshine	0... 35 °C (32... 95 °F)
--	--------------------------

- Store the vehicle in a dry location that is not subject to large fluctuations in temperature.



### Info

Husqvarna Motorcycles recommends raising the motorcycle.


- Raise the motorcycle with a lift stand. (📖 p. 44)
- Preferably cover the vehicle with a tarp or similar cover that is permeable to air. Do not use non-porous materials since they prevent humidity from escaping, thus causing corrosion.



### Info

Avoid running the engine for a short time only. Since the engine cannot warm up properly, the water vapor produced during combustion condenses and causes valves and the exhaust system to rust.

## 20.2 Preparing for use after storage

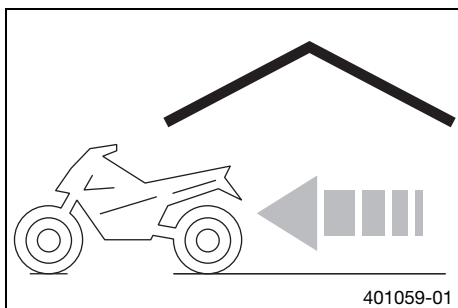

- Remove the motorcycle from the lift stand. (📖 p. 44)
- Install the battery. 🛠️ (📖 p. 84)
- Perform checks and maintenance measures when preparing for use. (📖 p. 29)
- Take a test ride.

Faults	Possible cause	Action
The engine cannot be cranked (electric starter)	Operating error	– Carry out the start procedure. (📖 p. 29)
	Battery is discharged	– Recharge the battery. 🛠️ (📖 p. 85) – Check the charging voltage. 🛠️ – Check the closed current. 🛠️ – Check the stator winding of the alternator. 🛠️
	Main fuse blown	– Change the main fuse. (📖 p. 86)
	Starter relay defective	– Check the starter relay. 🛠️
	Starter motor defective	– Check the starter motor. 🛠️
The engine turns but does not start	Operating error	– Carry out the start procedure. (📖 p. 29)
	The plug-in connection of the fuel hose connection is not connected	– Connect the plug-in connection of the fuel line.
	Fuse 1 blown	– Change the fuses of individual power consumers. (📖 p. 87)
	Fuse 4 blown	– Change the fuses of individual power consumers. (📖 p. 87)
	Idle speed is not set correctly	– Adjust the idle speed. 🛠️ (📖 p. 98)
	Spark plug oily or wet	– Clean and dry the spark plug or replace if necessary.
	Electrode distance (plug gap) of spark plug too wide	– Adjust the plug gap. Guideline Spark plug electrode gap 1.0 mm (0.039 in)
	Ignition system defective	– Check the ignition system. 🛠️
	Short-circuit cable in wiring harness frayed, kill switch or emergency OFF switch defective	– Check the wiring harness. (visual check) – Check the electrical system.
	Defect in fuel injection system	– Read out the fault memory using the Husqvarna Motorcycles diagnostics tool. 🛠️
Engine does not speed up	Defect in fuel injection system	– Read out the fault memory using the Husqvarna Motorcycles diagnostics tool. 🛠️
	Ignition system defective	– Ignition coil - check the secondary winding. 🛠️ – Check the spark plug connector. 🛠️ – Check the stator winding of the alternator. 🛠️
Engine has too little power	Air filter heavily contaminated	– Clean the air filter and air filter box. 🛠️ (📖 p. 56)
	Fuel filter is very dirty	– Change the fuel filter. 🛠️
	Fuel screen is very dirty	– Change the fuel screen. 🛠️ (📖 p. 101)
	Defect in fuel injection system	– Read out the fault memory using the Husqvarna Motorcycles diagnostics tool. 🛠️
	Exhaust system leaky, deformed or too little glass fiber yarn filling in main silencer	– Check exhaust system for damage. – Change glass fiber yarn filling in the main silencer. 🛠️ (📖 p. 58)
	Valve clearance too little	– Adjust the valve clearance. 🛠️
	Ignition system defective	– Ignition coil - check the secondary winding. 🛠️ – Check the spark plug connector. 🛠️ – Check the stator winding of the alternator. 🛠️
The engine dies during the trip	Lack of fuel	– Refuel. (📖 p. 33)
	Fuse 1 blown	– Change the fuses of individual power consumers. (📖 p. 87)
	Fuse 4 blown	– Change the fuses of individual power consumers. (📖 p. 87)
Engine overheats	Coolant level low in cooling system	– Check the cooling system for leaks. – Check the coolant level. (📖 p. 94)
	Insufficient airflow	– Switch off engine when stationary.
	Radiator fins very dirty	– Clean radiator fins.

Faults	Possible cause	Action
Engine overheats	Foam formation in cooling system	<ul style="list-style-type: none"> <li>– Drain the coolant. 🛠️ (📖 p. 94)</li> <li>– Refill the coolant. 🛠️ (📖 p. 95)</li> </ul>
	Bent radiator hose	<ul style="list-style-type: none"> <li>– Change the radiator hose. 🛠️</li> </ul>
	Thermostat defective	<ul style="list-style-type: none"> <li>– Check the thermostat. 🛠️</li> </ul> Guideline Opening temperature: 70 °C (158 °F)
	Defect in radiator fan system	<ul style="list-style-type: none"> <li>– Check fuse <b>3</b>.</li> <li>– Check the radiator fan. 🛠️</li> </ul>
Malfunction indicator lamp lights up or flashes	Defect in fuel injection system	<ul style="list-style-type: none"> <li>– Stop the motorcycle and identify the faulty part using the blink code.</li> <li>– Check the cabling for damage and the electrical plug-in connectors for corrosion and damage.</li> <li>– Read out the fault memory using the Husqvarna Motorcycles diagnostics tool. 🛠️</li> </ul>
High oil consumption	Engine vent hose bent	<ul style="list-style-type: none"> <li>– Route the vent hose without bends or replace it if necessary.</li> </ul>
	Engine oil level too high	<ul style="list-style-type: none"> <li>– Check the engine oil level. (📖 p. 101)</li> </ul>
	Engine oil too thin (low viscosity)	<ul style="list-style-type: none"> <li>– Change the engine oil and oil filter, clean the oil screen. 🛠️ (📖 p. 102)</li> </ul>
	Piston and cylinder worn	<ul style="list-style-type: none"> <li>– Measure the piston/cylinder mounting clearance. 🛠️</li> </ul>
Battery discharged	Battery is not being charged by alternator	<ul style="list-style-type: none"> <li>– Check the charging voltage. 🛠️</li> <li>– Check the stator winding of the alternator. 🛠️</li> </ul>
	Undesired power consumer	<ul style="list-style-type: none"> <li>– Check the closed current. 🛠️</li> </ul>
Speedometer values deleted (time, stop watch, lap times)	The battery in the speedometer is discharged	<ul style="list-style-type: none"> <li>– Change the speedometer battery. (📖 p. 91)</li> </ul>
The high beam, low beam, tail light, parking light, and license plate lamp are not working	Fuse <b>2</b> blown	<ul style="list-style-type: none"> <li>– Change the fuses of individual power consumers. (📖 p. 87)</li> </ul>
The speedometer, horn, brake light, turn signal, and radiator fan are not working	Fuse <b>3</b> blown	<ul style="list-style-type: none"> <li>– Change the fuses of individual power consumers. (📖 p. 87)</li> </ul>

## 22.1 Engine

Design	1-cylinder 4-stroke engine, water-cooled
Displacement	249.91 cm <sup>3</sup> (15.2505 cu in)
Stroke	52.3 mm (2.059 in)
Bore	78 mm (3.07 in)
Compression ratio	12.8:1
Control	DOHC, four valves controlled via cam lever, drive via timing chain
Valve diameter, intake	32.5 mm (1.28 in)
Valve diameter, exhaust	26.5 mm (1.043 in)
Valve clearance	
Intake at: 20 °C (68 °F)	0.10... 0.15 mm (0.0039... 0.0059 in)
Exhaust at: 20 °C (68 °F)	0.13... 0.18 mm (0.0051... 0.0071 in)
Crankshaft bearing	2 cylinder bearings
Conrod bearing	Slide bearing
Piston pin bearing	Bearing bush
Pistons	Forged light alloy
Piston rings	1 compression ring, 1 oil scraper ring
Engine lubrication	Pressure circulation lubrication with two Eaton pumps
Primary transmission	24:73
Clutch	Multidisc clutch in oil bath/hydraulically activated
Gearbox	6-gear, claw shifted
Transmission ratio	
First gear	13:32
Second gear	16:30
Third gear	16:24
Fourth gear	23:28
Fifth gear	23:23
Sixth gear	26:20
Alternator	12 V, 168 W
Ignition	Contactless controlled fully electronic ignition with digital ignition adjustment
Spark plug	NGK LMAR9AI-10
Spark plug electrode gap	1.0 mm (0.039 in)
Cooling	Water cooling, permanent circulation of coolant by water pump
Starting aid	Electric starter

## 22.2 Engine tightening torques

Nozzle, crank chamber ventilation	M4	2 Nm (1.5 lbf ft)	<b>Loctite® 243™</b>
Oil nozzle for alternator cooling	M4	2 Nm (1.5 lbf ft)	<b>Loctite® 243™</b>
Oil nozzle for balancer shaft lubrication	M4	2 Nm (1.5 lbf ft)	<b>Loctite® 243™</b>
Oil nozzle for clutch lubrication	M4	2 Nm (1.5 lbf ft)	<b>Loctite® 243™</b>
Oil nozzle for conrod bearing lubrication	M4	2 Nm (1.5 lbf ft)	<b>Loctite® 243™</b>
Screw, oil nozzle for piston cooling	M4	2 Nm (1.5 lbf ft)	<b>Loctite® 243™</b>
Locking screw for bearing	M5	6 Nm (4.4 lbf ft)	<b>Loctite® 243™</b>
Oil channel screw plug in alternator cover	M5	1.2 Nm (0.89 lbf ft)	<b>Loctite® 648™</b>
Oil nozzle for cam lever lubrication	M5	3 Nm (2.2 lbf ft)	<b>Loctite® 243™</b>
Oil nozzle, piston cooling	M5	2 Nm (1.5 lbf ft)	<b>Loctite® 243™</b>

Screw, bearing bolt, oil pump idler gear	M5	6 Nm (4.4 lbf ft)	Loctite® 243™
Screw, clutch spring	M5	6 Nm (4.4 lbf ft)	–
Screw, crankshaft position sensor	M5	6 Nm (4.4 lbf ft)	Loctite® 243™
Screw, gear position sensor	M5	5 Nm (3.7 lbf ft)	Loctite® 243™
Screw, locking lever	M5	6 Nm (4.4 lbf ft)	Loctite® 243™
Screw, oil pump cover	M5	6 Nm (4.4 lbf ft)	Loctite® 243™
Screw, stator	M5	6 Nm (4.4 lbf ft)	Loctite® 243™
Nut, cylinder head	M6	10 Nm (7.4 lbf ft)	Lubricated with engine oil
Nut, water-pump wheel	M6	5 Nm (3.7 lbf ft)	Loctite® 243™
Screw, alternator cover	M6	10 Nm (7.4 lbf ft)	–
Screw, clutch cover	M6	10 Nm (7.4 lbf ft)	–
Screw, clutch slave cylinder	M6	10 Nm (7.4 lbf ft)	–
Screw, engine case	M6	10 Nm (7.4 lbf ft)	–
Screw, exhaust flange	M6	10 Nm (7.4 lbf ft)	Loctite® 243™
Screw, oil filter cover	M6	10 Nm (7.4 lbf ft)	–
Screw, shift drum locating	M6	10 Nm (7.4 lbf ft)	Loctite® 243™
Screw, shift lever	M6	14 Nm (10.3 lbf ft)	Loctite® 243™
Screw, starter motor	M6	10 Nm (7.4 lbf ft)	–
Screw, timing chain guide rail	M6	10 Nm (7.4 lbf ft)	Loctite® 243™
Screw, timing chain securing guide	M6	10 Nm (7.4 lbf ft)	Loctite® 243™
Screw, valve cover	M6	8 Nm (5.9 lbf ft)	–
Screw, water pump cover	M6	10 Nm (7.4 lbf ft)	–
Stud, cylinder head	M6	10 Nm (7.4 lbf ft)	–
Screw, camshaft bearing bridge	M7x1	14 Nm (10.3 lbf ft)	Lubricated with engine oil
Screw plug, crankshaft location	M8	10 Nm (7.4 lbf ft)	–
Screw, timing chain tensioning rail	M8	15 Nm (11.1 lbf ft)	Loctite® 243™
Screw, engine sprocket	M10	60 Nm (44.3 lbf ft)	Loctite® 2701™
Plug, oil channel	M10x1	15 Nm (11.1 lbf ft)	Loctite® 243™
Rotor screw	M10x1	70 Nm (51.6 lbf ft)	Thread, oiled with engine oil/cone degreased
Screw plug, cam lever axis	M10x1	10 Nm (7.4 lbf ft)	–
Screw, unlocking of timing chain tensioner	M10x1	8 Nm (5.9 lbf ft)	–
Spark plug	M10x1	10... 12 Nm (7.4... 8.9 lbf ft)	–
Engine coolant temperature sensor	M10x1.25	12 Nm (8.9 lbf ft)	–
Nut, cylinder head	M10x1.25	Tightening sequence: Tighten diagonally. 1st tightening stage 10 Nm (7.4 lbf ft) 2nd tightening stage 30 Nm (22.1 lbf ft) 3rd tightening stage 50 Nm (36.9 lbf ft)	Thread, oiled with engine oil/cone greased
Stud, cylinder head	M10x1.25	20 Nm (14.8 lbf ft)	Loctite® 243™
Oil drain plug with magnet	M12x1.5	20 Nm (14.8 lbf ft)	–
Plug, oil pressure regulator valve	M12x1.5	20 Nm (14.8 lbf ft)	–
Oil drain plug	M14x1.5	15 Nm (11.1 lbf ft)	–
Nut, inner clutch hub	M18x1.5	100 Nm (73.8 lbf ft)	Loctite® 243™
Nut, primary gear	M18LHx1.5	100 Nm (73.8 lbf ft)	Loctite® 243™
Screw plug, oil screen	M20x1.5	15 Nm (11.1 lbf ft)	–
Plug, timing chain tensioner	M24x1.5	40 Nm (29.5 lbf ft)	–
Screw, alternator cover	M24x1.5	18 Nm (13.3 lbf ft)	–

## 22.3 Capacities

### 22.3.1 Engine oil

Engine oil	1.0 l (1.1 qt.)	Engine oil (SAE 10W/50) (📖 p. 116)
------------	-----------------	------------------------------------

### 22.3.2 Coolant

Coolant	1.2 l (1.3 qt.)	Coolant (📖 p. 116)
---------	-----------------	--------------------

### 22.3.3 Fuel

Total fuel tank capacity, approx.	8.5 l (2.25 US gal)	Super unleaded (ROZ 95/RON 95/PON 91) (📖 p. 116)
-----------------------------------	---------------------	--

Fuel reserve, approx.	1.5 l (1.6 qt.)	
-----------------------	-----------------	--

## 22.4 Chassis

Frame	Central tube frame made of chrome molybdenum steel tubing	
Fork	<b>WP Performance SystemsXplor 48</b>	
Suspension travel		
Front	300 mm (11.81 in)	
Rear	330 mm (12.99 in)	
Fork offset	22 mm (0.87 in)	
Shock absorber	<b>WP Performance Systems 5018 DCC Link</b>	
Brake system	Disc brakes, brake calipers on floating bearings	
Brake discs - diameter		
Front	260 mm (10.24 in)	
Rear	220 mm (8.66 in)	
Brake discs - wear limit		
Front	2.5 mm (0.098 in)	
Rear	3.5 mm (0.138 in)	
Tire air pressure off road		
Front	1.0 bar (15 psi)	
Rear	1.0 bar (15 psi)	
Road tire pressure		
Front	1.5 bar (22 psi)	
Rear	1.5 bar (22 psi)	
Final drive	14:52 (13:52)	
Chain	5/8 x 1/4"	
Rear sprockets available	48, 50, 52	
Steering head angle	63.5°	
Wheelbase	1,495±10 mm (58.86±0.39 in)	
Seat height unloaded	970 mm (38.19 in)	
Ground clearance unloaded	370 mm (14.57 in)	
Weight without fuel, approx.	103.2 kg (227.5 lb.)	
Maximum permissible front axle load	145 kg (320 lb.)	
Maximum permissible rear axle load	190 kg (419 lb.)	
Maximum permissible overall weight	335 kg (739 lb.)	



## 22.5 Electrical system

Battery	HJTZ5S-FP	Lithium-ion battery Battery voltage: 12 V Nominal capacity: 2.0 Ah Maintenance-free
Speedometer battery	CR 2032	Battery voltage: 3 V
Fuse	58011109105	5 A
Fuse	75011088010	10 A
Fuse	58011109120	20 A
Headlight	HS1/socket PX43t	12 V 35/35 W
Parking light	W5W / socket W2.1x9.5d	12 V 5 W
Indicator lamps	W2.3W / socket W2x4.6d	12 V 2.3 W
Turn signal	R10W / socket BA15s	12 V 10 W
Brake/tail light	LED	
License plate lamp	LED	

## 22.6 Tires

Front tires	Rear tires
<b>90/90 - 21 M/C 54M M+S TT</b> Metzeler MCE 6 Days Extreme	<b>140/80 - 18 M/C 70M M+S TT</b> Metzeler MCE 6 Days Extreme
The tires specified represent one of the possible series production tires. Additional information is available in the Service section under: <a href="http://www.husqvarna-motorcycles.com">www.husqvarna-motorcycles.com</a>	

## 22.7 Fork

Fork part number	14.15.8Q.67
Fork	<b>WP Performance SystemsXplor 48</b>
Compression damping	
Comfort	18 clicks
Standard	15 clicks
Sport	12 clicks
Rebound damping	
Comfort	18 clicks
Standard	15 clicks
Sport	12 clicks
Spring preload - <b>Preload Adjuster</b>	
Comfort	<b>+0</b>
Standard	<b>+0</b>
Sport	<b>+3</b>
Spring length with preload spacer(s)	
Weight of rider: 65... 75 kg (143... 165 lb.)	477 mm (18.78 in)
Weight of rider: 75... 85 kg (165... 187 lb.)	475 mm (18.7 in)
Weight of rider: 85... 95 kg (187... 209 lb.)	477 mm (18.78 in)
Spring rate	
Weight of rider: 65... 75 kg (143... 165 lb.)	4.2 N/mm (24 lb/in)
Weight of rider: 75... 85 kg (165... 187 lb.)	4.4 N/mm (25.1 lb/in)
Weight of rider: 85... 95 kg (187... 209 lb.)	4.6 N/mm (26.3 lb/in)
Fork length	932 mm (36.69 in)
Air chamber length	110 <sup>+10</sup> <sub>-20</sub> mm (4.33 <sup>+0.39</sup> <sub>-0.79</sub> in)

Fork oil per fork leg	610 ml (20.62 fl. oz.)	Fork oil (SAE 4) (48601166S1) (📖 p. 116)
-----------------------	------------------------	--

## 22.8 Shock absorber

Shock absorber article number	18.15.7Q.67
Shock absorber	<b>WP Performance Systems 5018 DCC Link</b>
Compression damping, low-speed	
Comfort	17 clicks
Standard	15 clicks
Sport	13 clicks
Compression damping, high-speed	
Comfort	2.5 turns
Standard	2 turns
Sport	1.5 turns
Rebound damping	
Comfort	17 clicks
Standard	15 clicks
Sport	13 clicks
Spring preload	10 mm (0.39 in)
Spring rate	
Weight of rider: 65... 75 kg (143... 165 lb.)	42 N/mm (240 lb/in)
Weight of rider: 75... 85 kg (165... 187 lb.)	45 N/mm (257 lb/in)
Weight of rider: 85... 95 kg (187... 209 lb.)	48 N/mm (274 lb/in)
Spring length	260 mm (10.24 in)
Gas pressure	10 bar (145 psi)
Static sag	35 mm (1.38 in)
Riding sag	110 mm (4.33 in)
Fitted length	477 mm (18.78 in)
Shock absorber oil	Shock absorber fluid (SAE 2.5) (50180751S1) (📖 p. 116)

## 22.9 Chassis tightening torques

Screw, intake air temperature sensor	<b>EJOT PT®</b> K50x18	1 Nm (0.7 lbf ft)	–
Screw, pressure regulator	<b>EJOT PT®</b> K60x25-Z	2 Nm (1.5 lbf ft)	–
Screw, fixed grip	M4	5 Nm (3.7 lbf ft)	<b>Loctite® 243™</b>
Spoke nipple, front wheel	M4.5	6 Nm (4.4 lbf ft)	–
Spoke nipple, rear wheel	M4.5	6 Nm (4.4 lbf ft)	–
Remaining nuts, chassis	M5	5 Nm (3.7 lbf ft)	–
Remaining screws, chassis	M5	5 Nm (3.7 lbf ft)	–
Screw, battery terminal	M5	2.5 Nm (1.84 lbf ft)	–
Screw, shock absorber adjusting ring	M5	5 Nm (3.7 lbf ft)	–
Nut, cable on starter motor	M6	4 Nm (3 lbf ft)	–
Remaining nuts, chassis	M6	10 Nm (7.4 lbf ft)	–
Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)	–
Screw, ball joint of push rod on foot brake cylinder	M6	10 Nm (7.4 lbf ft)	<b>Loctite® 243™</b>
Screw, chain sliding guard	M6	6 Nm (4.4 lbf ft)	<b>Loctite® 243™</b>
Screw, front brake disc	M6	14 Nm (10.3 lbf ft)	<b>Loctite® 243™</b>
Screw, rear brake disc	M6	14 Nm (10.3 lbf ft)	<b>Loctite® 243™</b>
Screw, throttle grip	M6	5 Nm (3.7 lbf ft)	–
Fuel connection on fuel pump	M8	10 Nm (7.4 lbf ft)	–
Nut, foot brake lever stop	M8	20 Nm (14.8 lbf ft)	–
Nut, rear sprocket screw	M8	35 Nm (25.8 lbf ft)	<b>Loctite® 2701™</b>

Nut, rim lock	M8	12 Nm (8.9 lbf ft)	–
Remaining nuts, chassis	M8	25 Nm (18.4 lbf ft)	–
Remaining screws, chassis	M8	25 Nm (18.4 lbf ft)	–
Screw, bottom triple clamp	M8	12 Nm (8.9 lbf ft)	–
Screw, chain sliding piece	M8	15 Nm (11.1 lbf ft)	–
Screw, engine brace	M8	25 Nm (18.4 lbf ft)	<b>Loctite® 2701™</b>
Screw, fork stub	M8	15 Nm (11.1 lbf ft)	–
Screw, front brake caliper	M8	25 Nm (18.4 lbf ft)	<b>Loctite® 243™</b>
Screw, handlebar clamp	M8	20 Nm (14.8 lbf ft)	–
Screw, manifold	M8	15 Nm (11.1 lbf ft)	–
Screw, side stand attachment	M8	35 Nm (25.8 lbf ft)	<b>Loctite® 2701™</b>
Screw, subframe	M8x20	30 Nm (22.1 lbf ft)	<b>Loctite® 2701™</b>
Screw, subframe	M8x30	30 Nm (22.1 lbf ft)	<b>Loctite® 2701™</b>
Screw, top steering stem	M8	20 Nm (14.8 lbf ft)	<b>Loctite® 243™</b>
Screw, top triple clamp	M8	17 Nm (12.5 lbf ft)	–
Engine attachment bolt	M10	60 Nm (44.3 lbf ft)	–
Remaining nuts, chassis	M10	45 Nm (33.2 lbf ft)	–
Remaining screws, chassis	M10	45 Nm (33.2 lbf ft)	–
Screw, bottom shock absorber	M10	60 Nm (44.3 lbf ft)	<b>Loctite® 2701™</b>
Screw, handlebar holder	M10	40 Nm (29.5 lbf ft)	<b>Loctite® 243™</b>
Screw, top shock absorber	M10	60 Nm (44.3 lbf ft)	<b>Loctite® 2701™</b>
Nut, fuel pump fixation	M12	15 Nm (11.1 lbf ft)	–
Nut, angle lever on swingarm	M14x1.5	80 Nm (59 lbf ft)	–
Nut, frame on linkage lever	M14x1.5	80 Nm (59 lbf ft)	–
Nut, linkage lever on angle lever	M14x1.5	80 Nm (59 lbf ft)	–
Nut, swingarm pivot	M16x1.5	100 Nm (73.8 lbf ft)	–
Nut, rear wheel spindle	M20x1.5	80 Nm (59 lbf ft)	–
Screw, front wheel spindle	M20x1.5	35 Nm (25.8 lbf ft)	–
Screw, top steering head	M20x1.5	12 Nm (8.9 lbf ft)	–
Screw-in nozzles, cooling system	M20x1.5	12 Nm (8.9 lbf ft)	<b>Loctite® 243™</b>

**Brake fluid DOT 4****Standard/classification**

- DOT

**Guideline**

- Use only brake fluid that complies with the specified standard (see specifications on the container) and that possesses the corresponding properties.

**Recommended supplier****Bel-Ray®**

- **Super DOT 4 Brake Fluid**

**Coolant****Guideline**

- Only use high quality coolant with corrosion inhibitor for aluminum motors (even in countries with high temperatures). Using inferior antifreeze can result in corrosion and foaming.

**Mixture ratio**

Antifreeze protection: -25... -45 °C (-13... -49 °F)	anti-corrosion/antifreeze distilled water
--	---

**Recommended supplier****Bel-Ray®**

- **Moto Chill Racing Coolant**

**Engine oil (SAE 10W/50)****Standard/classification**

- JASO T903 MA (📖 p. 118)
- SAE (📖 p. 118) (SAE 10W/50)

**Guideline**

- Use only engine oils that comply with the specified standards (see specifications on the container) and that possess the corresponding properties.

Synthetic engine oil
----------------------

**Recommended supplier****Bel-Ray®**

- **Works Thumper Racing Synthetic Ester 4T**

**Fork oil (SAE 4) (48601166S1)****Standard/classification**

- SAE (📖 p. 118) (SAE 4)

**Guideline**

- Use only oils that comply with the specified standards (see specifications on the container) and that exhibit the corresponding properties.

**Shock absorber fluid (SAE 2.5) (50180751S1)****Standard/classification**

- SAE (📖 p. 118) (SAE 2.5)

**Guideline**

- Use only oils that comply with the specified standards (see specifications on the container) and that exhibit the corresponding properties.

**Super unleaded (ROZ 95/RON 95/PON 91)****Standard/classification**

- DIN EN 228 (ROZ 95/RON 95/PON 91)

**Guideline**

- Only use unleaded super fuel that matches or is equivalent to the specified fuel grade.
- Fuel with an ethanol content of up to 10 % (E10 fuel) is safe to use.

**Info**

Do **not** use fuel containing methanol (e. g. M15, M85, M100) or more than 10 % ethanol (e. g. E15, E25, E85, E100).

## Air filter cleaning agent

Recommended supplier

Bel-Ray®

- Foam Filter Cleaner & Degreaser

## High viscosity grease

Recommended supplier

SKF®

- LGHB 2

## Long-life grease

Recommended supplier

Bel-Ray®

- Waterproof Grease

## Offroad chain spray

Guideline

Recommended supplier

Bel-Ray®

- Blue Tac Chain Lube

## Oil for foam air filter

Recommended supplier

Bel-Ray®

- Foam Filter Oil

## Preserving materials for paints, metal and rubber

Recommended supplier

Bel-Ray®

- Silicone Detailer & Protectant Spray

## Universal oil spray

Recommended supplier

Bel-Ray®

- 6 in 1

## **JASO T903 MA**

Different technical development directions required a new specification for 4-stroke motorcycles – the JASO T903 MA Standard. Earlier, engine oils from the automobile industry were used for 4-stroke motorcycles because there was no separate motorcycle specification. Whereas long service intervals are demanded for automobile engines, high performance at high engine speeds are in the foreground for motorcycle engines. In most motorcycles, the gearbox and the clutch are lubricated with the same oil as the engine. The JASO MA Standard meets these special requirements.

## **SAE**

The SAE viscosity classes were defined by the Society of Automotive Engineers and are used for classifying oils according to their viscosity. The viscosity describes only one property of oil and says nothing about quality.

OBD	On-board diagnosis	Vehicle system that monitors emission- and safety-related values
-----	--------------------	--





## 27 LIST OF ABBREVIATIONS

Art. no.	Article number
ca.	circa
cf.	compare
e.g.	for example
etc.	et cetera
i.a.	inter alia
no.	number
poss.	possibly



## 28.1 Yellow and orange symbols

Yellow and orange symbols indicate an error condition that requires prompt intervention. Active driving aids are also represented by yellow or orange symbols.

	Malfunction indicator lamp lights up/ flashes yellow – The OBD has detected an emission- or safety-critical fault.
	The fuel level warning lamp lights up yellow – The fuel level has reached the reserve mark.

## 28.2 Green and blue symbols

Green and blue symbols reflect information.

	The high beam indicator lamp lights up blue – The high beam is switched on.
	Turn signal indicator lamp flashes green – The turn signal is switched on.

<b>A</b>	
<b>Accessories</b>	9
<b>Air filter</b>	
cleaning	56
installing	56
removing	55
<b>Air filter box</b>	
cleaning	56
sealing	57
<b>Air filter box cover</b>	
installing	55
removing	55
<b>Antifreeze</b>	
checking	93
<b>Auxiliary substances</b>	9
<b>B</b>	
<b>Basic chassis setting</b>	
checking with rider's weight	36
<b>Battery</b>	
installing	84
recharging	85
removing	84
starting power	26
<b>Brake discs</b>	
checking	70
<b>Brake fluid</b>	
of front brake, adding	71
of rear brake, adding	75
<b>Brake fluid level</b>	
front brake, checking	71
rear brake, checking	75
<b>Brake linings</b>	
front brake, checking	72
of front brake, changing	72
of rear brake, changing	77
rear brake, checking	76
<b>Brake system</b>	70-78
<b>C</b>	
<b>Capacity</b>	
coolant	95, 112
engine oil	103, 112
fuel	33, 112
<b>Chain</b>	
checking	64
cleaning	62
<b>Chain guide</b>	
checking	64
<b>Chain tension</b>	
adjusting	63
checking	62
<b>Characteristic map of the throttle response</b>	
adjusting	97
<b>Chassis number</b>	12

<b>Clutch</b>	
fluid level, checking/correcting	67
fluid, changing	68
<b>Clutch lever</b>	14
basic position, adjusting	67
<b>Cold start button</b>	17
<b>Compression damping</b>	
fork, adjusting	40
<b>Compression damping, high-speed</b>	
shock absorber, adjusting	37
<b>Compression damping, low-speed</b>	
shock absorber, adjusting	36
<b>Coolant</b>	
antifreeze and coolant level, checking	93
draining	94
level, checking	94
refilling	95
<b>Cooling system</b>	93
<b>Customer service</b>	9
<b>D</b>	
<b>Diagnostics connector</b>	92
<b>Difficult riding conditions</b>	26
dry sand	27
high temperature	28
low temperature	28
muddy surfaces	28
slow speed	28
snow	28
wet sand	27
wet surfaces	28
<b>E</b>	
<b>Electric starter button</b>	15
<b>Emergency OFF switch</b>	15
<b>Engine</b>	
running-in	26
<b>Engine guard</b>	
installing	69
removing	69
<b>Engine number</b>	12
<b>Engine oil</b>	
adding	104
changing	102
<b>Engine oil level</b>	
checking	101
<b>Engine sprocket</b>	
checking	64
<b>Environment</b>	7
<b>F</b>	
<b>Figures</b>	9
<b>Filler cap</b>	
closing	17
opening	16
<b>Filling up</b>	
fuel	33

**Foot brake lever** . . . . . 18  
     basic position, adjusting . . . . . 74  
     free travel, checking . . . . . 74

**Fork legs**  
     basic setting, checking . . . . . 40  
     bleeding . . . . . 44  
     dust boots, cleaning . . . . . 44  
     installing . . . . . 46  
     removing . . . . . 45  
     spring preload, adjusting . . . . . 41

**Fork protector**  
     installing . . . . . 45  
     removing . . . . . 45

**Frame**  
     checking . . . . . 65

**Front fender, front**  
     installing . . . . . 51  
     removing . . . . . 50

**Front wheel**  
     installing . . . . . 79  
     removing . . . . . 79

**Fuel screen**  
     changing . . . . . 101

**Fuel tank**  
     installing . . . . . 60  
     removing . . . . . 59

**Fuse**  
     individual power consumers, changing . . . . . 87  
     main fuse, changing . . . . . 86

**H**

**Hand brake lever** . . . . . 14  
     free travel, adjusting . . . . . 70  
     free travel, checking . . . . . 70

**Handlebar position** . . . . . 42  
     adjusting . . . . . 42

**Headlight**  
     range, adjusting . . . . . 91

**Headlight adjustment**  
     checking . . . . . 90

**Headlight bulb**  
     changing . . . . . 89

**Headlight mask with headlight**  
     installing . . . . . 89  
     removing . . . . . 88

**Horn button** . . . . . 14

**I**

**Idle speed**  
     adjusting . . . . . 98

**Idle speed adjusting screw** . . . . . 18

**Implied warranty** . . . . . 9

**Indicator lamps overview** . . . . . 16

**Intended use** . . . . . 6

**K**

**Key number** . . . . . 12

**Kill switch** . . . . . 14

**L**

**Launch Control**  
     activating . . . . . 30

**Light switch** . . . . . 15

**Lower triple clamp**  
     installing . . . . . 47  
     removing . . . . . 46

**M**

**Main fuse**  
     changing . . . . . 86

**Main silencer**  
     changing the glass fiber yarn filling . . . . . 58  
     installing . . . . . 58  
     removing . . . . . 58

**Mapping**  
     changing . . . . . 98

**Motorcycle**  
     cleaning . . . . . 105  
     lift stand, raising with . . . . . 44  
     removing from lift stand . . . . . 44

**O**

**Oil filter**  
     changing . . . . . 102

**Oil screen**  
     cleaning . . . . . 102

**Operating substances** . . . . . 9

**Owner's Manual** . . . . . 8

**P**

**Preparing for use**  
     advice on first use . . . . . 25  
     after storage . . . . . 107  
     checks and maintenance measures when preparing for use . . . . . 29

**Protective clothing** . . . . . 7

**R**

**Rear sprocket**  
     checking . . . . . 64

**Rear wheel**  
     installing . . . . . 81  
     removing . . . . . 80

**Rebound damping**  
     fork, adjusting . . . . . 41  
     shock absorber, adjusting . . . . . 37

**Riding sag**  
     adjusting . . . . . 40

**Right side cover**  
     installing . . . . . 57  
     removing . . . . . 57

**Rubber grip**  
     checking . . . . . 66

**S**

**Safe operation** ..... 7

**Seat**

    mounting ..... 54

    removing ..... 54

**Service** ..... 9

**Service schedule** ..... 34-35

**Shift lever** ..... 18

    basic position, adjusting ..... 100

    basic position, checking ..... 99

**Shock absorber**

    installing ..... 52

    removing ..... 51

    riding sag, checking ..... 39

    spring preload, adjusting ..... 39

    static sag, checking ..... 38

**Side stand** ..... 19

**Spare parts** ..... 9

**Speedometer**

    battery, changing ..... 91

    clock, setting ..... 23

    kilometers or miles, setting ..... 22

    message ..... 21

    overview ..... 21

    service display, setting ..... 23

    setting ..... 21

**Spoke tension**

    checking ..... 83

**Starting** ..... 29

**Starting power of lithium-ion batteries at low temperatures** ..... 26

**Steering**

    locking ..... 19

    unlocking ..... 20

**Steering head bearing**

    lubricating ..... 50

**Steering head bearing play**

    adjusting ..... 50

    checking ..... 49

**Storage** ..... 107

**Swingarm**

    checking ..... 66

**T**

**Technical data**

    capacities ..... 112

    chassis ..... 112

    chassis tightening torques ..... 114

    electrical system ..... 113

    engine ..... 110

    engine tightening torques ..... 110

    fork ..... 113

    shock absorber ..... 114

    tires ..... 113

**Throttle cable play**

    adjusting ..... 96

    checking ..... 96

**Throttle cable routing**

    checking ..... 66

**Throttle grip** ..... 14

**Throttle valve position**

    teaching ..... 99

**Tire air pressure**

    checking ..... 82

**Tire condition**

    checking ..... 82

**Traction control**

    activating ..... 30

**Transport** ..... 32

**Troubleshooting** ..... 108-109

**Turn signal bulb**

    changing ..... 90

**Turn signal switch** ..... 15

**Type label** ..... 12

**U**

**Use definition** ..... 6

**V**

**View of vehicle**

    front left ..... 10

    rear right ..... 11

**W**

**Warranty** ..... 9

**Winter operation**

    checks and maintenance steps ..... 106

**Work rules** ..... 7

PIONEERING SINCE 1903



3402099en

07/2016



**Husqvarna**<sup>®</sup>  
MOTORCYCLES

Husqvarna Motorcycles GmbH  
Stallhofnerstraße 3 | 5230 Mattighofen | Austria  
[www.husqvarna-motorcycles.com](http://www.husqvarna-motorcycles.com)



Photo: Mitterbauer,  
Husqvarna Motorcycles GmbH